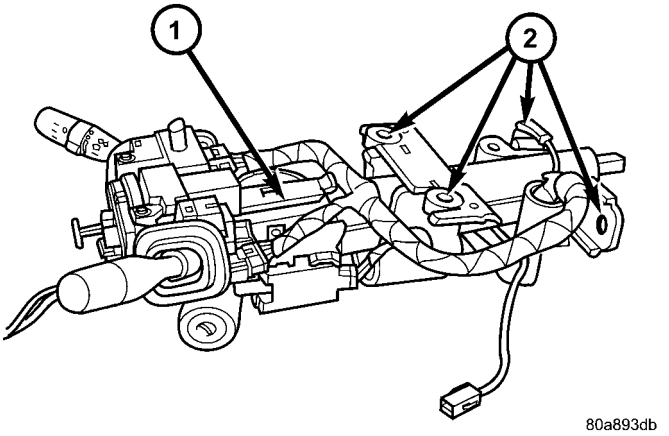

Fig. 5 STEERING COLUMN MOUNTING

1 - Steering Column
2 - Mounting Holes

(9) Remove upper column shroud (Fig. 4).

(10) Disconnect and remove the wiring harness from the column (Fig. 6).

NOTE: If vehicle is equipped with automatic transmission, remove shifter interlock cable from the column. (Refer to 21 - TRANSMISSION/TRANSAXLE/AUTOMATIC - 30RH/GEAR SHIFT CABLE - REMOVAL).

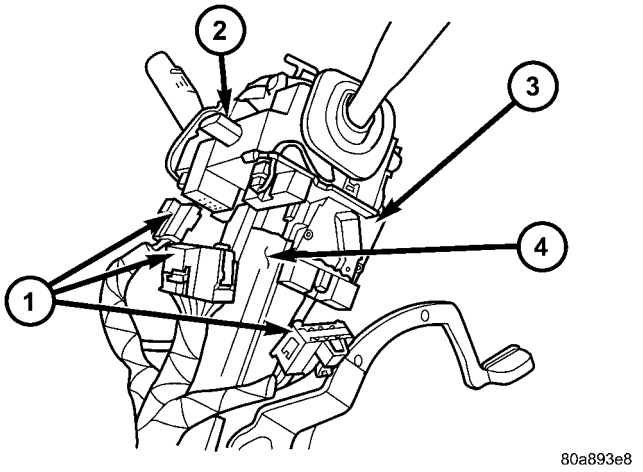

Fig. 6 WIRING HARNESS COLUMN

1 - Column Wiring Harness
2 - Multi-function Switch
3 - Ignition Switch
4 - Steering Column

(11) Remove column.

(12) Remove clock spring (Fig. 7), switches, (SKIM if equipped) (Refer to 8 - ELECTRICAL/RESTRAINTS/CLOCKSPRING - REMOVAL).

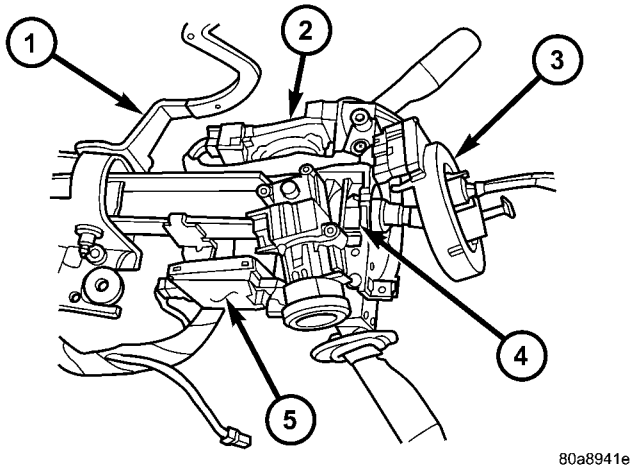

Fig. 7 CLOCK SPRING

1 - Tilt Lever
2 - Ignition Switch
3 - Clockspring
4 - Steering Column
5 - SKIM

INSTALLATION

(1) Align and install column into the steering coupler.

(2) Install column harness and connect harness to switches.

NOTE: If vehicle is equipped with automatic transmission, install shifter interlock cable. (Refer to 21 - TRANSMISSION/TRANSAXLE/AUTOMATIC - 30RH/GEAR SHIFT CABLE - ADJUSTMENTS).

(3) Install the upper column shroud.

(4) Install the column onto the mounting studs.

CAUTION: Lower nuts must be installed and tightened first then the upper nuts in order to prevent damage to the capsules.

(5) Install the lower mounting nuts and tighten to 17 N·m (150 in. lbs.).

(6) Install the upper mounting nuts and tighten to 17 N·m (150 in. lbs.).

(7) Install the steering column coupler bolt and tighten to 49 N·m (36 ft. lbs.).

(8) Center the clock spring (if necessary) and install it on the column, (Refer to 8 - ELECTRICAL/RESTRAINTS/CLOCKSPRING - INSTALLATION).

(9) Install the lower column shroud and install mounting screws.

(10) Install the ignition lock cylinder. (Refer to 19 - STEERING/COLUMN/LOCK CYLINDER HOUSING - INSTALLATION).

(11) Install the knee blocker and the knee blocker cover, (Refer to 23 - BODY/INSTRUMENT PANEL/KNEE BLOCKER - INSTALLATION).