WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO ELECTRICAL - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable. Remove the steering column shrouds. Unplug the key-in ignition switch wire harness connector from the ignition switch.

(2) Check for continuity between the key-in switch sense circuit and the left front door jamb switch sense circuit terminals of the key-in ignition switch. There should be continuity with the key in the ignition cylinder, and no continuity with the key removed from the ignition cylinder. If OK, go to Step 3. If not OK, replace the faulty ignition switch assembly.

(3) Check for continuity between the left front door jamb switch sense circuit cavity of the key-in ignition switch wire harness connector and a good ground. There should be continuity with the driver door open, and no continuity with the driver door closed. If OK, see the diagnosis for Instrument Cluster in this group. If not OK, repair the circuit to the driver door jamb switch as required.

KEY CYLINDER

REMOVAL

The ignition key must be in the key cylinder for cylinder removal. The key cylinder must be removed first before removing ignition switch.

(1) If equipped with an automatic transmission, place shifter in PARK position.

(2) Rotate key to ON position.

(3) A release tang is located on bottom of key cylinder (Fig. 11).

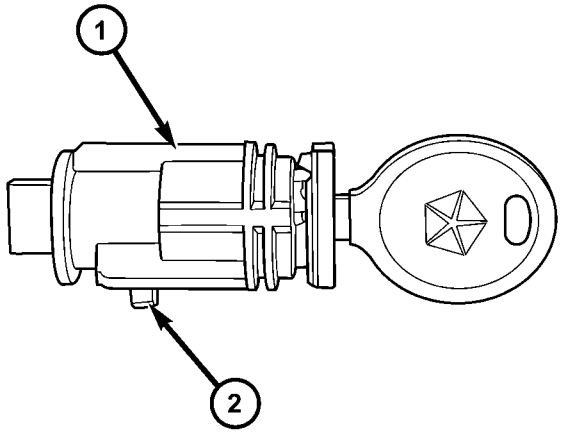

Fig. 11 KEY CYLINDER RELEASE TANG

1 - KEY CYLINDER
2 - RELEASE TANG

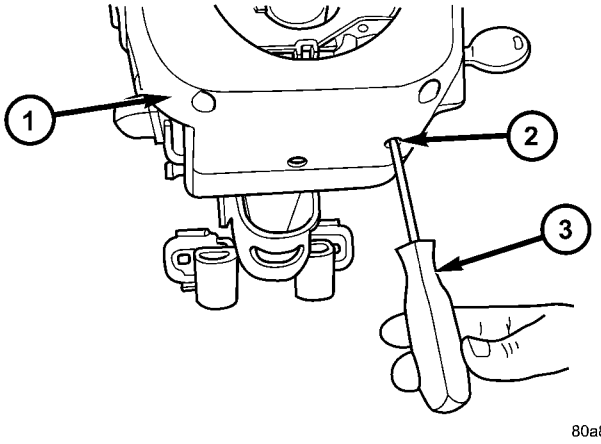

Fig. 12 KEY CYLINDER RELEASE HOLE

1 - Lower Cover
2 - Access Hole
3 - Pin Punch

(4) Position a small screwdriver or pin punch into tang access hole on bottom of steering column lower cover (Fig. 12).

(5) Push the pin punch up while pulling key cylinder from steering column.

INSTALLATION

The ignition key must be in the key cylinder for cylinder installation.

(1) Install the lock cylinder into the housing using care to align the end of the lock cylinder with the ignition switch.

(2) Push the lock cylinder in until it clicks.

(3) Rotate the key to the lock position.