STEERING WHEEL

REMOVAL

(1) Disable and remove the drivers side airbag. (Refer to 8 - ELECTRICAL/RESTRAINTS/DRIVER AIRBAG - REMOVAL).

(2) Partially remove the steering wheel bolt and leave the bolt in the column.

(3) Install puller C-3894–A or equivalent using the top of the bolt to push on. (Fig. 13)

NOTE: Ensure the puller jaws are seated in the pockets (Fig. 14) of the steering wheel armature.

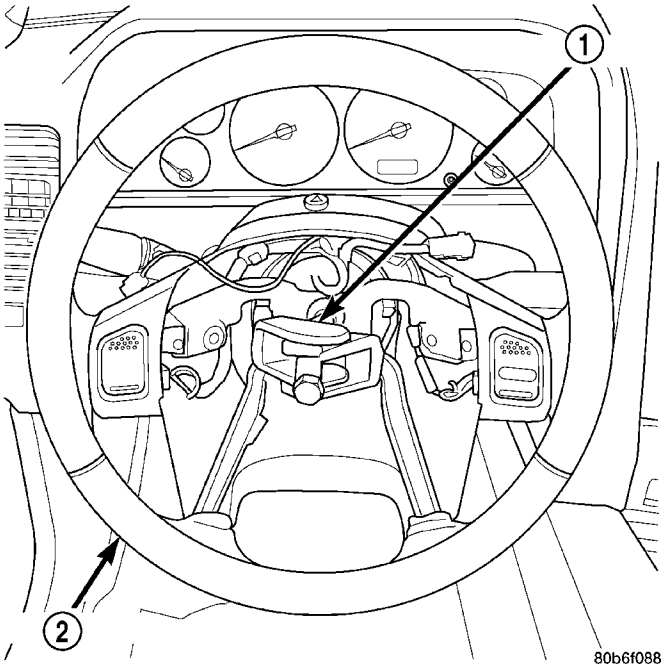

Fig. 13 STEERING WHEEL PULLER

1 - PULLER C-3894-A
2 - STEERING WHEEL

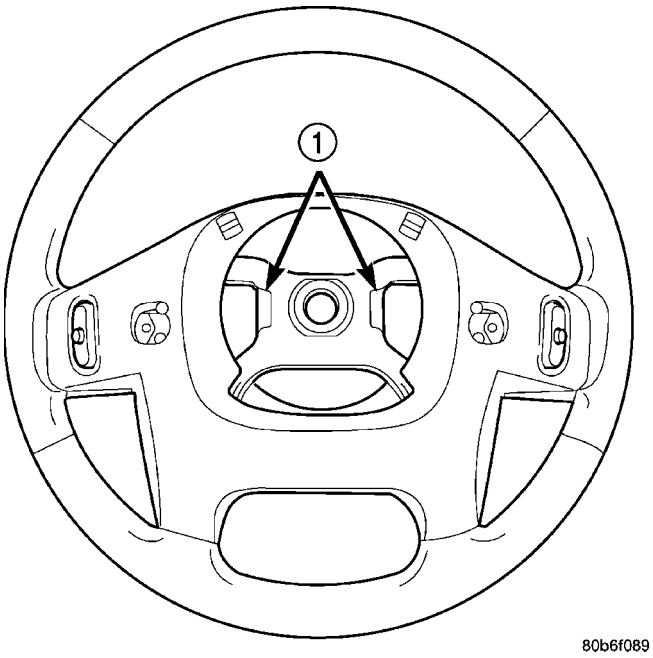

Fig. 14 Steering Wheel Pockets

1 - STEERING WHEEL POCKETS

(4) Remove the steering wheel.

INSTALLATION

NOTE: Do not reuse the old steering wheel bolt (a new bolt must be used)

(1) Install steering wheel to the column

NOTE: Be certain that the steering wheel mounting bolt is tightened to the proper torque specification to ensure proper clockspring operation.

(2) Install the new steering wheel bolt. Tighten the bolt to 54 N·m (40 ft. lbs.).

(3) Install the drivers side air bag. (Refer to 8 - ELECTRICAL/RESTRAINTS/DRIVER AIRBAG - INSTALLATION).