GEAR

TABLE OF CONTENTS

	page
GEAR	
DESCRIPTION	13
OPERATION	14
DIAGNOSIS AND TESTING - POWER STEERING GEAR LEAKAGE AREAS	14
REMOVAL	14
INSTALLATION	15
ADJUSTMENTS	15
SPECIFICATIONS	
POWER STEERING GEAR	16
TORQUE CHART	16
SPECIAL TOOLS	
POWER STEERING GEAR	17

GEAR

DESCRIPTION

CAUTION: MOPAR® ATF+4 is to be used in the power steering system. No other power steering or automatic transmission fluid is to be used in the system. Damage may result to the power steering pump and system if any other fluid is used, and do not overfill.

The power steering system has a hydraulic pump. The pump is a constant flow rate and displacement vane-type pump. The pump reservoir on the 4.0L engine is mounted to the pump body (Fig. 1)& (Fig. 2). The 2.4L engine has a remote pump reservoir mounted to the fan shroud (Fig. 3).

The steering gear used is a straight ratio recirculating ball type gear. A tilt and non-tilt column provide steering input.

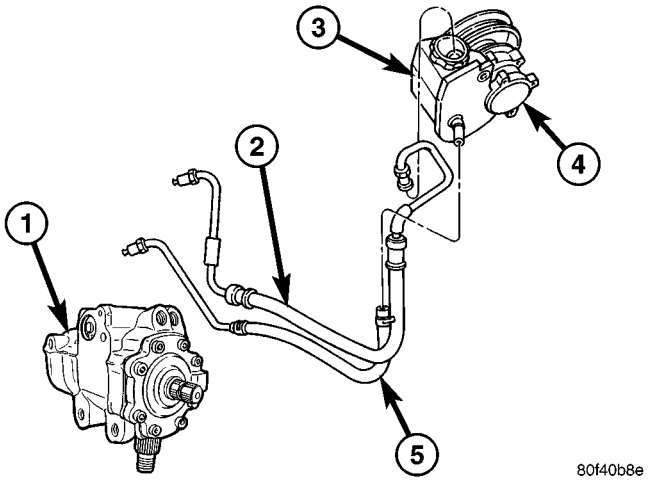

Fig. 1 POWER STEERING GEAR & PUMP - 4.0L

1 - POWER STEERING GEAR
2 - PRESSURE HOSE
3 - POWER STEERING RESERVOIR
4 - POWER STEERING PUMP
5 - RETURN HOSE

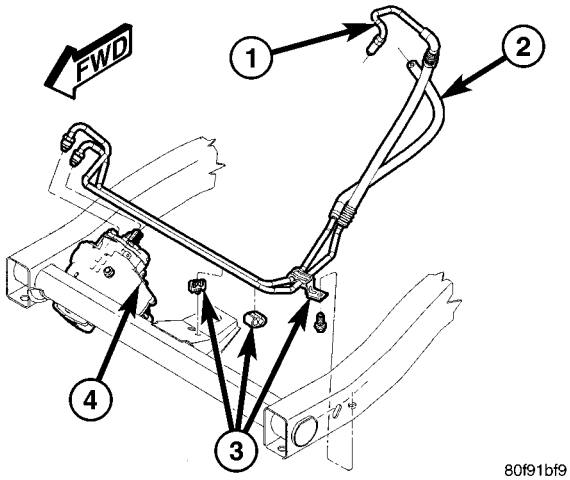

Fig. 2 RHD POWER STEERING HOSES

1 - PRESSURE HOSE
2 - RETURN HOSE
3 - MOUNTING BRACKETS
4 - STEERING GEAR