SPECIAL TOOLS

STEERING LINKAGE

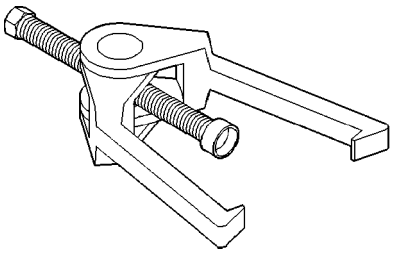

Puller C-3894–A

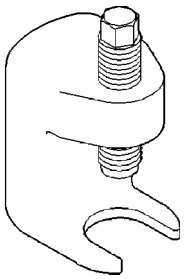

Remover Pitman C-4150A

DAMPER

REMOVAL

(1) Place the front wheels in a straight ahead position.

(2) Remove the steering dampener retaining nut and bolt from the axle bracket (Fig. 1).

(3) Remove the cotter pin and nut from the ball stud at the drag link.

(4) Remove the steering dampener ball stud from the drag link using C-3894-A puller.

INSTALLATION

(1) Install the steering dampener to the axle bracket and drag link.

(2) Install the steering dampener bolt in the axle bracket and tighten nut to 74 N·m (55 ft. lbs.).

(3) Install the ball stud nut at the drag link and tighten nut to 74 N·m (55 ft. lbs.). Install a new cotter pin.

DRAG LINK

REMOVAL

(1) Remove the cotter pins and nuts at the steering knuckle and drag link (Fig. 1).

(2) Remove the steering dampener ball stud from the drag link with a puller tool.

(3) Remove the drag link from the steering knuckle with a puller tool. Remove the same for tie rod and pitman arm.

(4) If necessary, loosen the end clamp bolts and remove the tie rod end from the link.

INSTALLATION

(1) Install the drag link adjustment sleeve and tie rod end. Position clamp bolts (Fig. 3).

(2) Position the drag link at the steering linkage. Install the drag link to the steering knuckle nut. Do the same for the tie rod and pitman arm.

(3) Tighten the nut at the steering knuckle to 47 N·m (35 ft. lbs.). Tighten the pitman nut to 81 N·m (60 ft. lbs.) and tie rod ball stud nut to 47 N·m (35 ft. lbs.). Install new cotter pins and bend end 60°.

(4) Install the steering dampener onto the drag link and tighten the nut to 74 N·m (55 ft. lbs.). Install a new cotter pin and bend end 60°.

PITMAN ARM

REMOVAL

(1) Remove the cotter pin and nut from the drag link at the pitman arm.

(2) Remove the drag link ball stud from the pitman arm with a puller.

(3) Remove the nut and washer from the steering gear shaft. Mark the pitman shaft and pitman arm for installation reference. Remove the pitman arm from steering gear with Puller C-4150A (Fig. 2).

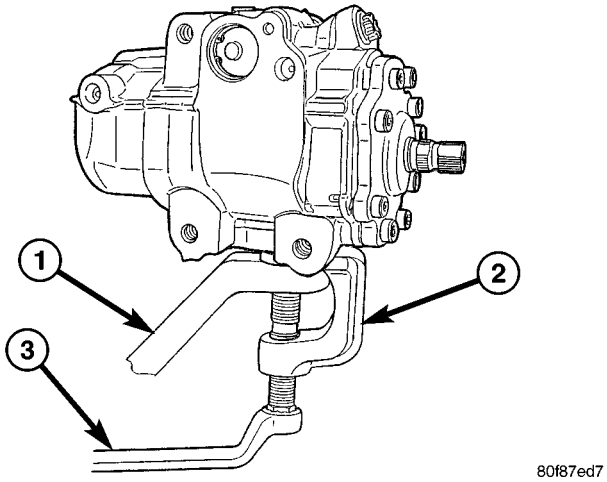

Fig. 2 PITMAN ARM PULLER

1 - PITMAN ARM
2 - SPECIAL TOOL C-4150-A
3 - WRENCH

INSTALLATION

(1) Align and install the pitman arm on steering gear shaft.

(2) Install the washer and nut on the shaft and tighten the nut to 251 N·m (185 ft. lbs.).

(3) Install drag link ball stud to pitman arm. Install nut and tighten to 81 N·m (60 ft. lbs.). Install a new cotter pin.