TIE ROD END

REMOVAL

(1) Remove the cotter pins and nuts at the steering knuckle and drag link (Fig. 1).

(2) Remove the ball studs with puller tool C-4150R.

(3) If necessary, loosen the end clamp bolts and remove the tie rod ends from the tube.

INSTALLATION

(1) If necessary, install the tie rod ends in the tube. Position the tie rod clamp (Fig. 3) and tighten to 27 N·m (20 ft. lbs.).

(2) Install the tie rod on the drag link and steering knuckle.

(3) Tighten the ball stud nut on the steering knuckle to 47 N·m (35 ft. lbs.). Tighten the ball stud nut to drag link to 47 N·m (35 ft. lbs.) torque. Install new cotter pins.

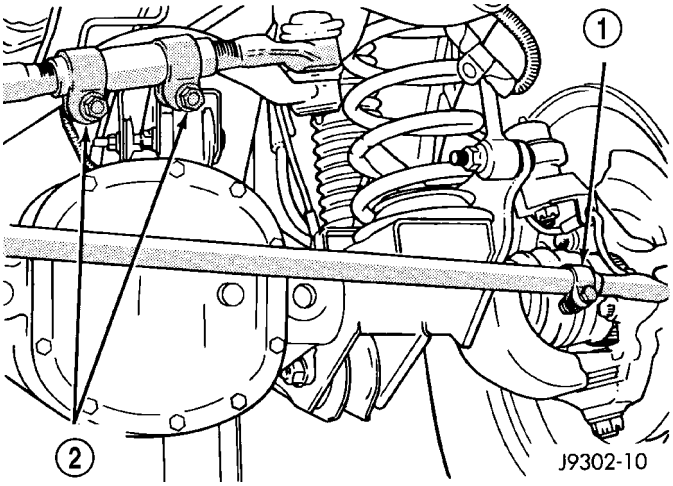

Fig. 3 Tie Rod

1 - TIE ROD CLAMP
2 - DRAG LINK CLAMPS