(8) Stop the engine and check the fluid level and refill as required.

(9) If the fluid is extremely foamy or milky looking, allow the vehicle to stand a few minutes and repeat the procedure.

CAUTION: Do not run a vehicle with foamy fluid for an extended period. This may cause pump damage.

REMOVAL

REMOVAL - 4.0L

(1) Remove serpentine drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(2) Remove pressure and return hoses from pump and drain the pump.

(3) Loosen the pump bracket bolt at the engine block.

(4) Remove 3 pump mounting bolts (Fig. 3) through pulley access holes.

(5) Tilt pump downward and remove from engine.

(6) Remove pulley from pump. (Refer to 19 - STEERING/PUMP/PULLEY - REMOVAL).

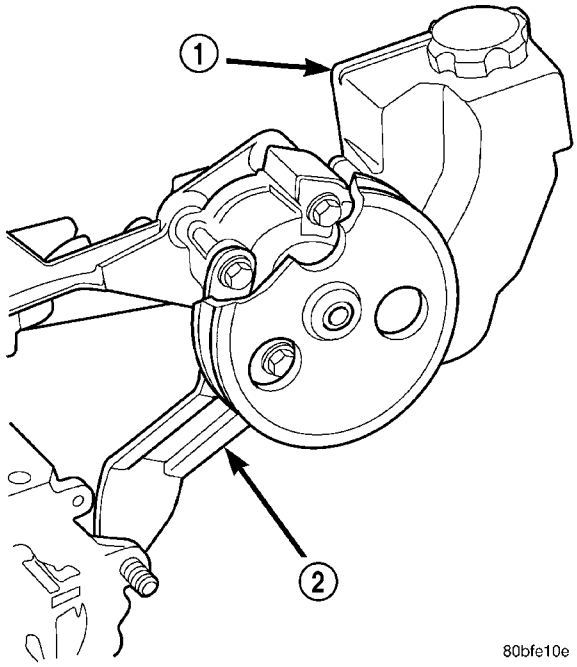

Fig. 3 Pump Mounting – 4.0L

1 - PUMP ASSEMBLY
2 - PUMP BRACKET

REMOVAL - 2.4L

(1) Remove serpentine drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(2) Remove pressure and return hoses from pump and drain the pump.

(3) Remove 3 pump mounting bolts (Fig. 4) through pulley access holes.

(4) Loosen the 3 pump bracket bolts.

(5) Tilt pump downward and remove from engine.

(6) Remove pulley from pump. (Refer to 19 - STEERING/PUMP/PULLEY - REMOVAL).

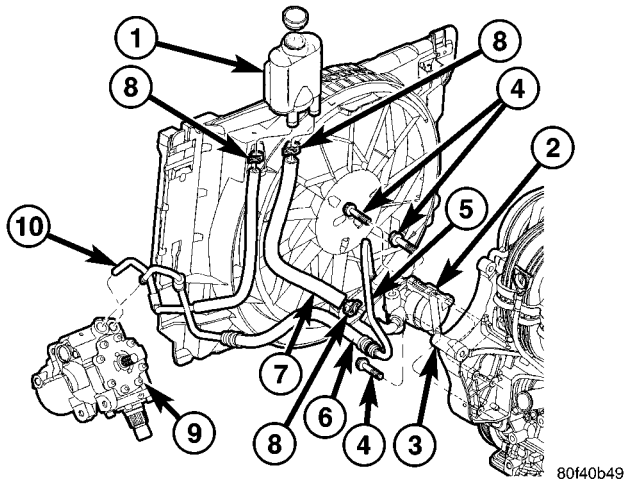

Fig. 4 POWER STEERING GEAR & PUMP - 2.4L

1 - REMOTE RESERVOIR
2 - POWER STEERING PUMP
3 - PUMP MOUNT BRACKET
4 - MOUNTING BOLTS (3)
5 - PRESSURE SWITCH LOCATION
6 - PRESSURE OUTLET HOSE (GEAR TO PUMP)
7 - RETURN HOSE (RESERVOIR TO PUMP)
8 - CLAMPS
9 - STEERING GEAR
10 - INLET HOSE (RESERVOIR TO GEAR)

INSTALLATION

INSTALLATION - 4.0L

(1) Install pulley on pump. (Refer to 19 - STEERING/PUMP/PULLEY - INSTALLATION).

(2) Install pump on the engine mounting bracket.

(3) Install 3 pump mounting bolts and tighten to 27 N·m (20 ft. lbs.).

(4) Tighten pump bracket bolt to 57 N·m (42 ft. lbs.).

(5) Install the pressure line on the pump and tighten to 28 N·m (21 ft. lbs.).

(6) Install return hoses on pump.

(7) Install drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(8) Add power steering fluid, refer to Power Steering Pump Initial Operation. (Refer to 19 - STEERING/PUMP - STANDARD PROCEDURE).

INSTALLATION - 2.4L

(1) Install pulley on pump. (Refer to 19 - STEERING/PUMP/PULLEY - INSTALLATION).

(2) Install pump on the engine mounting bracket.

(3) Tighten pump bracket bolts to 47 N·m (35 ft. lbs.).

(4) Install 3 pump mounting bolts and tighten to 27 N·m (20 ft. lbs.).