(5) Install the pressure line on the pump and tighten to 28 N·m (21 ft. lbs.).
(6) Install return hoses on pump.
(7) Install drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).
(8) Add power steering fluid, refer to Power Steering Pump Initial Operation. (Refer to 19 - STEERING/PUMP - STANDARD PROCEDURE).

## SPECIFICATIONS

### TORQUE CHART

*TORQUE SPECIFICATIONS*

| DESCRIPTION | N·m | Ft. Lbs. | In. Lbs. |
|---|---|---|---|
| Power Steering Pump Bracket to Pump | 28 | 21 | — |
| Power Steering Pump Bracket to 4.0L Engine | 57 | 42 | — |
| Power Steering Pump Bracket to 2.4L Engine | 28 | 21 | — |
| Power Steering Pump Flow Control Valve | 75 | 55 | — |
| Power Steering Pump Pressure Line | 28 | 21 | — |

## SPECIAL TOOLS

### POWER STEERING PUMP

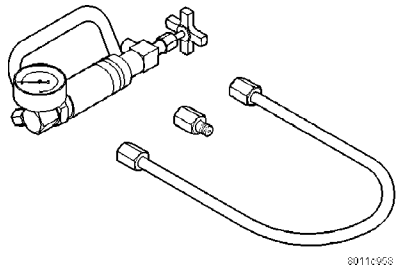

***Analyzer Set, Power Steering Flow/Pressure 6815***

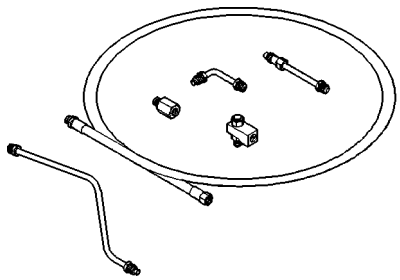

***Adapters, Power Steering Flow/Pressure Tester 6893***

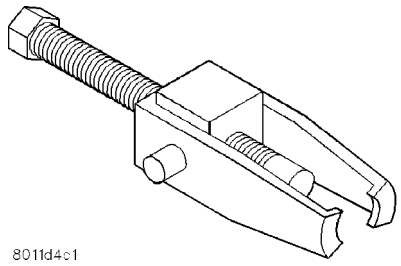


***Puller C-4333***

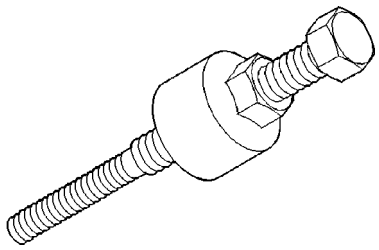

***Installer, Power Steering Pulley C-4063B***

## HOSES

### DESCRIPTION

### DESCRIPTION - PRESSURE LINE

The hose consists of two metal ends and rubber center section that contains a tuning cable.