noise increases, press on 1.0 mm (0.040 in.). **Be careful that pulley does not contact mounting bolts.**

RESERVOIR

REMOVAL

REMOVAL - 4.0L

(1) Remove power steering pump. (Refer to 19 - STEERING/PUMP - REMOVAL).
(2) Clean exterior of pump.
(3) Clamp the pump body in a soft jaw vice.
(4) Pry up tab and slide the retaining clips off (Fig. 8).

NOTE: Use new retaining clips for installation.

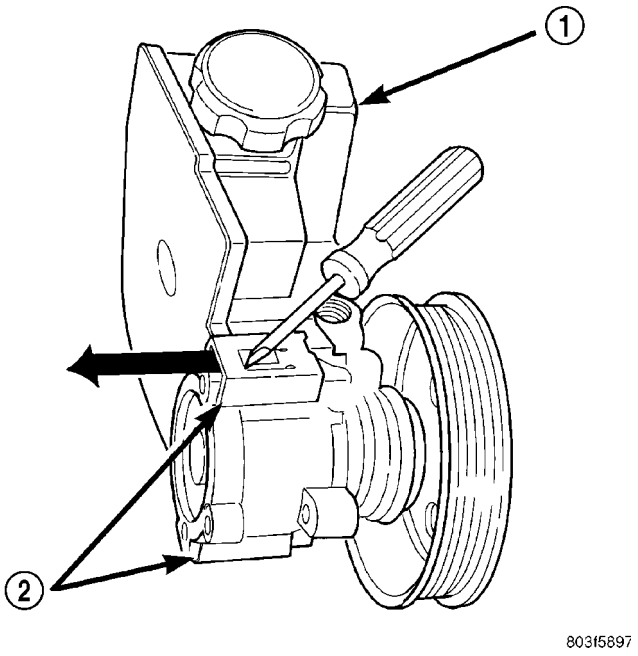

Fig. 8 Pump Reservoir Clips

1 - RESERVOIR
2 - RETAINING CLIPS

(5) Remove fluid reservoir from pump body. Remove and discard O-ring seal.

REMOVAL - 2.4L

(1) Remove the pump return hoses from the reservoir and drain the reservoir.
(2) Remove the push-in fastener from the reservoir (Fig. 9).
(3) Slide the reservoir up out of the fan shroud mount.

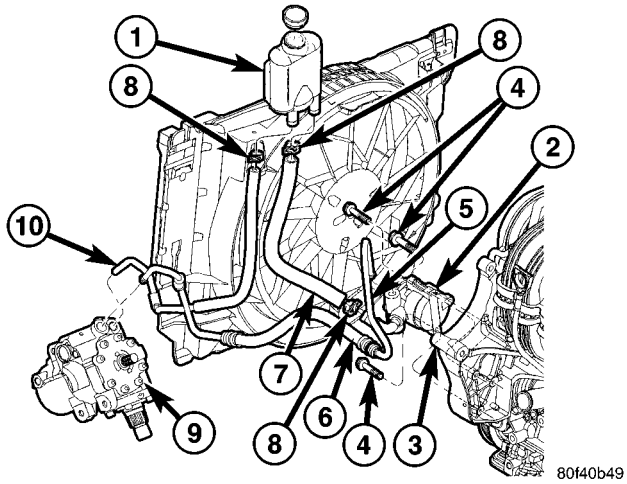

Fig. 9 POWER STEERING GEAR & PUMP - 2.4L

1 - REMOTE RESERVOIR
2 - POWER STEERING PUMP
3 - PUMP MOUNT BRACKET
4 - MOUNTING BOLTS (3)
5 - PRESSURE SWITCH LOCATION
6 - PRESSURE OUTLET HOSE (GEAR TO PUMP)
7 - RETURN HOSE (RESERVOIR TO PUMP)
8 - CLAMPS
9 - STEERING GEAR
10 - INLET HOSE (RESERVOIR TO GEAR)

INSTALLATION

INSTALLATION - 4.0L

(1) Lubricate new O-ring Seal with Mopar Power Steering Fluid or equivalent.
(2) Install O-ring seal in housing.
(3) Install reservoir onto housing.
(4) Slide and tap in **new** reservoir retainer clips until tab locks to housing.
(5) Install power steering pump. (Refer to 19 - STEERING/PUMP - INSTALLATION).
(6) Add power steering fluid, (Refer to 19 - STEERING/PUMP - STANDARD PROCEDURE).

INSTALLATION - 2.4L

(1) Slide reservoir down onto the fan shroud mount until it clicks in place.
(2) Install the push-in fastener.
(3) Install the hoses.
(4) Fill reservoir to proper level, (Refer to 19 - STEERING/PUMP - STANDARD PROCEDURE).