DISASSEMBLY

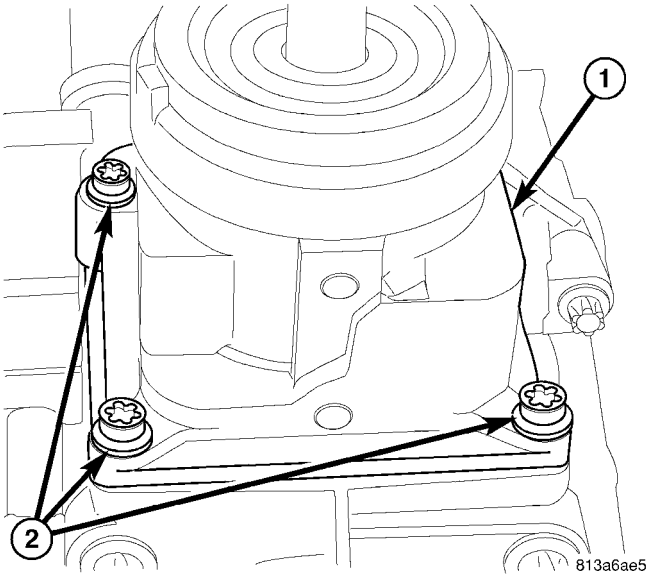

Fig. 8 SHIFT TOWER

1 - SHIFT TOWER
2 - BOLTS

(1) Remove shift tower (1) (Fig. 8) bolts (2) and remove tower.

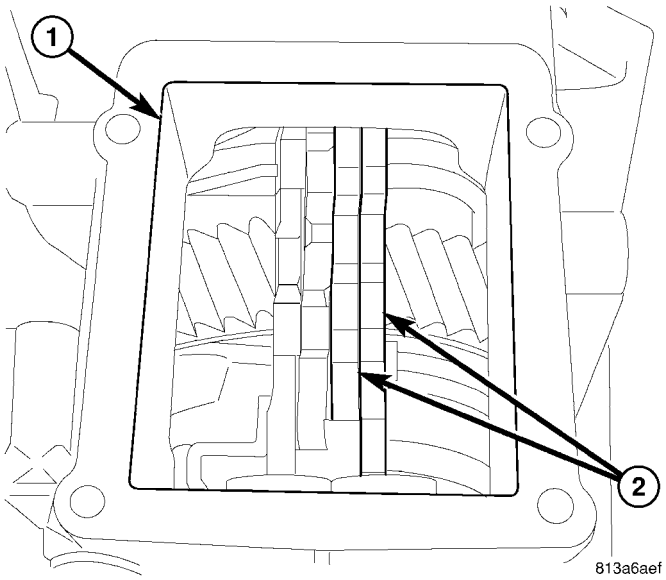

Fig. 9 SHIFT TOWER OPENING

1 - SHIFT TOWER OPENING
2 - SHIFT RAILS

(2) Through shift tower opening (1) (Fig. 9) shift two shift rails (2) forward to engage two gears.

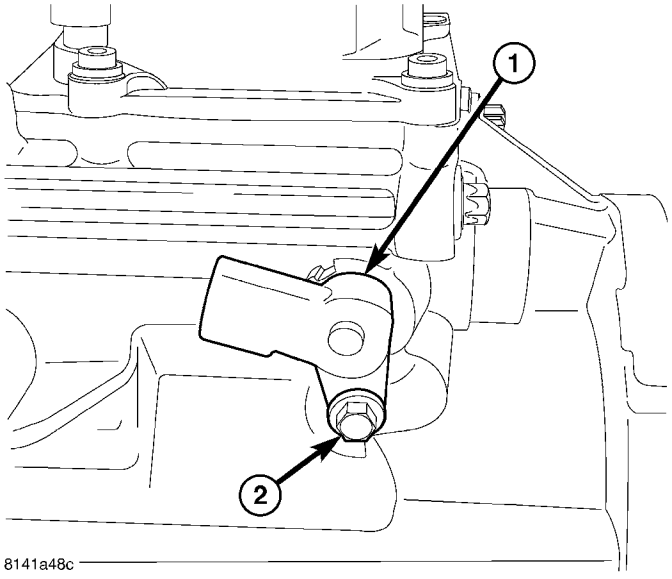

Fig. 10 BACK-UP LAMP SWITCH

1 - SWITCH
2 - BOLTS

(3) Remove back-up lamp switch (1) bolt (2) and remove switch (Fig. 10).

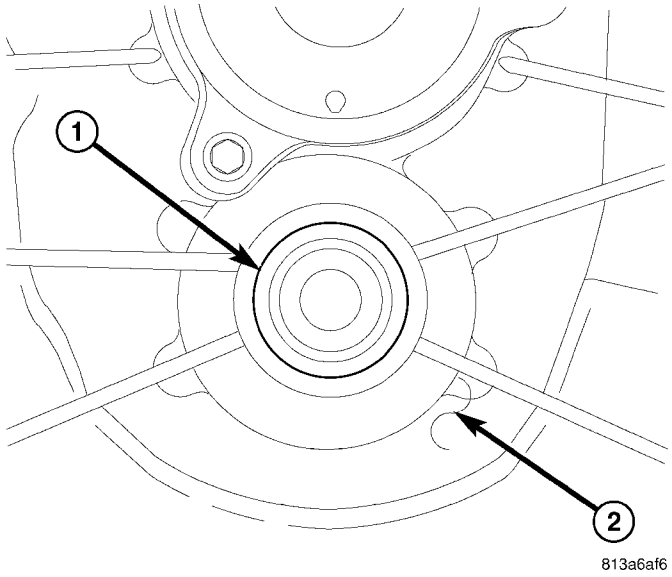

Fig. 11 COUNTERSHAFT PLUG

1 - COUNTERSHAFT PLUG
2 - FRONT HOUSING

(4) Remove countershaft plug (1) (Fig. 11) from the front housing (2) with a seal pick.