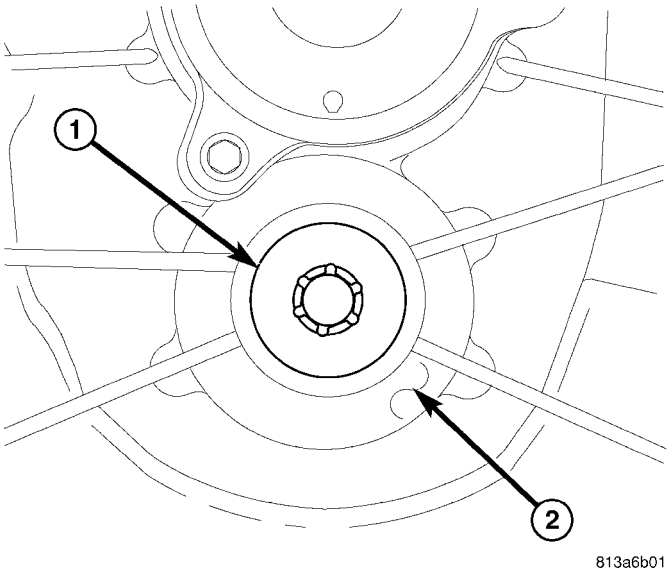

Fig. 12 COUNTERSHAFT BOLT

1 - COUNTERSHAFT BOLT
2 - FRONT HOUSING

(5) Remove countershaft bolt (1) (Fig. 12) from the front housing (2).

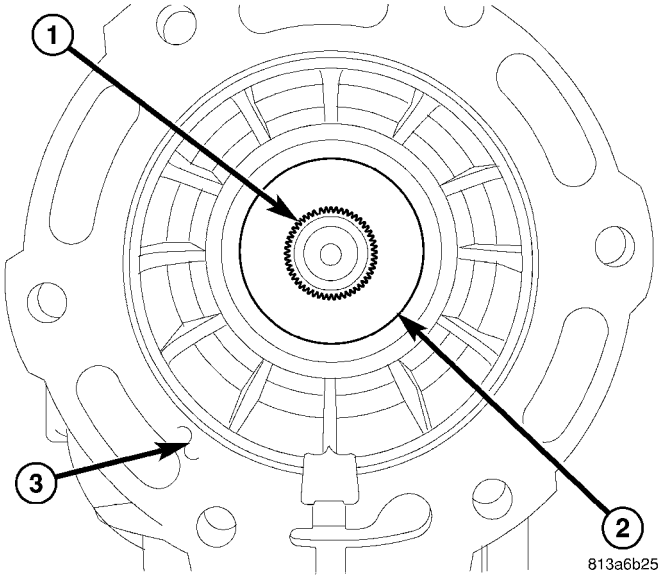

Fig. 13 OUTPUT SHAFT SEAL

1 - OUTPUT SHAFT
2 - SEAL
3 - REAR HOUSING

(6) Remove output shaft (1) (Fig. 13) seal (2) from rear housing (3) with a seal pick.

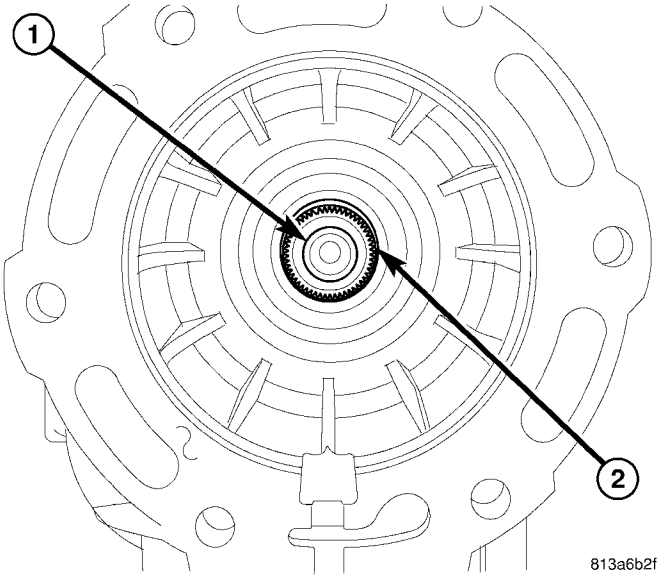

Fig. 14 OUTPUT SHAFT SNAP RING

1 - OUTPUT SHAFT
2 - SNAP RING

(7) Remove output shaft (1) (Fig. 14) snap ring (2) 4x4 only.

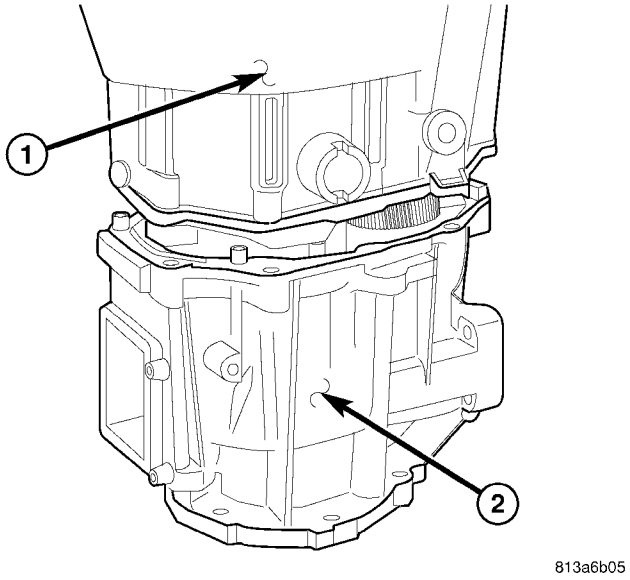

Fig. 15 SPLIT HOUSING

1 - FRONT HOUSING
2 - REAR HOUSING

(8) Stand transmission on the rear housing and remove the housing bolts.

(9) Remove front housing (1) (Fig. 15) from the rear housing (2).