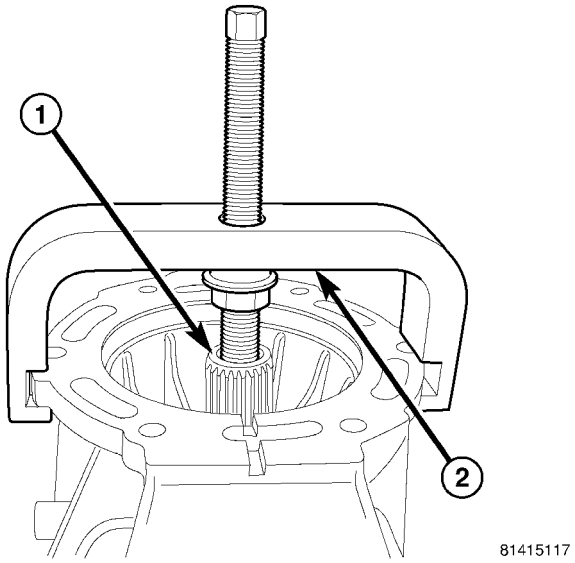


Fig. 20 MAINSHAFT REMOVER

1 - MAINSHAFT
2 - REMOVER/INSTALLER

(15) Remove mainshaft shaft (1) (Fig. 20) from rear housing bearing with Remover 9636 (2).

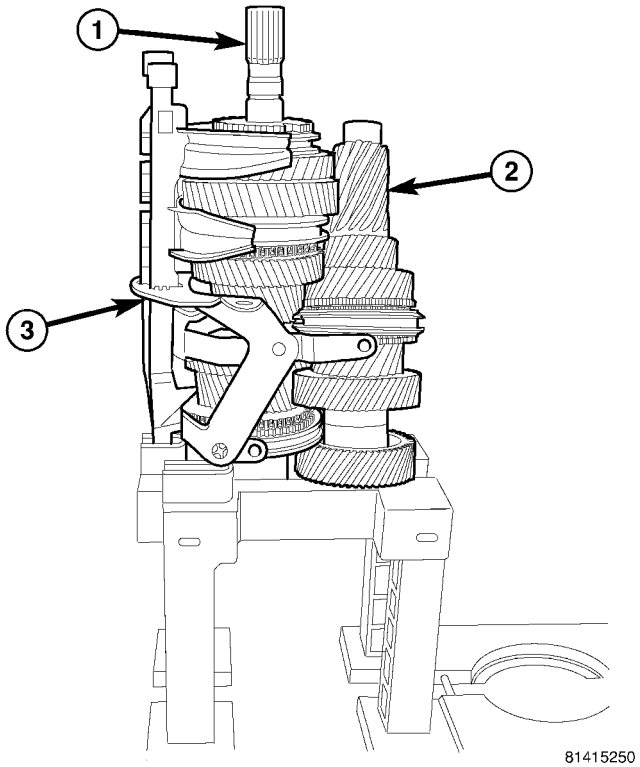


Fig. 21 MAIN/COUNTERSHAFT

1 - MAINSHAFT
2 - COUNTERSHAFT
3 - SHIFT RAILS AND FORKS

(16) Remove mainshaft (1), countershaft (2) and shift rails/forks (3) from fixture (Fig. 21).

MAINSHAFT

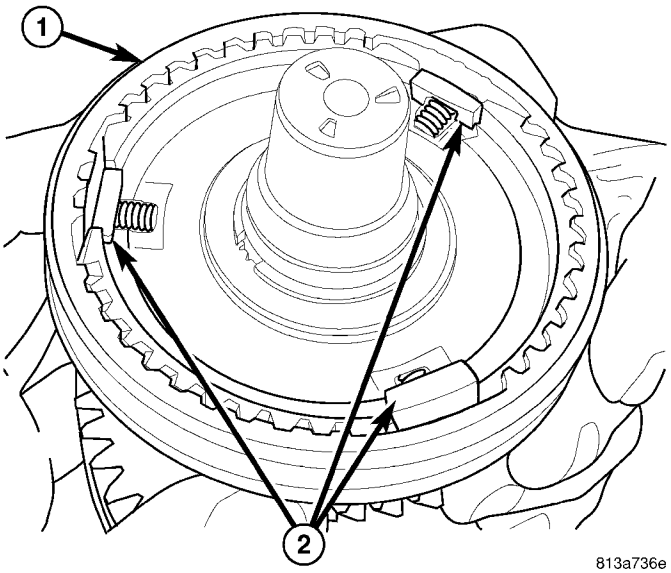


Fig. 22 5-6 SYNCHRO SLEEVE DETENTS

1 - SYNCHRONIZER SLEEVE
2 - DETENTS

(1) Place mainshaft with 5-6 synchronizer facing up in build Fixture 9648 and place in a vise.

(2) Push 5-6 synchronizer sleeve (1) (Fig. 22) down on hub and remove detents (2) springs and balls.

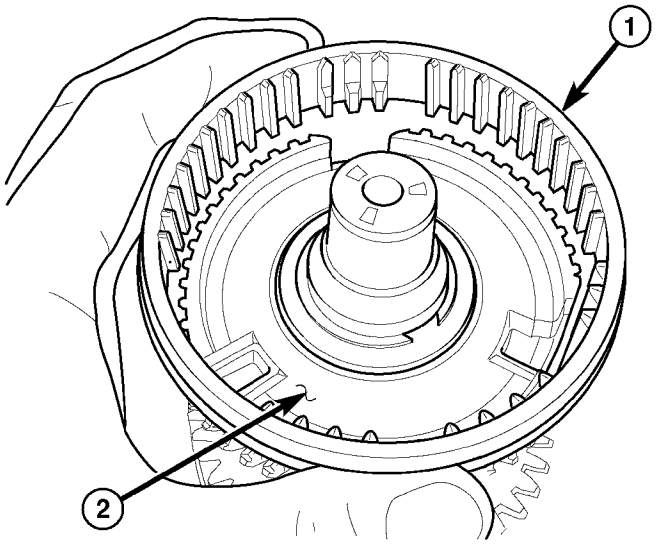


Fig. 23 5-6 SYNCHRONIZER SLEEVE

1 - SYNCHRONIZER SLEEVE
2 - HUB

(3) Remove 5-6 synchronizer sleeve (1) (Fig. 23) from hub (2).