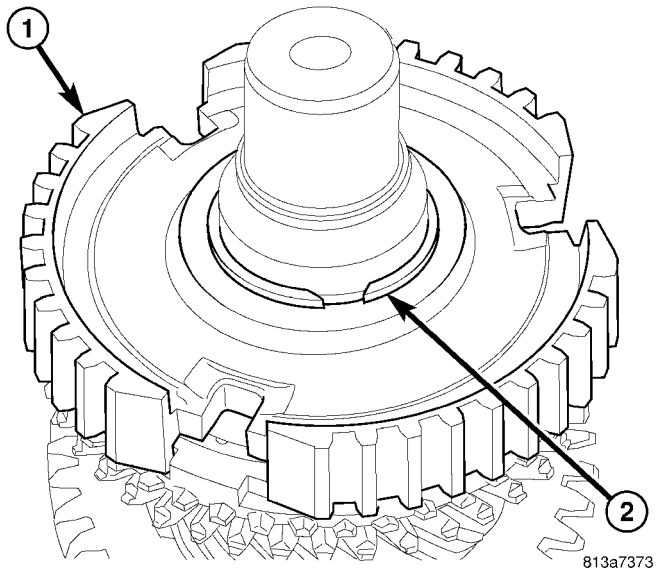

Fig. 24 5-6 SYNCHRONIZER HUB SNAP RING

1 - SYNCHRONIZER HUB
2 - SNAP RING

(4) Remove 5-6 synchronizer hub (1) (Fig. 24) snap ring (2).

NOTE: All snap rings are select fit from the factory, and must be installed in their original location.

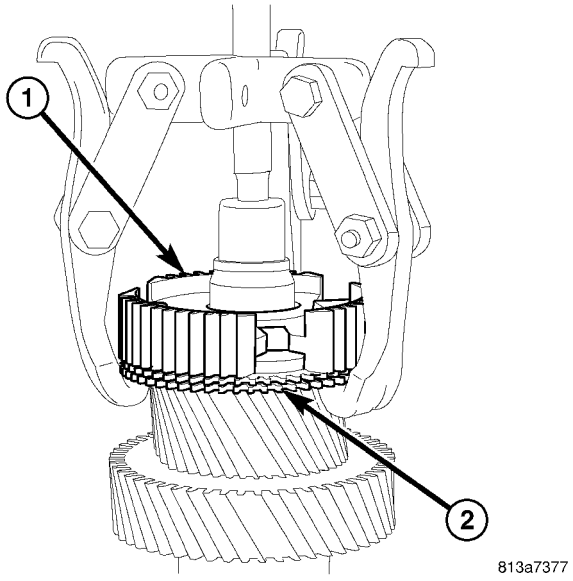

Fig. 25 5-6 SYNCHRONIZER HUB

1 - 5-6 SYNCHRONIZER HUB
2 - SIXTH GEAR SYNCHRONIZER RINGS

(5) Remove 5-6 synchronizer hub (1) (Fig. 25) and sixth gear synchronizer rings (2) with a three jaw puller. Place puller jaws under sixth gear synchronizer rings (2).

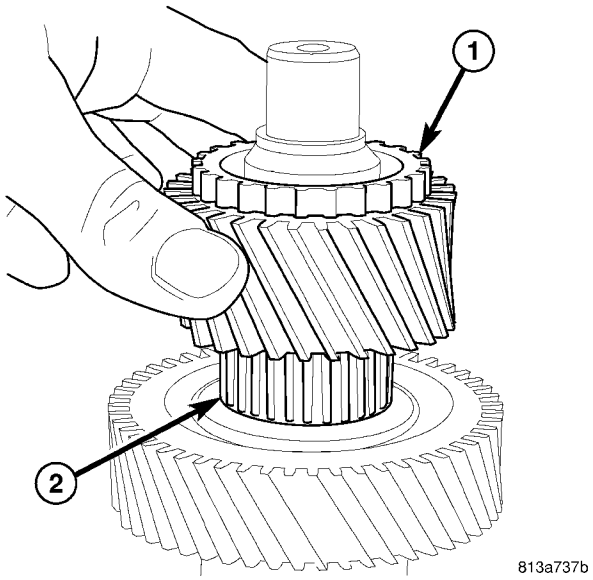

Fig. 26 SIXTH GEAR & BEARING

1 - SIXTH GEAR
2 - BEARING

(6) Remove sixth gear (1) (Fig. 26) and bearing (2).

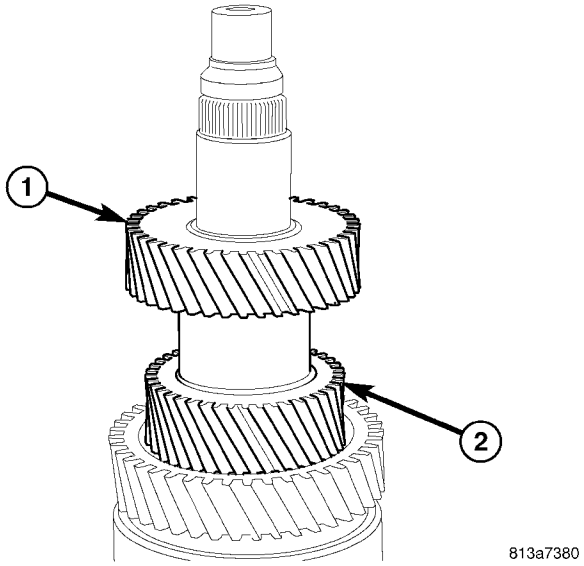

Fig. 27 3-4 GEAR

1 - THIRD GEAR
2 - FOURTH GEAR

(7) Third gear (1) (Fig. 27) and fourth gear (2) are serviced with the mainshaft only.

(8) Remove mainshaft from Fixture 9648. Turn fixture over in vise and set opposite end of mainshaft in the fixture.