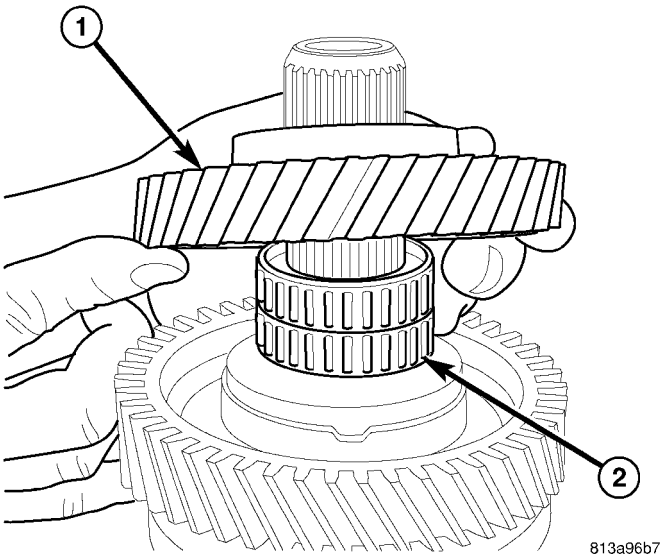


Fig. 32 REVERSE GEAR

1 - REVERSE GEAR
2 - BEARING

(13) Remove reverse gear (1) (Fig. 32) and bearing (2).

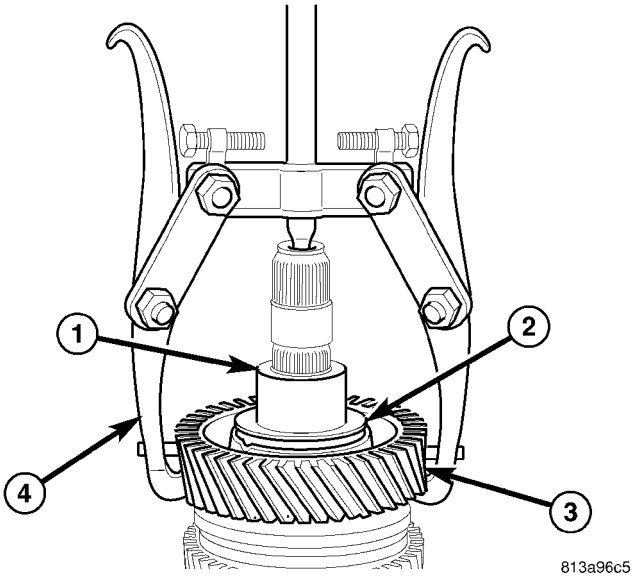


Fig. 33 FIRST GEAR

1 - BEARING RACE
2 - THRUST WASHER
3 - FIRST GEAR
4 - PULLER

(14) Remove reverse gear bearing race (1) (Fig. 33), thrust washer (2) and first gear (3) with puller (4). Place puller jaws under first gear (3).

(15) Remove first gear bearing.

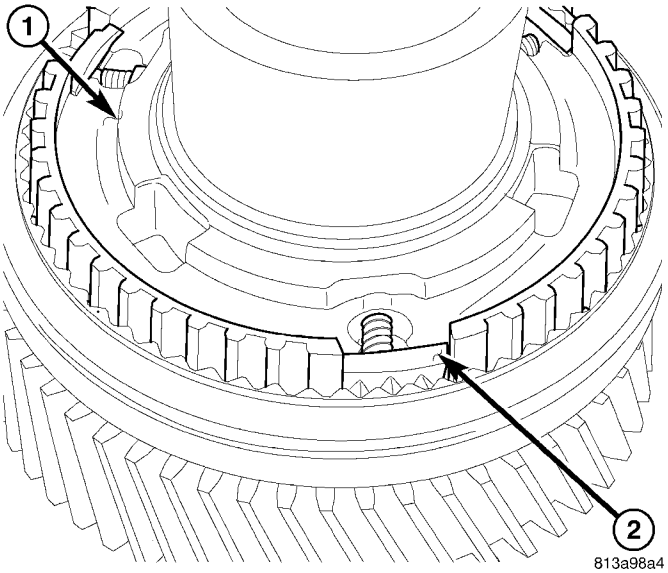


Fig. 34 1-2 SYNCHRONIZER DETENT

1 - 1-2 SYNCHRONIZER HUB
2 - DETENTS

(16) Remove first gear synchronizer rings.

(17) Push 1-2 synchronizer sleeve down on hub. Remove 1-2 synchronizer hub (1) (Fig. 34) detents (2), balls and springs.

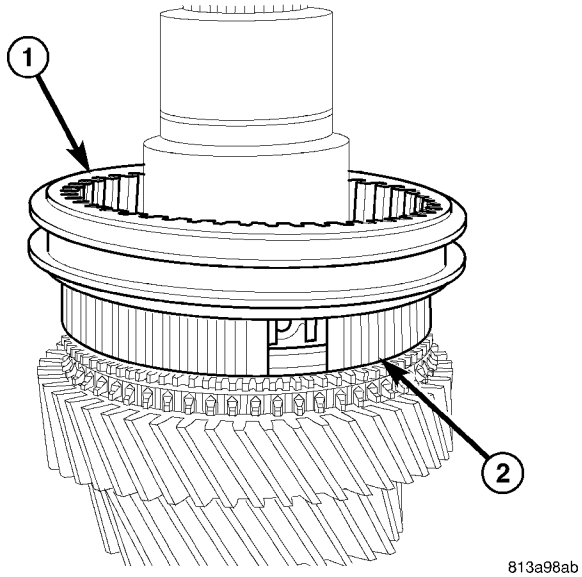


Fig. 35 1-2 SYNCHRONIZER SLEEVE

1 - 1-2 SYNCHRONIZER SLEEVE
2 - SYNCHRONIZER HUB

(18) Remove 1-2 synchronizer sleeve (1) (Fig. 35) from synchronizer hub (2).