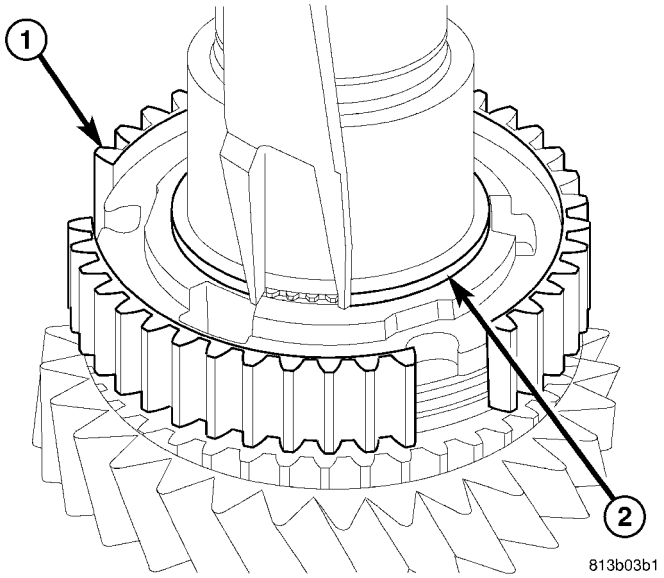

Fig. 36 1-2 SYNCHRONIZER HUB SNAP RING

1 - SYNCHRONIZER HUB
2 - SNAP RING

(19) Remove 1-2 synchronizer hub (1) (Fig. 36) snap ring (2).

NOTE: All snap rings are select fit from the factory, and must be installed in their original location.

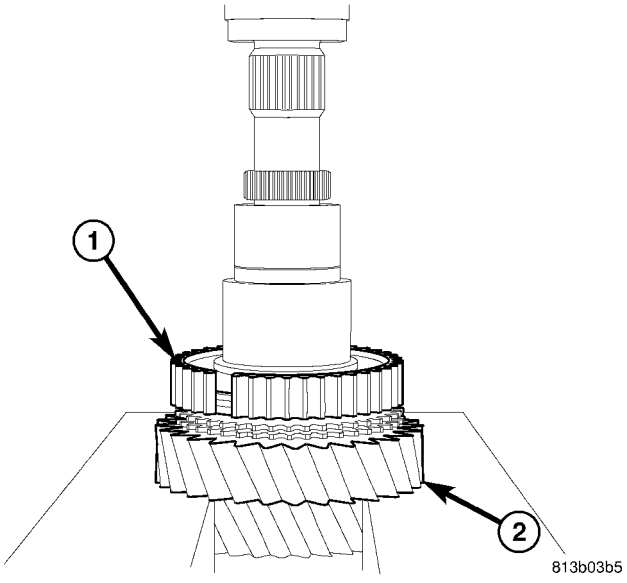

Fig. 37 SECOND GEAR

1 - SYNCHRONIZER HUB
2 - SECOND GEAR

(20) Remove 1-2 synchronizer hub (1) (Fig. 37), synchronizer rings and second gear (2) off shaft with a press. Place second gear (2) on press plates and press shaft through 1-2 synchronizer hub (1), synchronizer rings and second gear (2)

COUNTERSHAFT

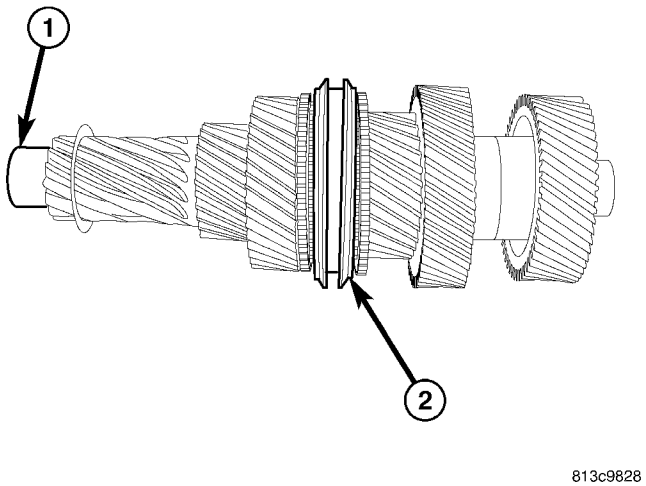

Fig. 38 COUNTERSHAFT

1 - BEARING SURFACES
2 - 3-4 SYNCHRONIZER ASSEMBLY

The countershaft (1) and 3-4 synchronizer (2) are serviced as an assembly only (Fig. 38).

FRONT HOUSING

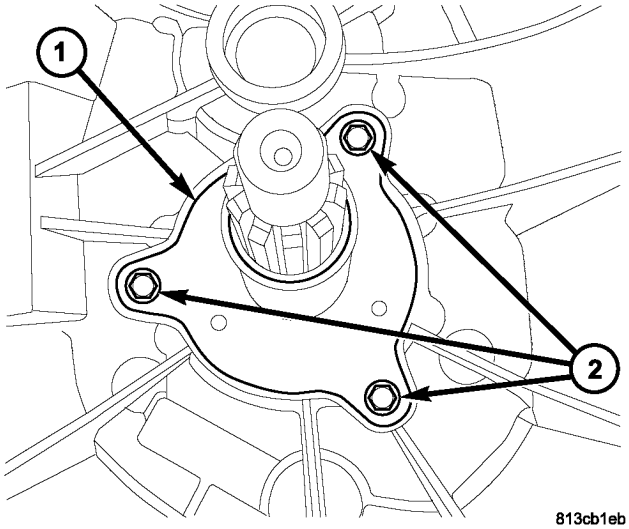

Fig. 39 INPUT SHAFT RETAINER

1 - INPUT SHAFT RETAINER
2 - BOLTS

(1) Remove input shaft retainer (1) (Fig. 39) bolts (2) and remove retainer.