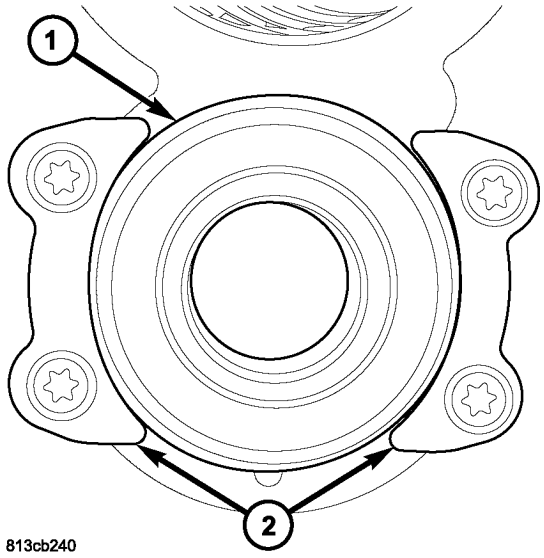

Fig. 40 COUNTERSHAFT BEARING RETAINER

1 - COUNTERSHAFT BEARING
2 - RETAINERS

(2) Remove countershaft bearing (1) (Fig. 40) retainer (2) bolts and remove retainers.

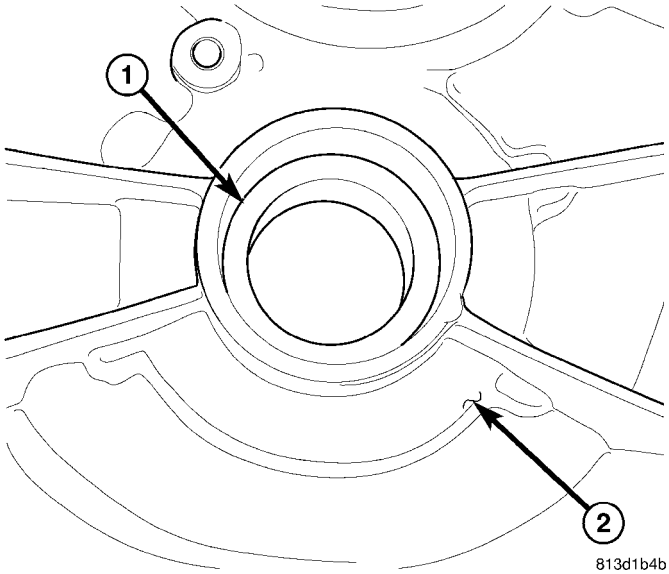

Fig. 41 COUNTERSHAFT BEARING FRONT HOUSING

1 - COUNTERSHAFT BEARING
2 - HOUSING

(3) Remove countershaft bearing (1) (Fig. 41) from housing (2) with a hammer and driver.

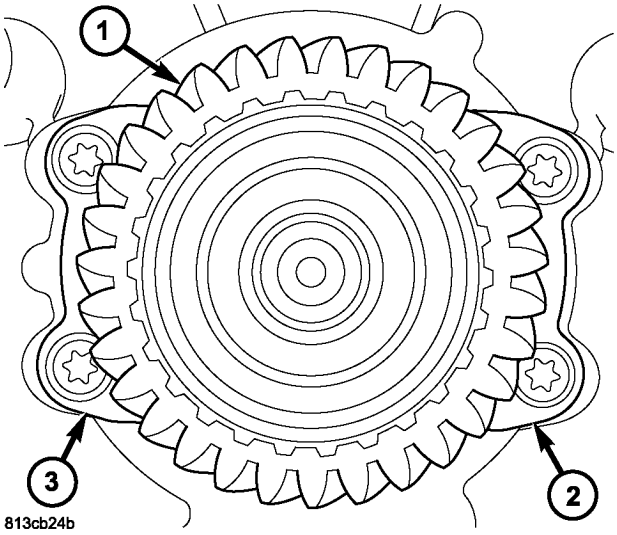

Fig. 42 INPUT SHAFT BEARING RETAINER

1 - INPUT SHAFT
2 - BEARING RETAINER
3 - BEARING RETAINER

(4) Remove input shaft (1) (Fig. 42) bearing retainer (2, 3) bolts and remove retainers.

(5) Remove input shaft and bearing from housing with a dead blow hammer.

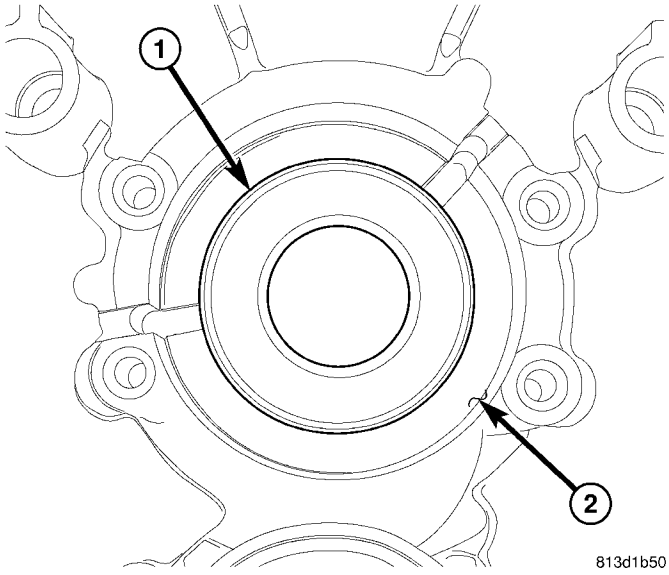

Fig. 43 INPUT SHAFT SEAL

1 - INPUT SHAFT SEAL
2 - HOUSING

(6) Remove input shaft seal (1) (Fig. 43) from housing (2) with a hammer and driver.