INPUT SHAFT

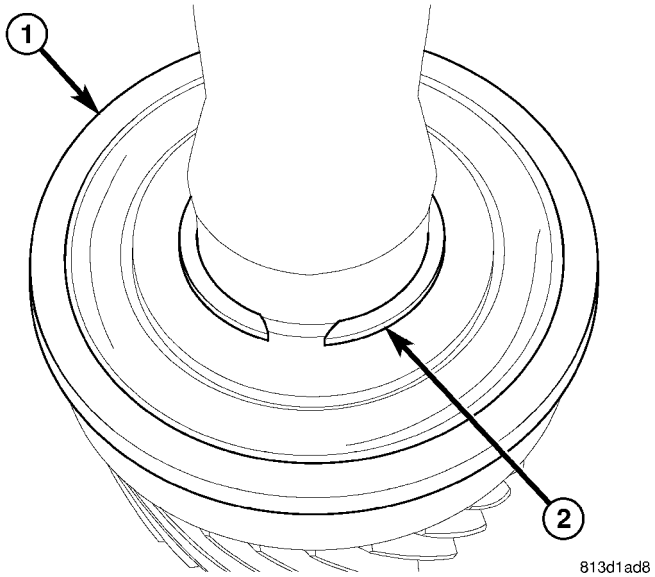

Fig. 44 INPUT SHAFT BEARING SNAP RING

1 - INPUT SHAFT BEARING
2 - SNAP RING

(1) Remove input shaft bearing (1) (Fig. 44) snap ring (2).

NOTE: All snap rings are select fit from the factory, and must be installed in their original location.

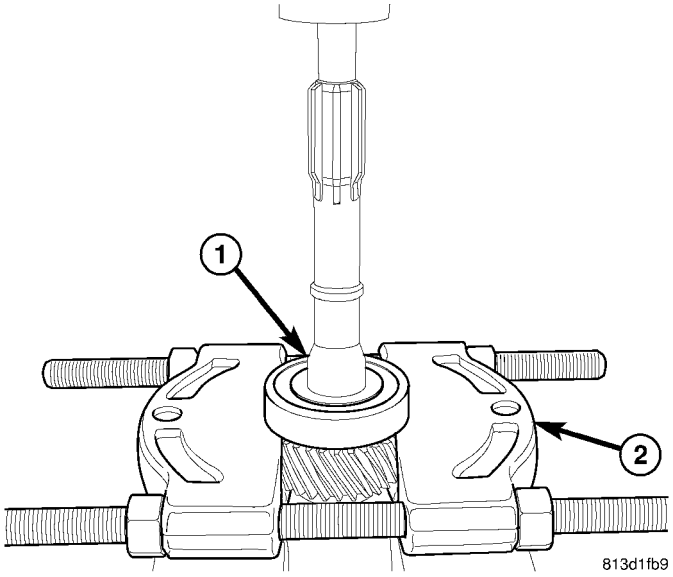

Fig. 45 INPUT SHAFT BEARING REMOVAL

1 - INPUT SHAFT BEARING
2 - BEARING SPLITTER 1130

(2) Remove input shaft bearing (1) (Fig. 45) with Splitter 1130 (2) and press. Place splitter around bearing retainer lip.

REAR HOUSING

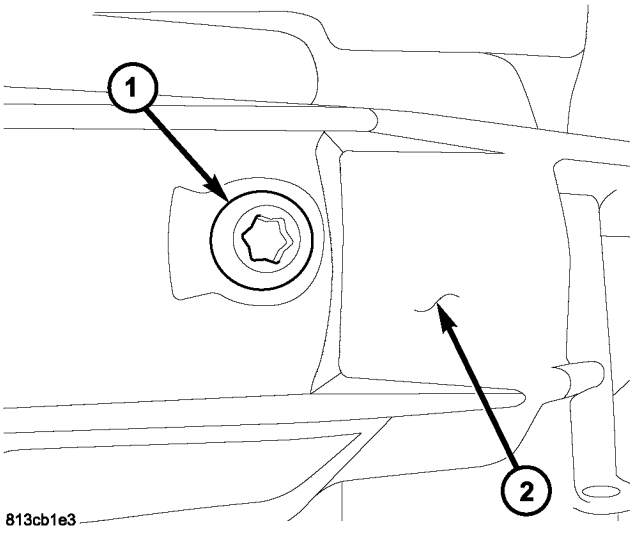

Fig. 46 IDLER SHAFT BOLT

1 - IDLER GEAR SHAFT BOLT
2 - HOUSING

(1) Remove reverse idler gear shaft bolt (1) (Fig. 46) from housing (2).

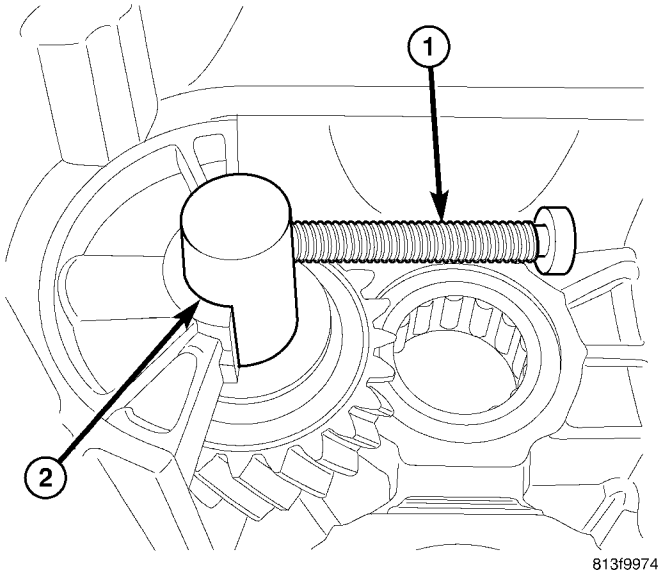

Fig. 47 PULL IDLER SHAFT

1 - IDLER GEAR SHAFT BOLT
2 - IDLER GEAR SHAFT

(2) Thread idler gear shaft bolt (1) (Fig. 47) into the shaft (2). Then work shaft (2) out of the idler gear.