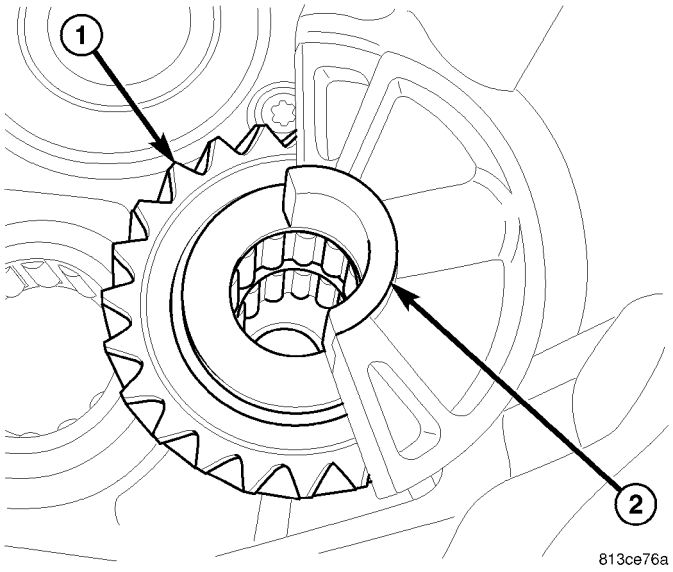


Fig. 48 IDLER SHAFT SUPPORT

1 - REVERSE IDLER GEAR
2 - SHAFT SUPPORT

(3) Remove reverse idler gear (1) (Fig. 48) shaft support (2).

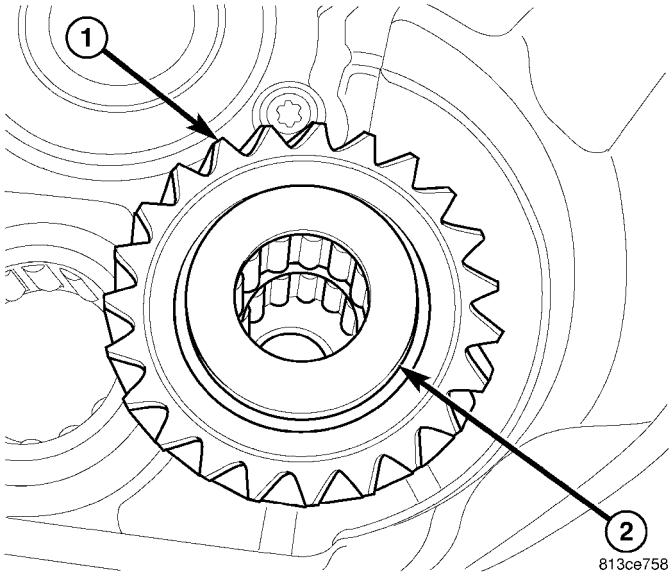


Fig. 49 IDLER GEAR THRUST WASHER

1 - REVERSE IDLER GEAR
2 - THRUST WASHER

(4) Remove reverse idler gear (1) (Fig. 49) thrust washer (2).

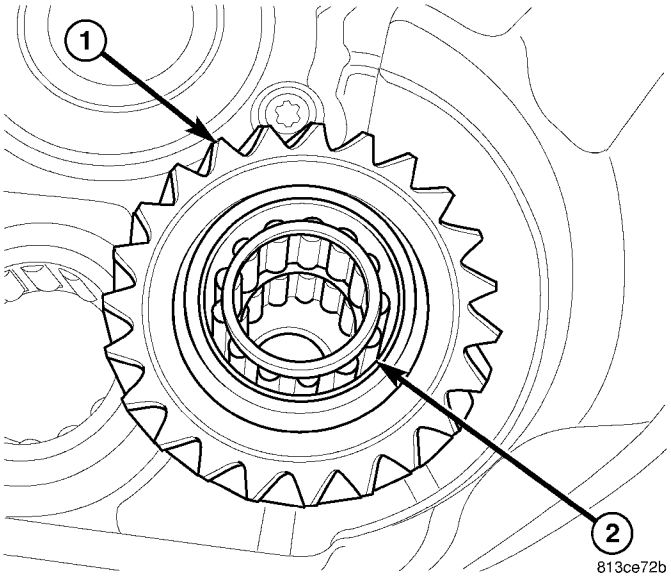


Fig. 50 IDLER GEAR BEARING

1 - REVERSE IDLER GEAR
2 - BEARING

(5) Remove reverse idler gear (1) (Fig. 50) and bearing (2).

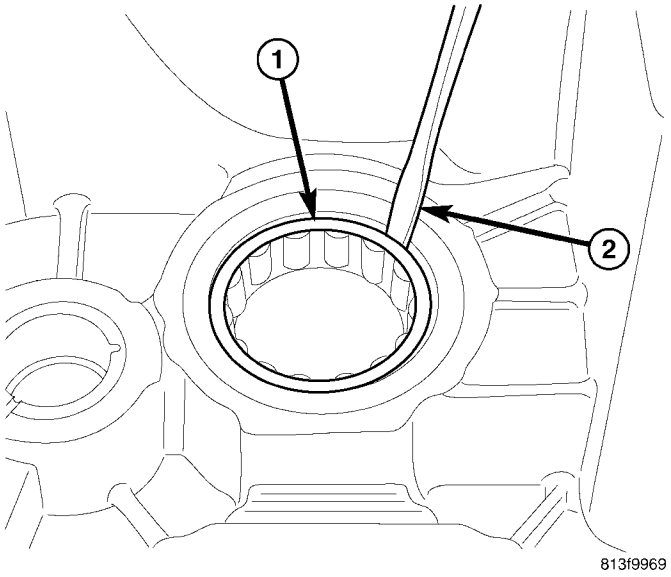


Fig. 51 BEARING CAGE

1 - ROLLER BEARING CAGE
2 - SCREWDRIVER

(6) Break plastic countershaft roller bearing cage (1) (Fig. 51) with a screw driver (2). Then remove cage and roller bearing.