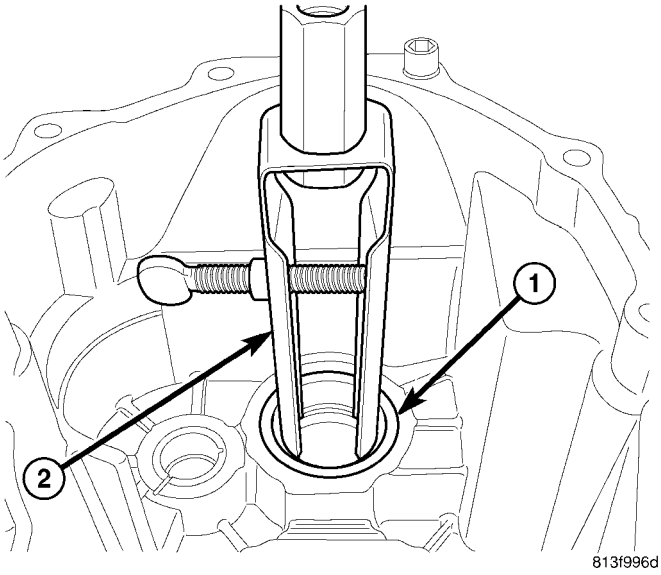

Fig. 52 BEARING SHELL PULLER

1 - ROLLER BEARING CAGE
2 - REMOVER

(7) Remove countershaft roller bearing shell (1) (Fig. 52) from the rear housing with Remover 7794-A (2) and Slide Hammer C-637.

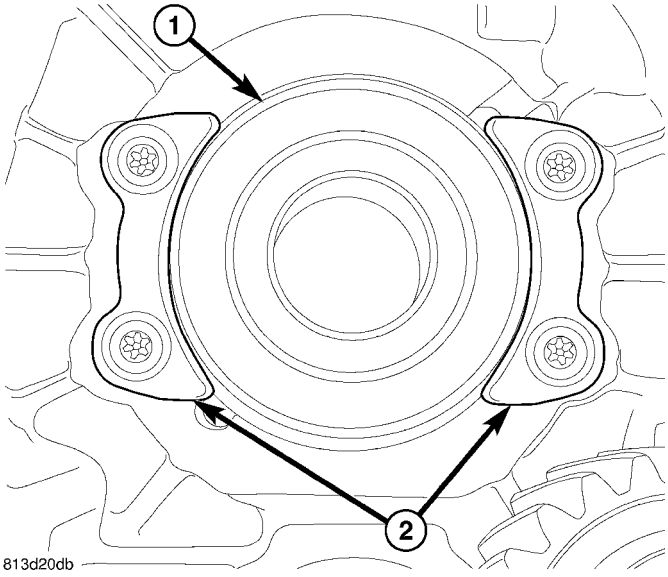

Fig. 53 REAR MAINSHAFT BEARING RETAINER

1 - MAINSHAFT BEARING
2 - RETAINERS

(8) Remove mainshaft bearing (1) (Fig. 53) retainer (2) bolts and remove retainers.

(9) Remove bearing from housing with a hammer and driver.

CLEANING

Clean gears, shafts, shift components and transmission housings with a standard parts cleaning solvent. Do not use acid or corrosive base solvents. Dry all parts except bearings with compressed air.

Clean shaft bearings with a mild solvent such as Mopar™ degreasing solvent or similar solvents. Do not dry the bearings with compressed air. Allow the bearings to either air dry or wipe them dry with clean shop towels.

INSPECTION

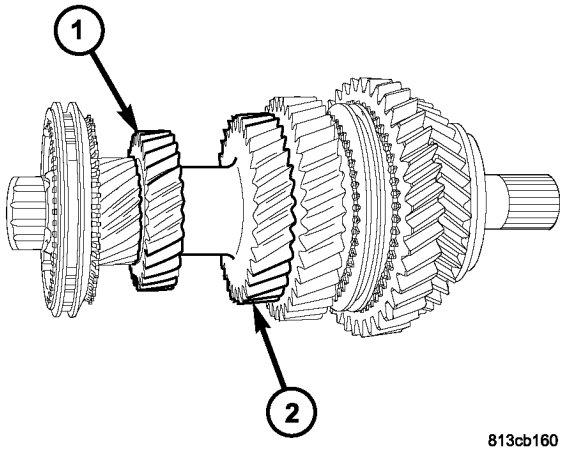

Fig. 54 MAINSHAFT

1 - THIRD GEAR
2 - FOURTH GEAR

NOTE: Minor corrosion, nicks, or pitting can be smoothed with 400 grit emery and polished out with crocus cloth.

Bearings: Inspect for worn, cracked, flat-spotted or brinnelled.

Gears: Inspect for worn, chipped or cracked teeth. Inspect bearing surfaces for ware or flat-spotted.

Mainshaft: Inspect for worn splines, snap ring grooves and threads. Inspect bearing surfaces for ware or flat-spotted. **Third gear (1) (Fig. 54) and fourth gear (2) are serviced with mainshaft only.**