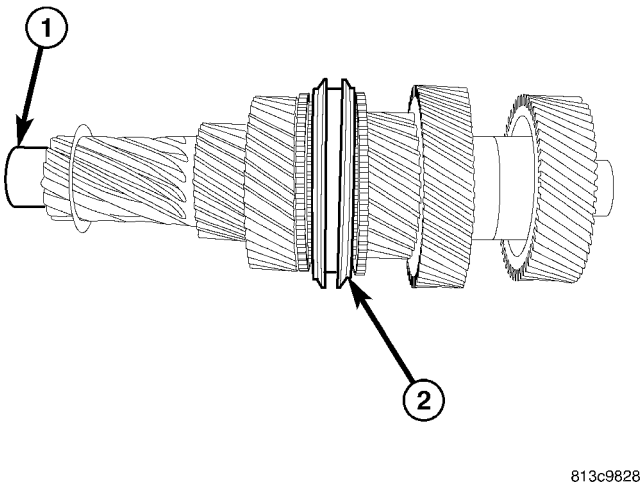

Fig. 55 COUNTERSHAFT

1 - BEARING SURFACES
2 - 3-4 SYNCHRONIZER ASSEMBLY

Countershaft: Inspect for worn, chipped or cracked teeth. Inspect bearing surfaces (1) (Fig. 55) for wear or flat-spots. Inspect 3-4 synchronizer assembly (2). **The countershaft is serviced as an assembly.**

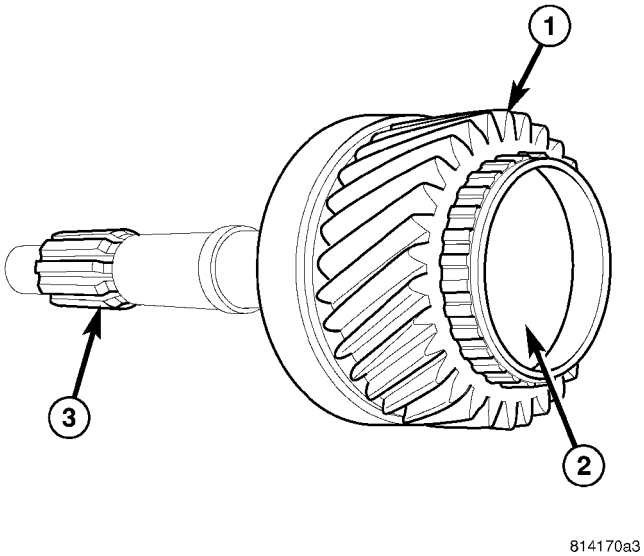

Fig. 56 INPUT SHAFT

1 - TEETH
2 - BEARING SURFACE
3 - SPLINE

Input Shaft: Inspect for worn, chipped or cracked teeth (1). Inspect bearing surface (2) for wear or flat-spots. Inspect for worn splines (3) (Fig. 56).

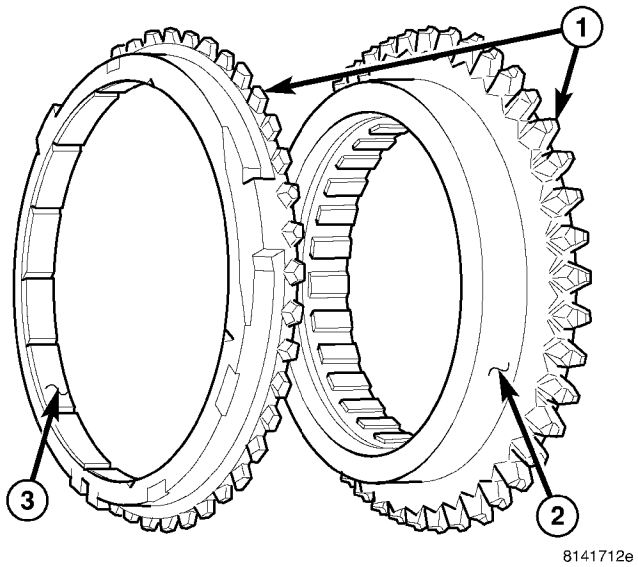

Fig. 57 SYNCHRONIZER RINGS

1 - TEETH
2 - FRICTION SURFACE
3 - FRICTION MATERIAL

Synchronizer components: Inspect for worn, chipped or cracked teeth (1) and burned friction surface (2) or flaking off friction material (3) (Fig. 57). **Synchronizers are serviced as an assembly. 3-4 synchronizer assembly (2) is serviced with countershaft.**

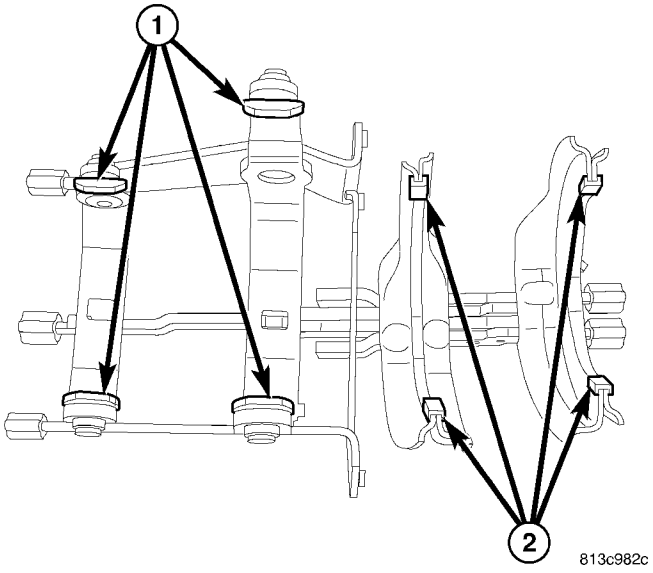

Fig. 58 SHIFT FORKS

1 - SHIFT FORK SHOES
2 - SHIFT FORK PADS

Shift forks: Inspect shift forks and shoes (1) (Fig. 58) for wear and distortion. Check fit of fork shoes in synchronizer sleeve to ensure parts fit and work smoothly, replace if necessary. If shift fork pads (2) are worn, the shift fork must be replaced.