Housing/Tail housing: Inspect sealing and mating surfaces are free of burrs and nicks. Inspect alignment dowels are tight and in good condition.

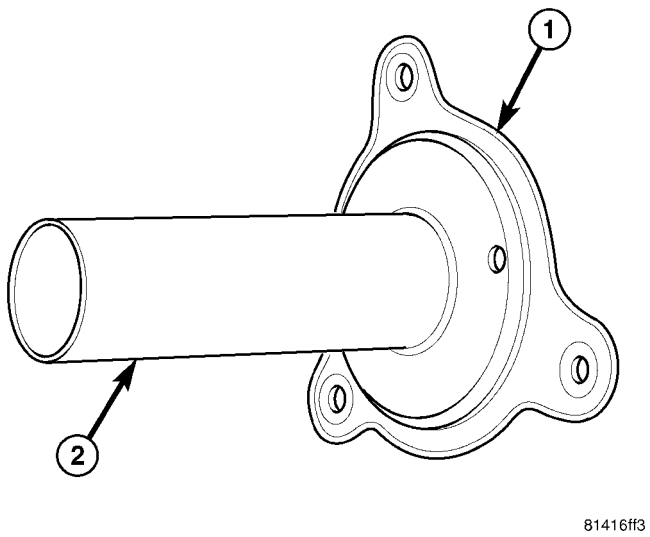

Fig. 59 RETAINER INPUT SHAFT

1 - RETAINER
2 - SLIDE SURFACE

Input Shaft Retainer: Inspect retainer (1) release bearing slide surface (2) (Fig. 59).

ASSEMBLY

MAINSHAFT

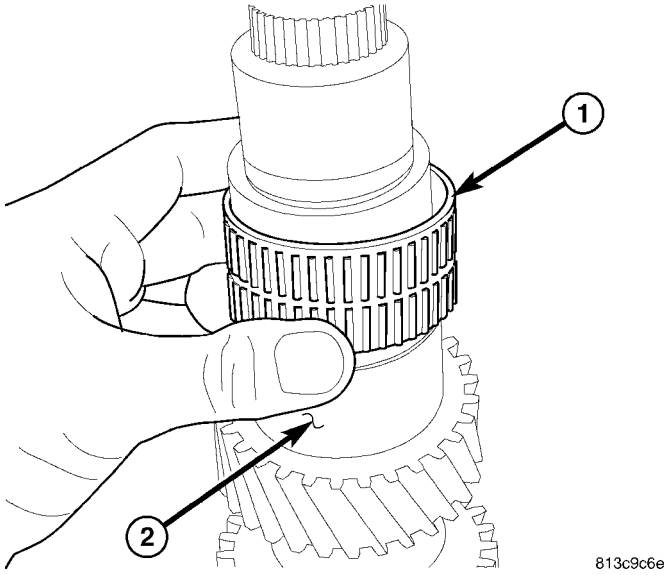

Fig. 60 SECOND GEAR BEARING

1 - SECOND GEAR BEARING
2 - MAINSHAFT

(1) Place mainshaft in Fixture 9648 mounted in a vise.

(2) Install second gear bearing (1) (Fig. 60) on mainshaft (2).

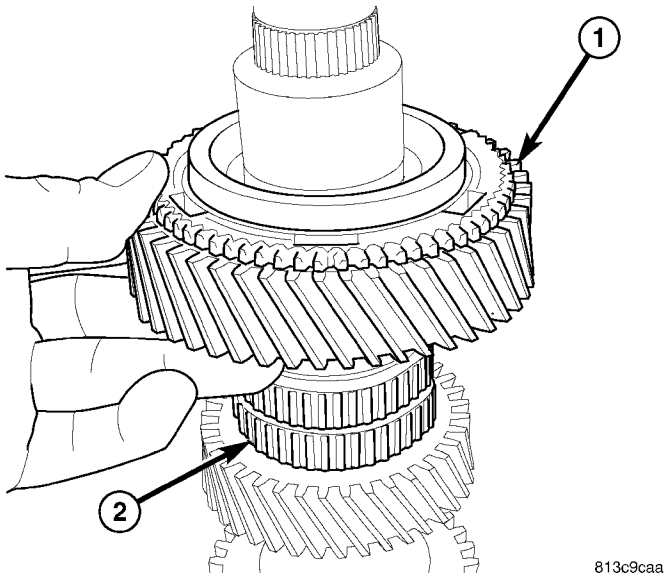

Fig. 61 SECOND GEAR

1 - SECOND GEAR
2 - BEARING

(3) Install second gear (1) (Fig. 61) on bearing (2).

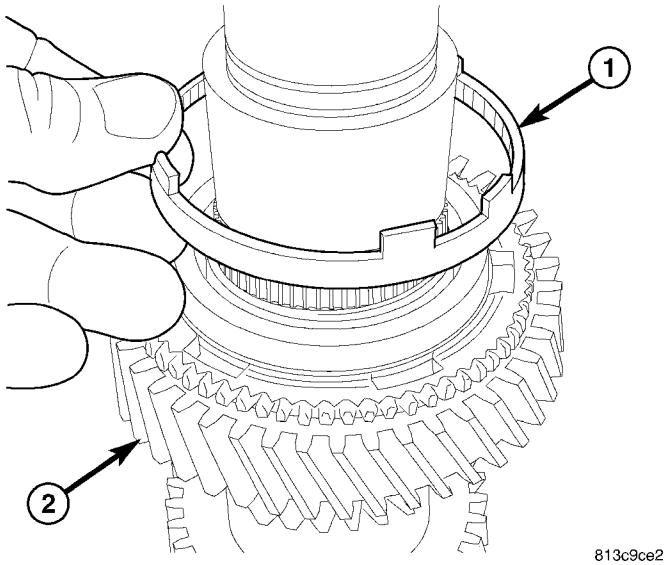

Fig. 62 2ND INNER FRICTION RING

1 - SYNCHRONIZER FRICTION RING
2 - SECOND GEAR

(4) Install inner synchronizer friction ring (1) (Fig. 62) on second gear (2).