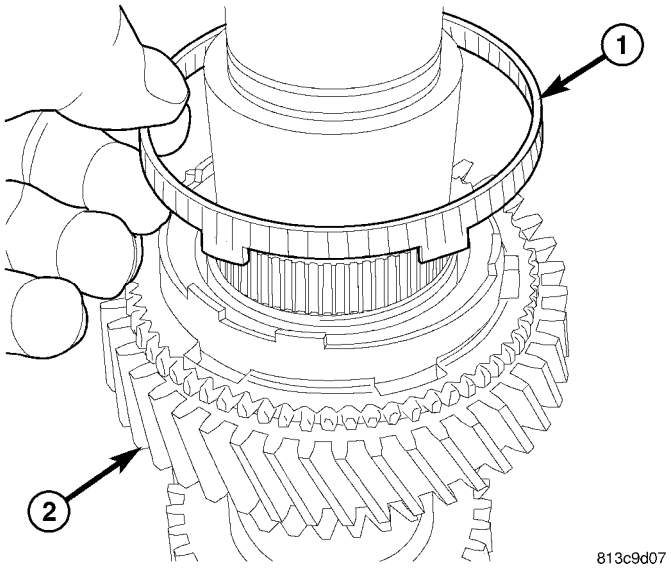


Fig. 63 2ND OUTER FRICTION RING

1 - OUTER SYNCHRONIZER FRICTION RING
2 - SECOND GEAR

(5) Install outer synchronizer friction ring (1) (Fig. 63) on second gear (2).

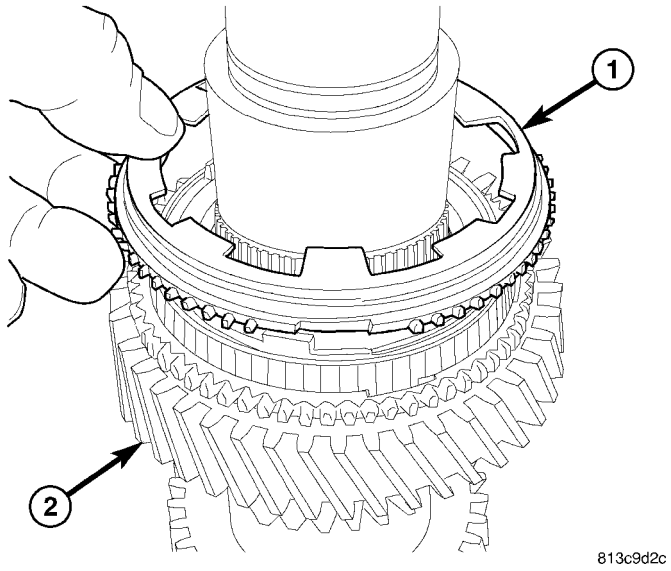


Fig. 64 2ND BLOCKER RING

1 - SYNCHRONIZER BLOCKER RING
2 - SECOND GEAR

(6) Install synchronizer blocker ring (1) (Fig. 64) on second gear (2).

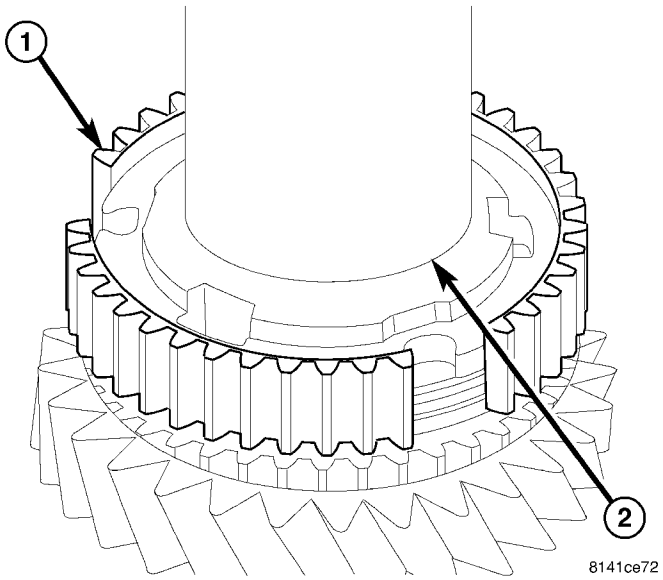


Fig. 65 1-2 SYNCHRONIZER HUB INSTALLER

1 - 1-2 SYNCHRONIZER HUB
2 - INSTALLER

(7) Install 1-2 synchronizer hub (1) (Fig. 65) with Installer 8228 (2) and a press. Align hub detent openings with synchronizer rings.

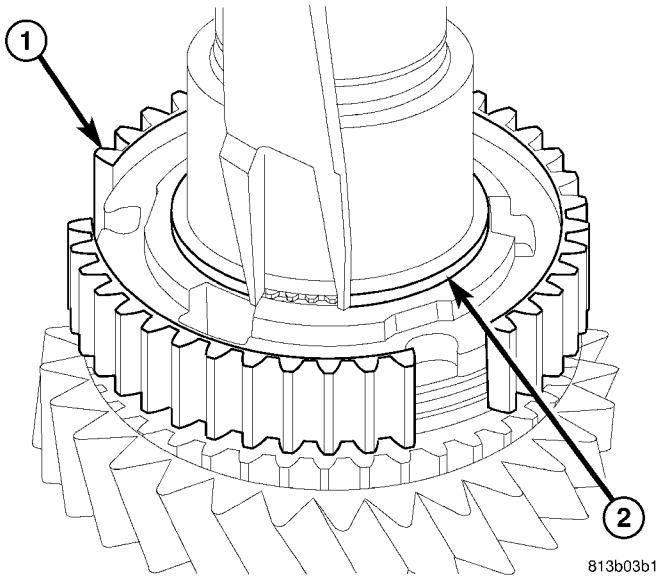


Fig. 66 1-2 SYNCHRO HUB SNAP RING

1 - SYNCHRONIZER HUB
2 - SNAP RING

(8) Install 1-2 synchronizer hub (1) (Fig. 66) snap ring (2).

NOTE: Reuse original snap ring or thickest snap ring that will fit.