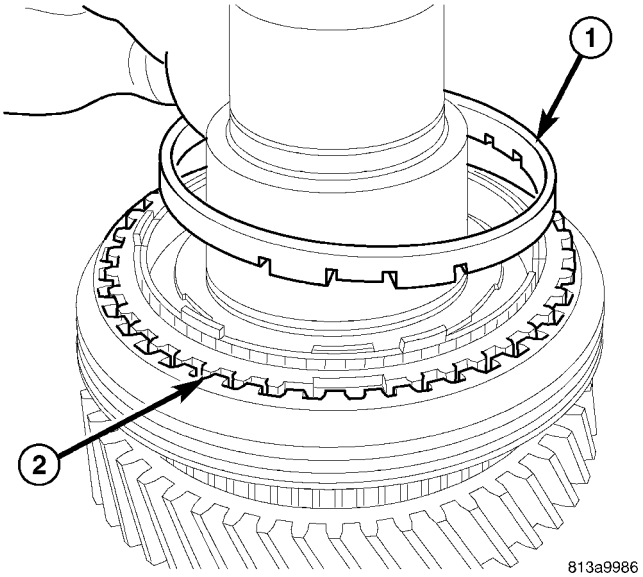

Fig. 71 FIRST GEAR INNER FRICTION RING

1 - FIRST GEAR INNER FRICTION RING
2 - SYNCHRONIZER HUB

(13) Install first gear inner friction ring (1) (Fig. 71) into synchronizer hub (2).

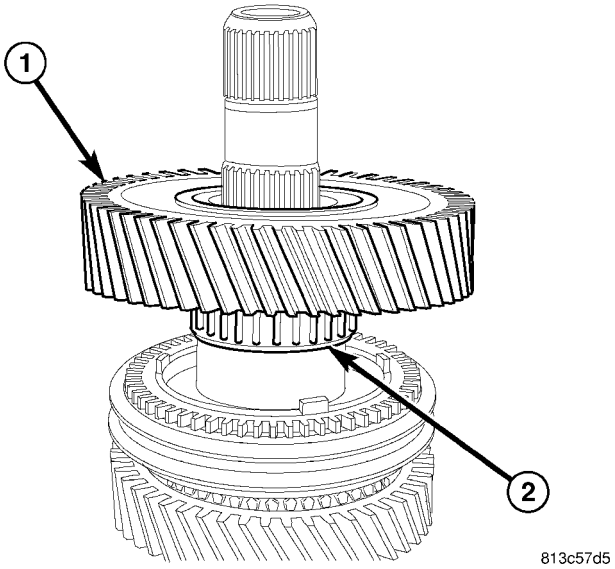

Fig. 72 1ST GEAR AND BEARING

1 - FIRST GEAR
2 - BEARING

(14) Install first gear (1) (Fig. 72) and bearing (2). Then center 1-2 synchronizer sleeve on synchronizer hub.

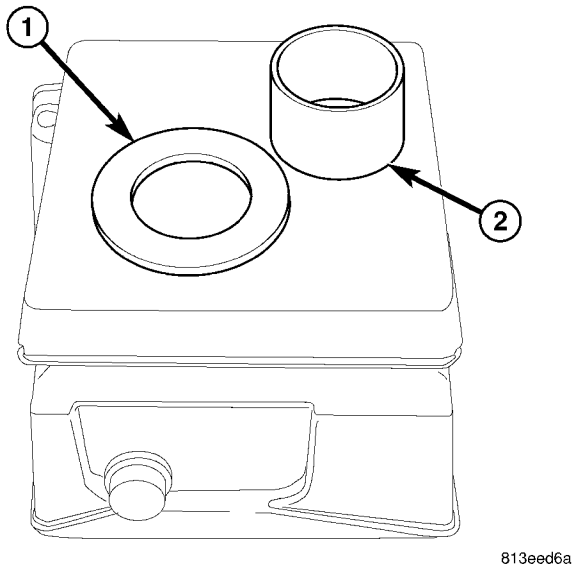

Fig. 73 WASHER AND RACE

1 - FIRST GEAR THRUST WASHER
2 - REVERSE GEAR BEARING RACE

WARNING: Use welding gloves when handling heated components. Failure to follow these instructions will result in personal injury.

CAUTION: A bearing heater is used to assemble first gear thrust washer (1) and reverse gear bearing race (2). Use only a bearing heater/hot plate and follow manufacture's instructions. Heat components to 100 - 177 Celsius (212° Min - 350° Max Fahrenheit). Never use an open flame to heat components. Never leave components on heater for an extended amount of time. If component is discolored after heating, the component has been overheated and must not be used. Failure to follow these instructions will result in component damage.

(15) Heat first gear thrust washer (1) (Fig. 73) and reverse gear bearing race (2) with bearing heater.