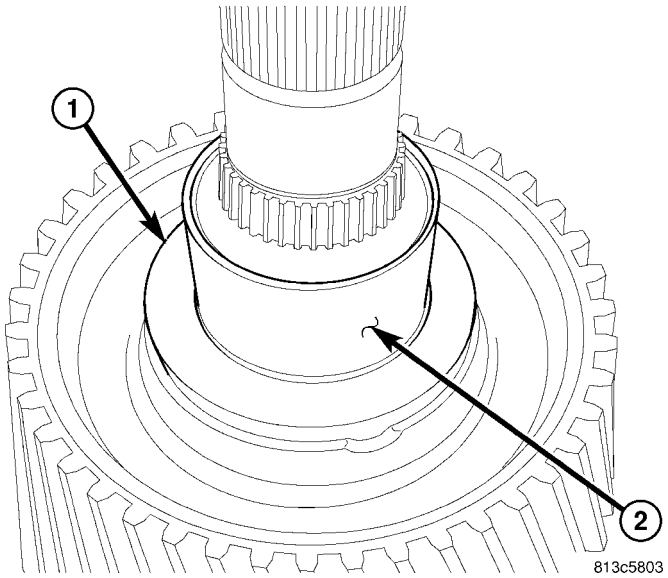


Fig. 74 THRUST WASHER & RACE

1 - FIRST GEAR THRUST WASHER
2 - REVERSE GEAR BEARING RACE

(16) Using welding gloves or tongs, install first gear thrust washer (1) (Fig. 74) then reverse gear bearing race (2).

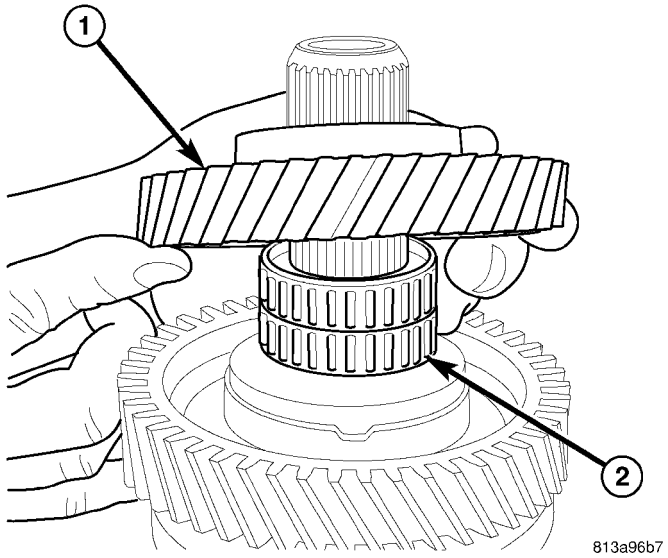


Fig. 75 REVERSE GEAR

1 - REVERSE GEAR
2 - BEARING

(17) Install reverse gear (1) (Fig. 75) and bearing (2).

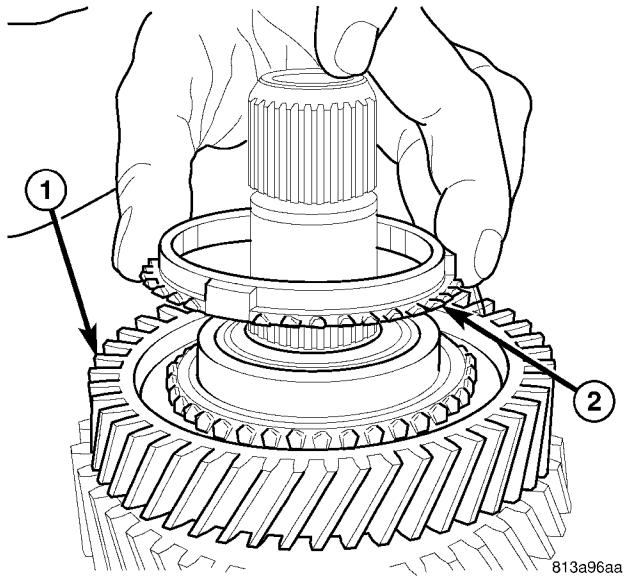


Fig. 76 REVERSE SYNCHRONIZER

1 - REVERSE GEAR
2 - SYNCHRONIZER FRICTION RING

(18) Install reverse gear (1) (Fig. 76) synchronizer friction ring (2).

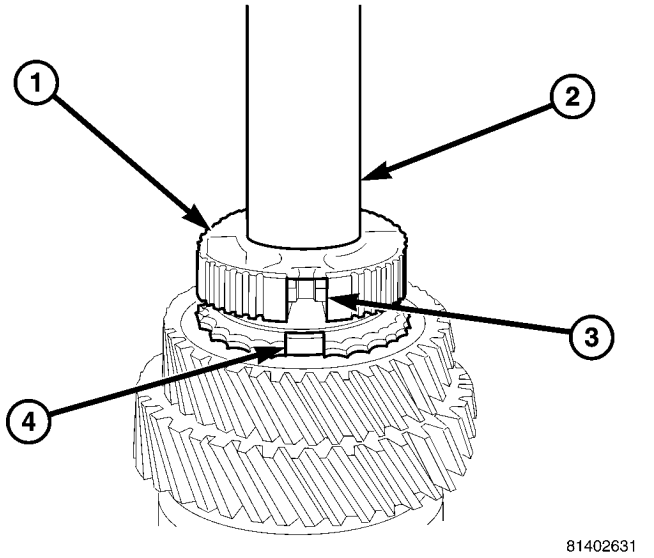


Fig. 77 REVERSE HUB INSTALLER

1 - SYNCHRONIZER HUB
2 - INSTALLER
3 - DETENT OPENING
4 - FRICTION RING TAB

(19) Install reverse gear synchronizer hub (1) on mainshaft with Installer W-262 (2) and a press. Align hub detent opening (3) with friction ring (4) lug (Fig. 77).