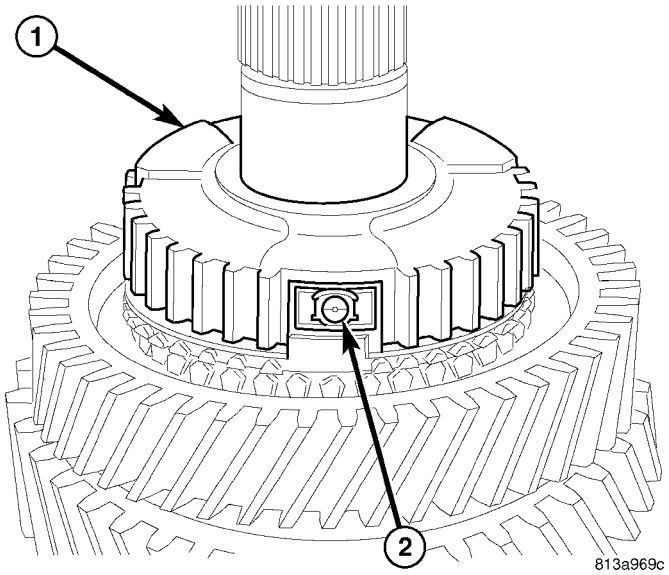


Fig. 78 REVERSE SYNCHRO HUB DETENT

1 - SYNCHRONIZER HUB
2 - DETENTS

(20) Install reverse gear synchronizer hub (1) (Fig. 78) detents (2).

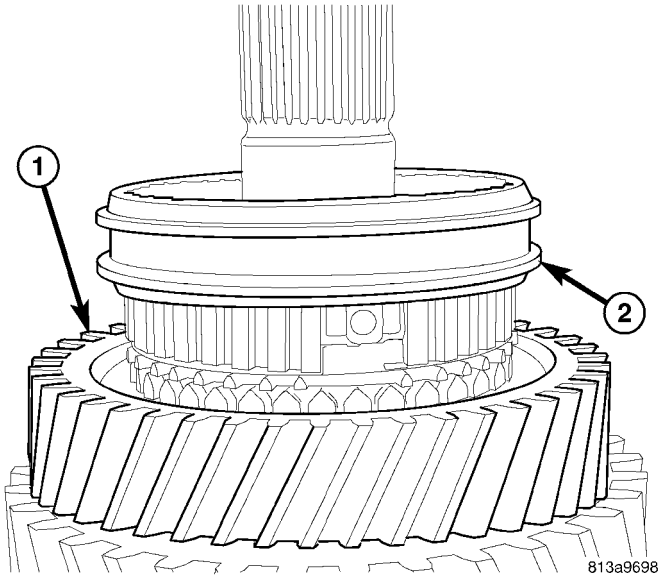


Fig. 79 REVERSE GEAR SYNCHRO SLEEVE

1 - REVERSE GEAR
2 - SYNCHRONIZER SLEEVE

(21) Install reverse gear (1) (Fig. 79) synchronizer sleeve (2) and center sleeve on synchronizer hub.

(22) Remove mainshaft from Fixture 9648. Turn fixture over in the vise, then install opposite end of mainshaft in the fixture.

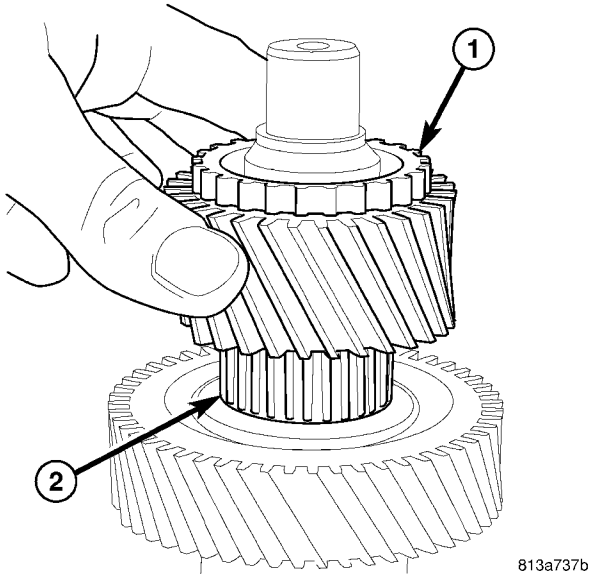


Fig. 80 SIXTH GEAR AND BEARING

1 - SIXTH GEAR
2 - BEARING

(23) Install sixth gear (1) (Fig. 80) and bearing (2).

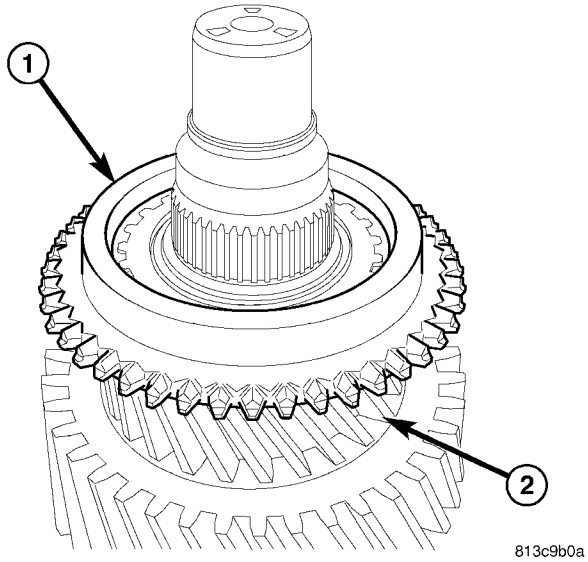


Fig. 81 6TH GEAR BLOCKER RING

1 - SIXTH GEAR BLOCKER RING
2 - SIXTH GEAR

(24) Install sixth gear synchronizer blocker ring (1) (Fig. 81) on sixth gear (2).