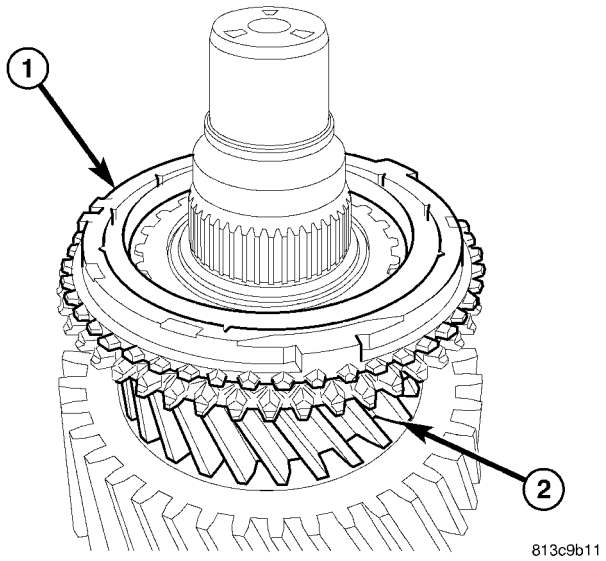


Fig. 82 6TH GEAR FRICTION RING

1 - SIXTH GEAR FRICTION RING
2 - SIXTH GEAR

(25) Install sixth gear synchronizer friction ring (1) (Fig. 82) on sixth gear (2).

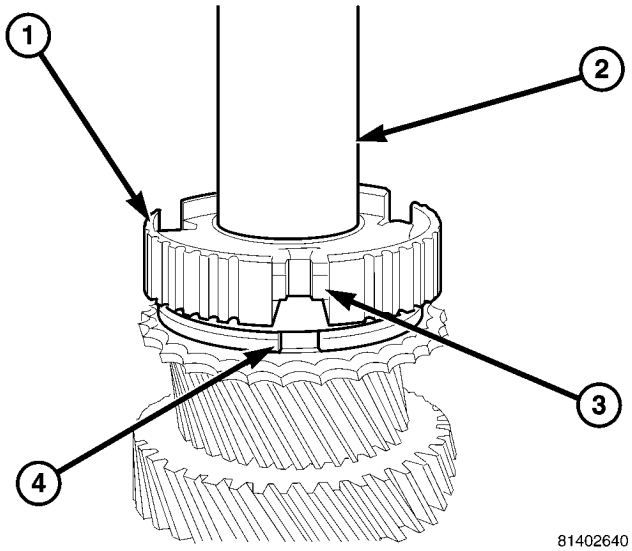


Fig. 83 5-6 HUB INSTALLER

1 - SYNCHRONIZER HUB
2 - INSTALLER
3 - DETENT OPENING
4 - FRICTION RING TAB

(26) Install 5-6 synchronizer hub (1) with Installer W-262 (2). Align hub detent opening (3) with friction ring lugs (4) and press hub on mainshaft (Fig. 83).

NOTE: 5-6 synchronizer hub center, is offset and must be install large offset down.

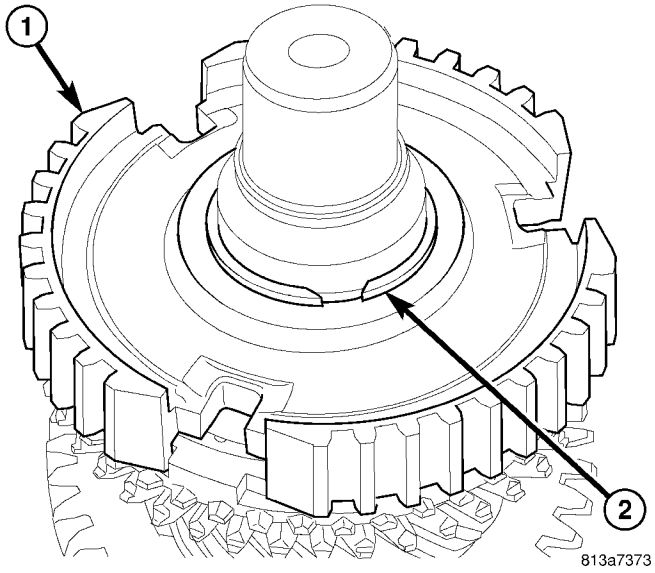


Fig. 84 5-6 SYNCHRO HUB SNAP RING

1 - SYNCHRONIZER HUB
2 - SNAP RING

(27) Install 5-6 synchronizer hub (1) (Fig. 84) snap ring (2).

NOTE: Reuse original snap ring or thickest snap ring that will fit.

(28) Install 5-6 synchronizer sleeve on hub (1).

REAR HOUSING

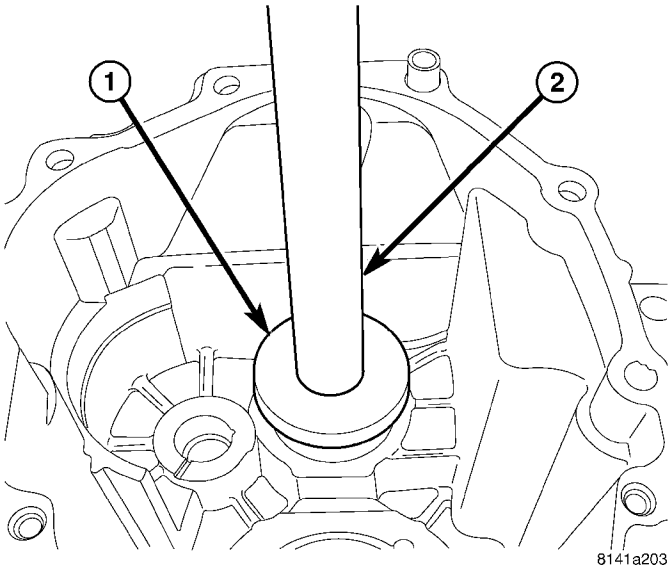


Fig. 85 REAR COUNTERSHAFT BEARING

1 - INSTALLER
2 - HANDLE

(1) Install countershaft bearing (Fig. 85) into rear housing with Installer 9643 (1) and Handle C-4171.