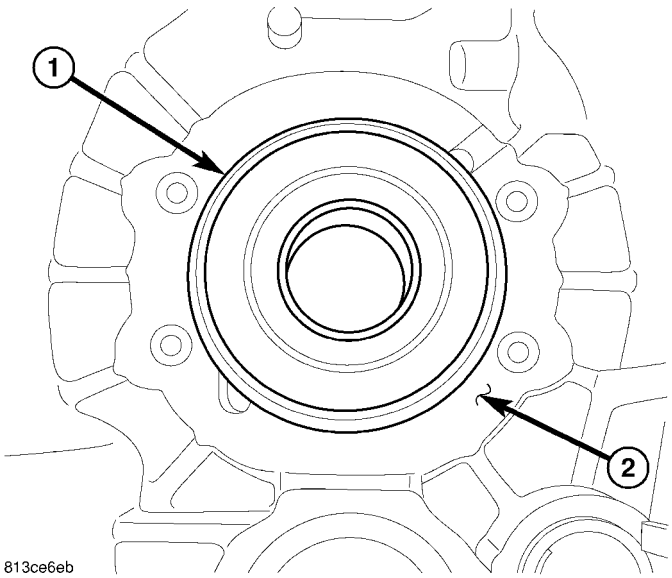


Fig. 86 REAR HOUSING MAINSHAFT BEARING

1 - MAINSHAFT BEARING
2 - HOUSING

(2) Install mainshaft bearing (1) (Fig. 86) into housing (2).

(3) Install bearing retainer and tighten bolts to 10 N·m (88 in. lbs.).

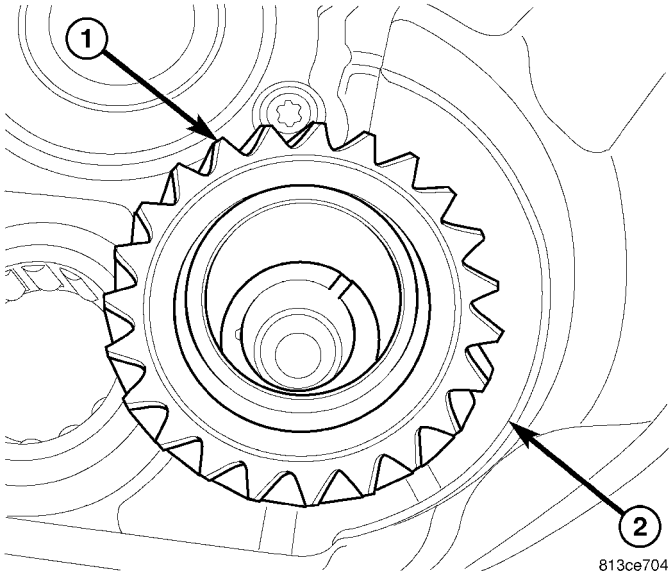


Fig. 87 REVERSE IDLER GEAR

1 - REVERSE IDLER GEAR
2 - HOUSING

(4) Install reverse idler gear (1) (Fig. 87) into housing (2).

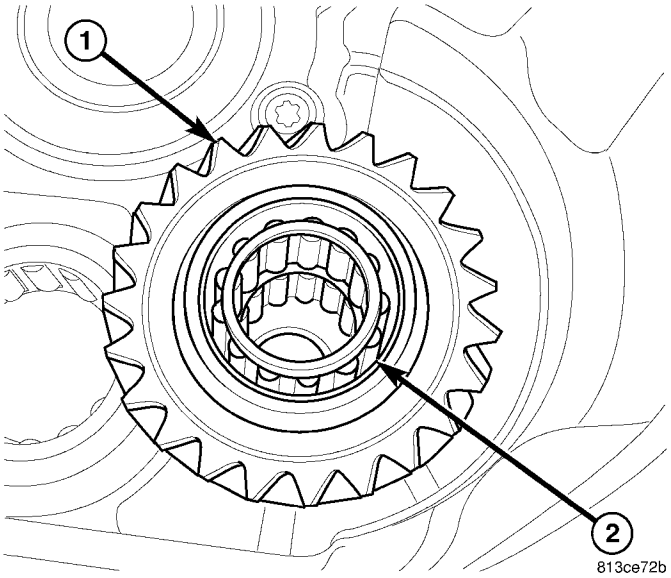


Fig. 88 IDLER GEAR BEARING

1 - REVERSE IDLER GEAR
2 - BEARING

(5) Install idler gear (1) (Fig. 88) bearing (2) into gear.

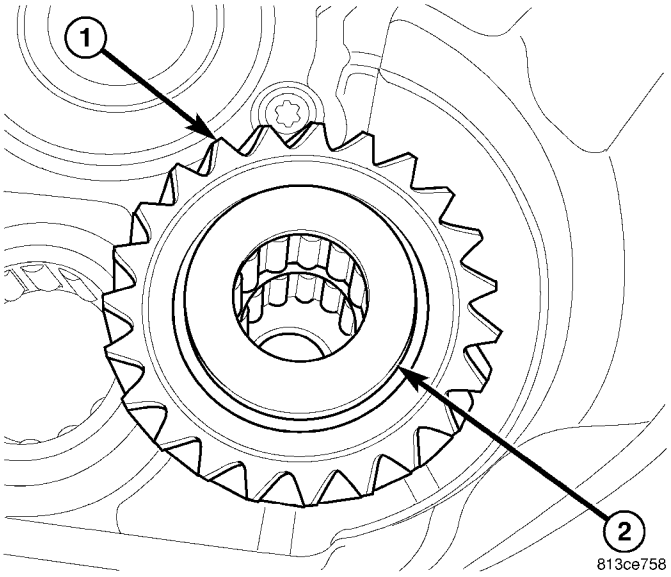


Fig. 89 IDLER GEAR THRUST WASHER

1 - REVERSE IDLER GEAR
2 - THRUST WASHER

(6) Install idler gear (1) (Fig. 89) thrust washer (2) on idler gear.