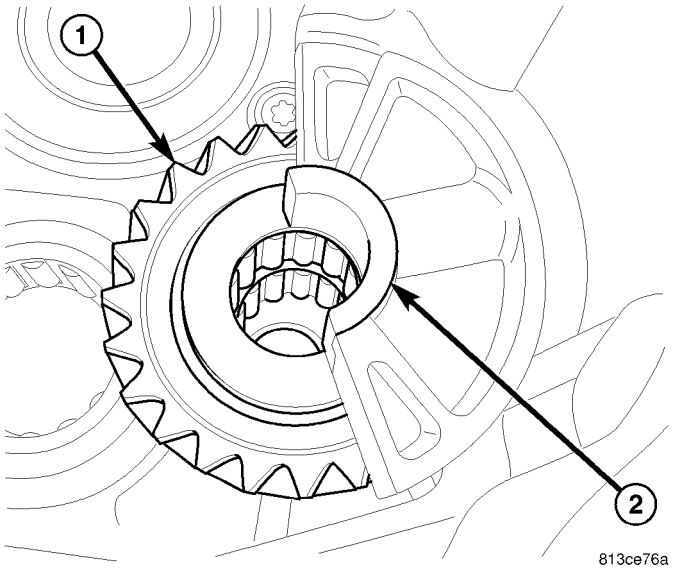

Fig. 90 IDLER SHAFT SUPPORT

1 - REVERSE IDLER GEAR
2 - SHAFT SUPPORT

(7) Install idler gear (1) (Fig. 90) shaft support (2) into housing.

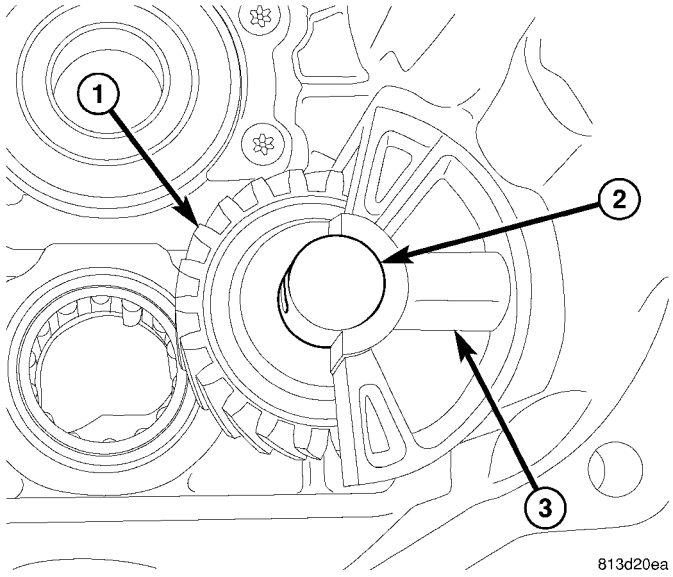

Fig. 91 IDLER GEAR SHAFT

1 - IDLER GEAR
2 - IDLER GEAR SHAFT
3 - SHAFT SUPPORT HOLE

(8) Install idler gear (1) (Fig. 91) shaft (2) with shaft bolt hole alined with shaft support hole (3).

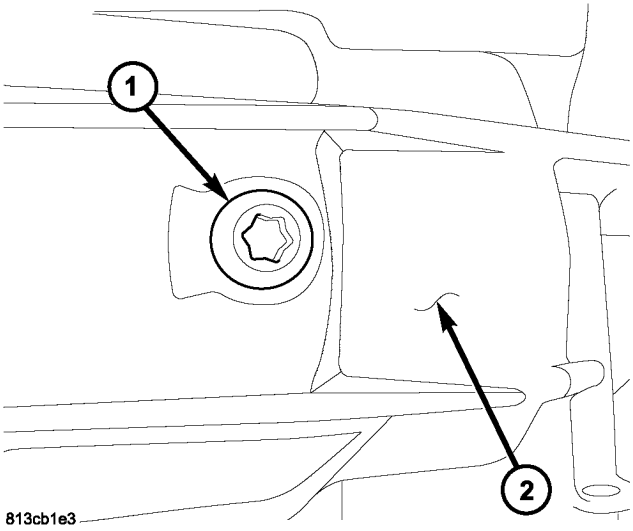

Fig. 92 IDLER SHAFT BOLT

1 - IDLER GEAR SHAFT BOLT
2 - HOUSING

(9) Install idler gear shaft bolt (1) (Fig. 92) into the housing (2) and tighten to 20 N.m (15 ft. lbs.).

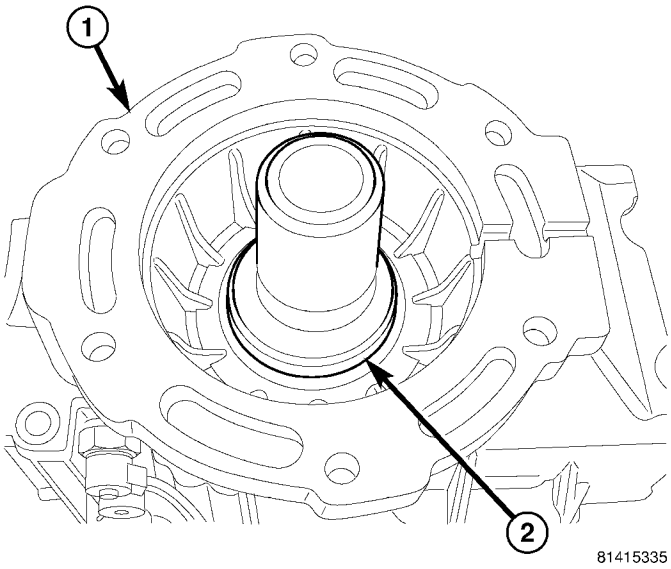

Fig. 93 OUTPUT SHAFT SEAL 4X4

1 - HOUSING
2 - INSTALLER

(10) Install 4x4 output shaft seal into rear housing (1) with Installer 9638 (2) (Fig. 93). Install 4x2 output shaft seal into rear housing with Installer 9635 and Installer 6448A.