INPUT SHAFT

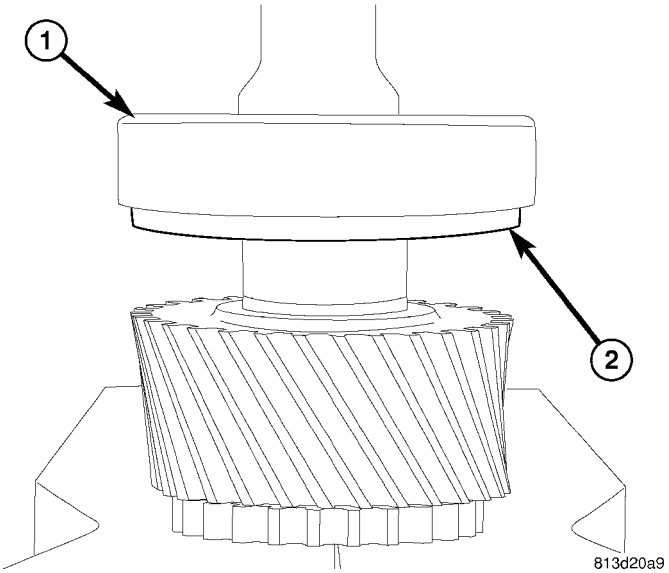

Fig. 94 INPUT SHAFT BEARING LIP

1 - INPUT SHAFT BEARING
2 - BEARING RETAINER LIP

(1) Install input shaft bearing (1) (Fig. 94) on input shaft with the bearing retainer lip (2) facing fifth gear.

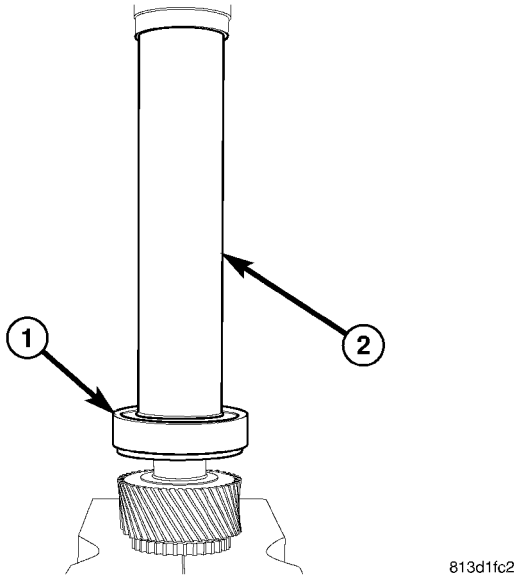

Fig. 95 INPUT SHAFT BEARING INSTALLER

1 - BEARING
2 - INSTALLER

(2) Install input shaft bearing (1) (Fig. 95) with Installer 6448A (2) and a press.

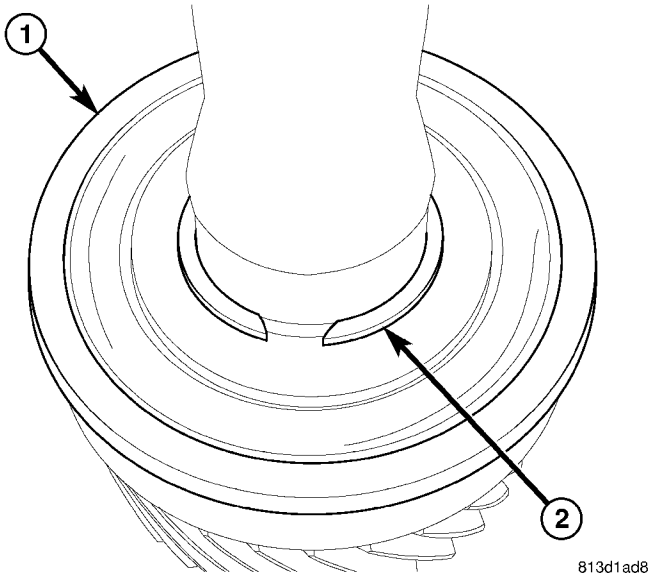

Fig. 96 INPUT SHAFT BEARING SNAP RING

1 - INPUT SHAFT BEARING
2 - SNAP RING

(3) Install input shaft bearing (1) snap-ring (2) (Fig. 96).

NOTE: Reuse original snap ring or thickest snap ring that will fit.

FRONT HOUSING

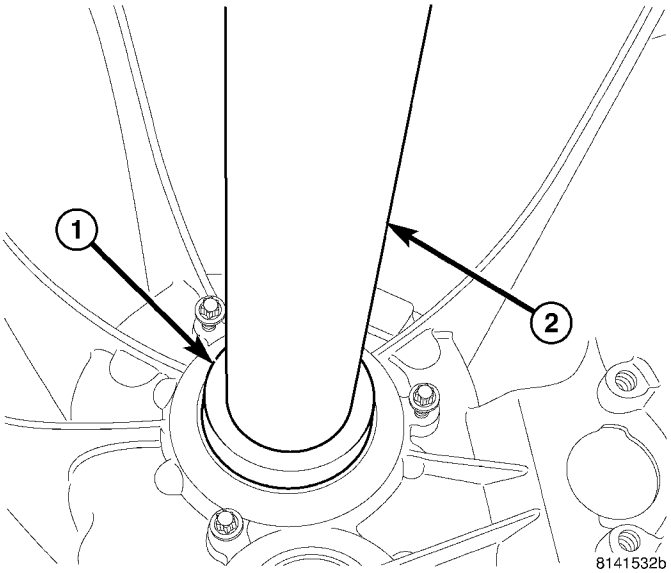

Fig. 97 INPUT SHAFT SEAL INSTALLER

1 - INSTALLER
2 - TUBE

(1) Install input shaft seal (Fig. 97) with Installer 9635 (1) Installer 6448A (2).