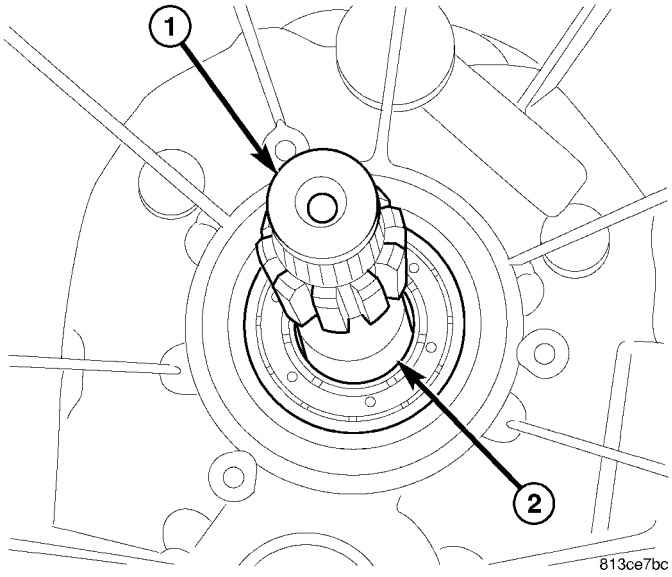

Fig. 98 INPUT SHAFT IN HOUSING

1 - INPUT SHAFT
2 - BEARING

(2) Install input shaft (1) (Fig. 98) with bearing (2) into housing.

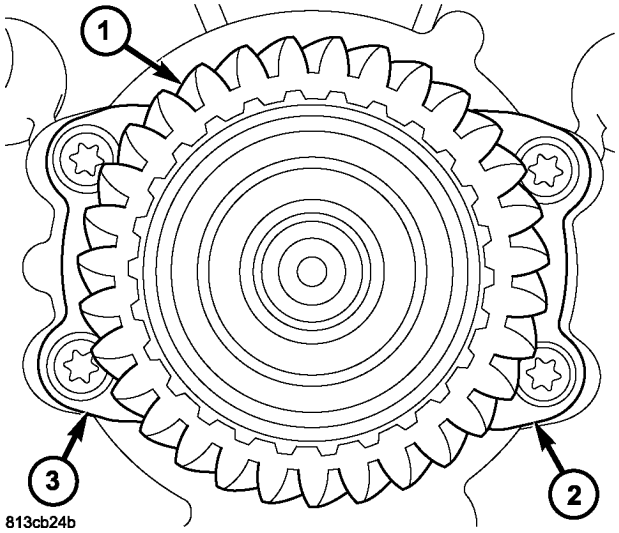

Fig. 99 INPUT SHAFT BEARING RETAINER

1 - INPUT SHAFT
2 - BEARING RETAINER
3 - BEARING RETAINER

(3) Install input shaft (1) (Fig. 99) bearing retainers (2, 3) and tighten bolts to 10 N·m (88 in. lbs.).

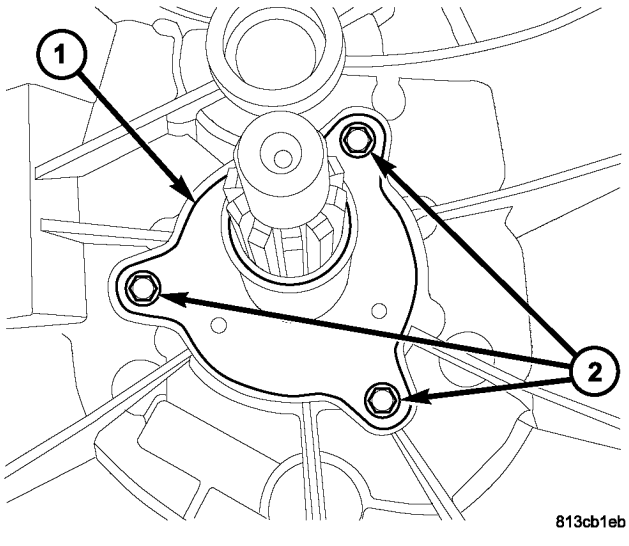

Fig. 100 INPUT SHAFT RETAINER

1 - INPUT SHAFT RETAINER
2 - BOLTS

(4) Install input shaft retainer (1) (Fig. 100) and tighten bolts (2) to 9 N·m (80 in. lbs.).

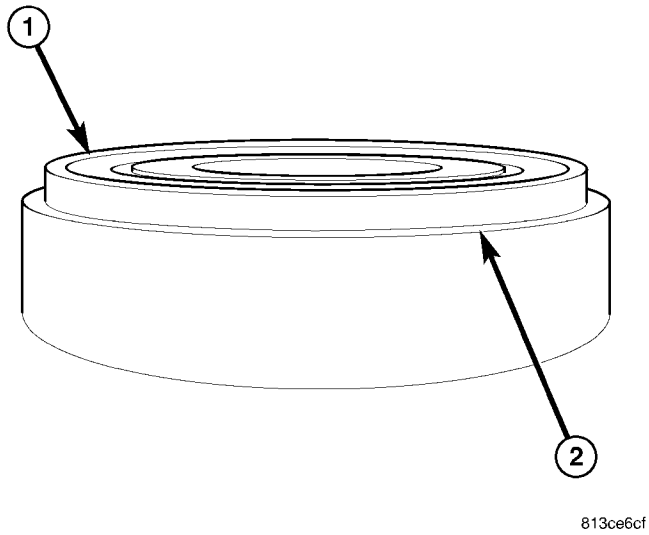

Fig. 101 BEARING RETAINER LIP

1 - COUNTERSHAFT BEARING
2 - BEARING RETAINER LIP

(5) Install countershaft bearing (1) (Fig. 101) into housing with bearing retainer lip (2) facing up.