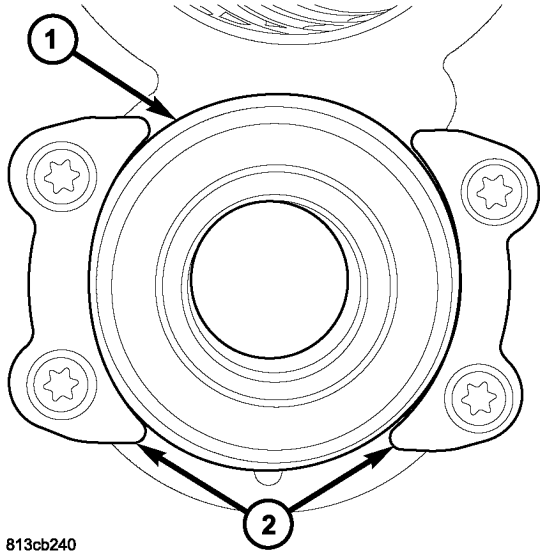


Fig. 102 COUNTERSHAFT BEARING RETAINER

1 - COUNTERSHAFT BEARING
2 - RETAINERS

(6) Install countershaft bearing (1) (Fig. 102) retainers (2) and tighten bolts to 10 N·m (88 in. lbs.).

FINAL ASSEMBLY

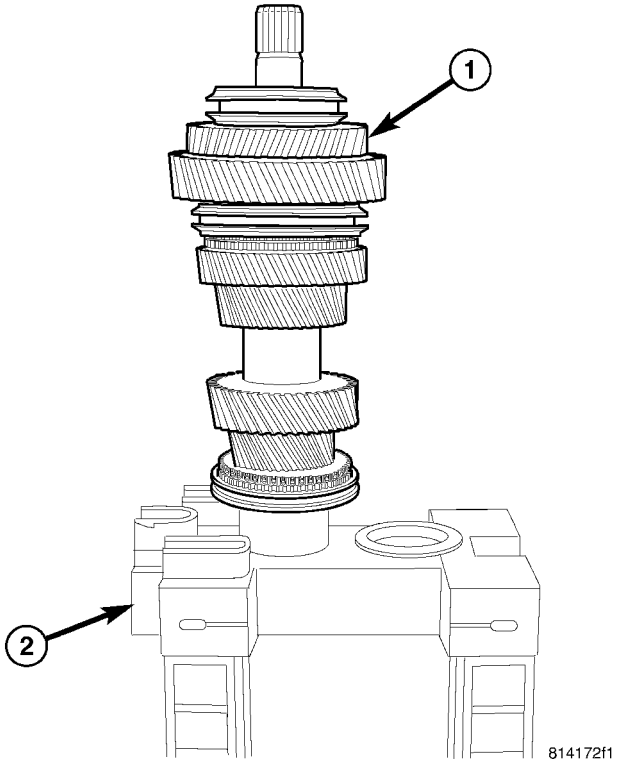


Fig. 103 MAINSHAFT IN FIXTURE

1 - MAINSHAFT
2 - FIXTURE

(1) Install mainshaft (1) onto Build Fixture 9633 (2) (Fig. 103).

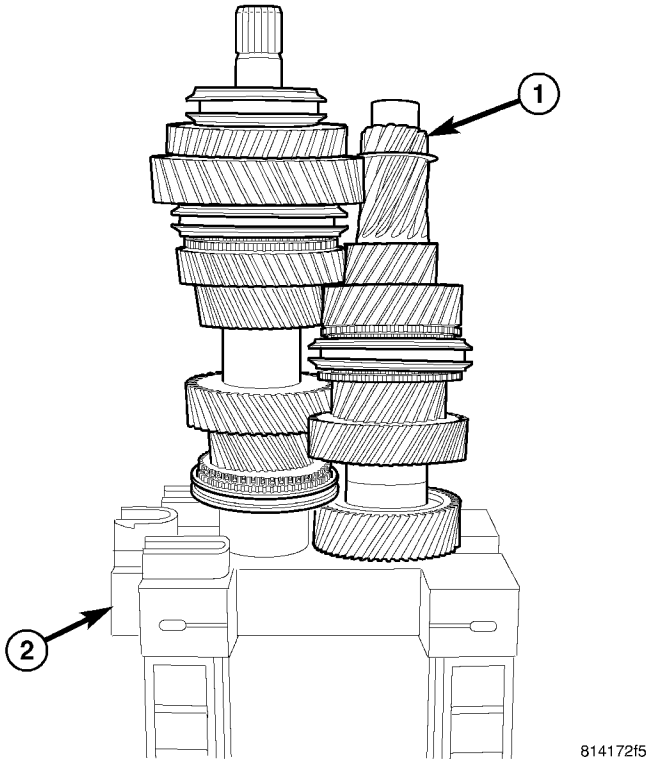


Fig. 104 COUNTERSHAFT IN FIXTURE

1 - COUNTERSHAFT
2 - FIXTURE

(2) Install countershaft (1) onto Build Fixture 9633 (2) (Fig. 104).

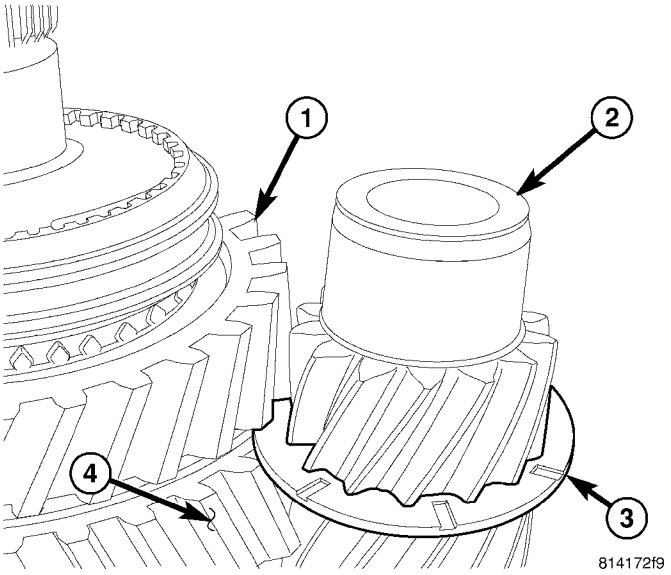


Fig. 105 OIL SLINGER

1 - REVERSE GEAR
2 - COUNTERSHAFT
3 - OIL SLINGER
4 - FIRST GEAR

(3) Install oil slinger (3) on countershaft (2) between reverse (1) and first gear (4) (Fig. 105).