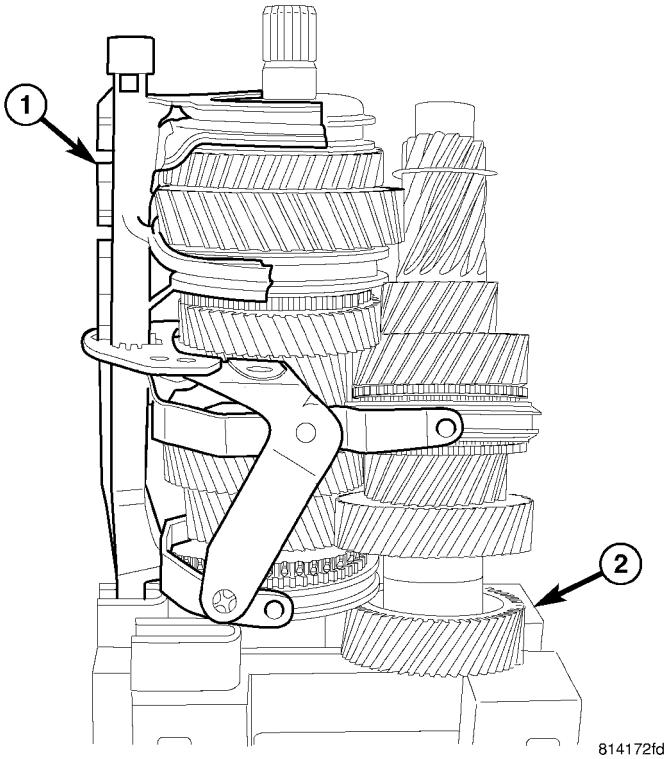


Fig. 106 SHIFT RAILS/FORKS IN FIXTURE

1 - SHIFT RAILS/FORKS
2 - FIXTURE

(4) Install shift rails and forks (1) onto Fixture 9633 (2) and countershaft/mainshaft. (Fig. 106).

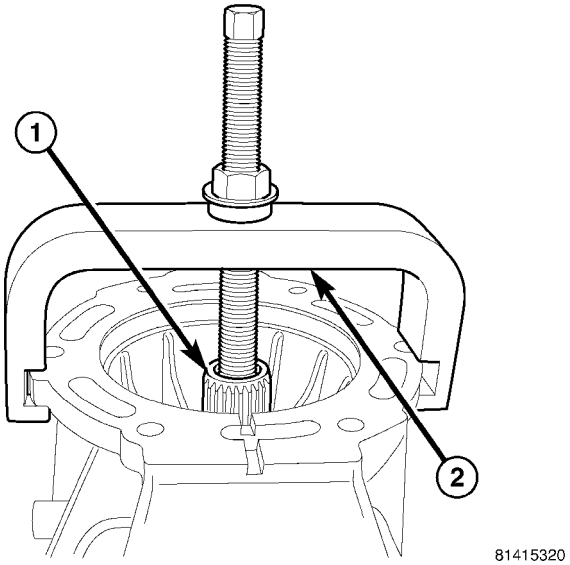


Fig. 107 MAINSHAFT INSTALLER

1 - MAINSHAFT
2 - REMOVER/INSTALLER

(5) Install rear housing on mainshaft (1) (Fig. 107) with Installer 9636 (2).

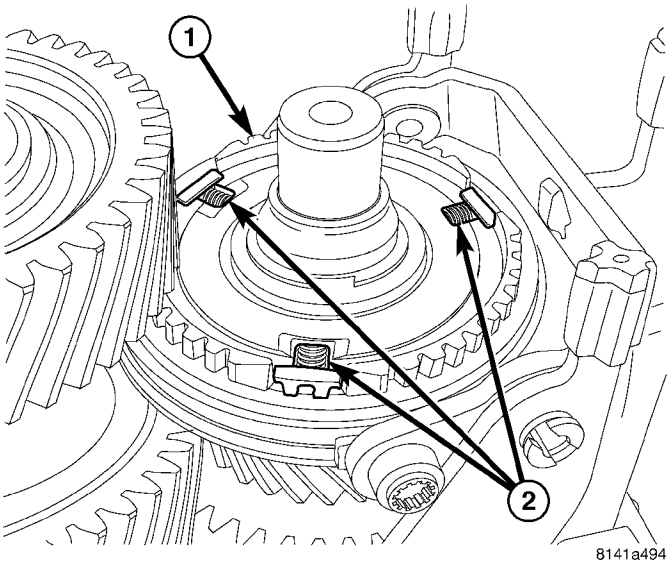


Fig. 108 5-6 SYNCHRONIZER DETENTS

1 - HUB
2 - DETENTS

(6) Remove rear housing with mainshaft, countershaft and shift rails from fixture. Set assembly on rear housing with shafts pointing up.

(7) Install 5-6 synchronizer hub (1) (Fig. 108) detents, springs, and balls (2).

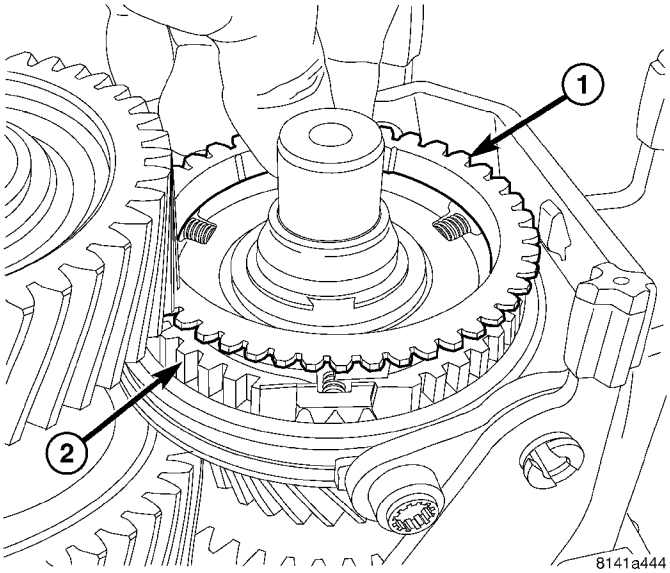


Fig. 109 FIFTH GEAR FRICTION RING

1 - FRICTION RING
2 - HUB

(8) Install fifth gear synchronizer friction ring (1) (Fig. 109) on 5-6 synchronizer hub (2).