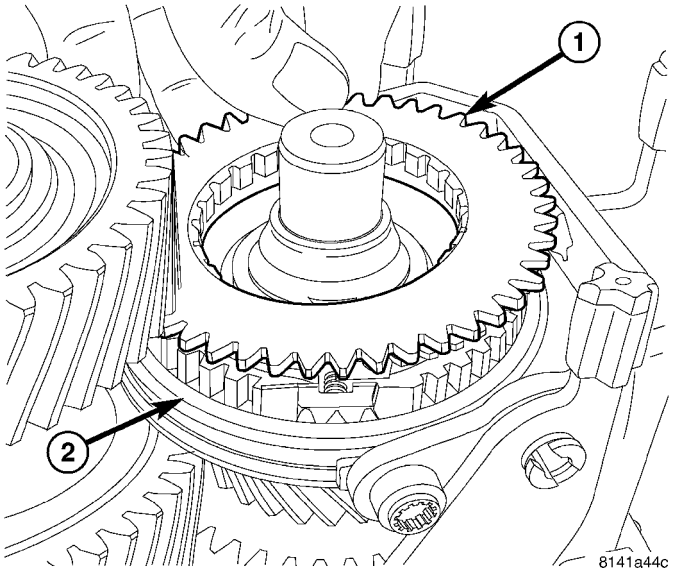


Fig. 110 FIFTH GEAR BLOCKER RING

1 - BLOCKER RING
2 - HUB

(9) Install fifth gear (Fig. 110) blocker ring (1) on 5-6 synchronizer hub (2). Then hold blocker ring and center synchronizer sleeve.

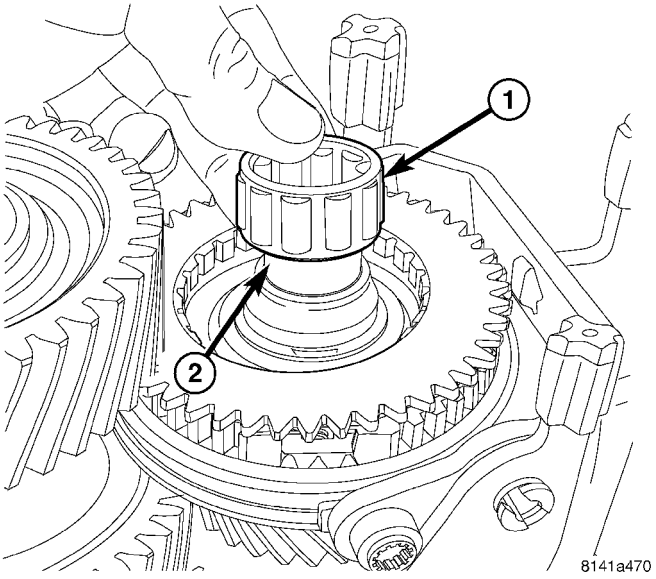


Fig. 111 INPUT SHAFT ROLLER BEARING

1 - ROLLER BEARING
2 - MAINSHAFT

(10) Install input shaft (Fig. 111) roller bearing (1) on mainshaft (2)..

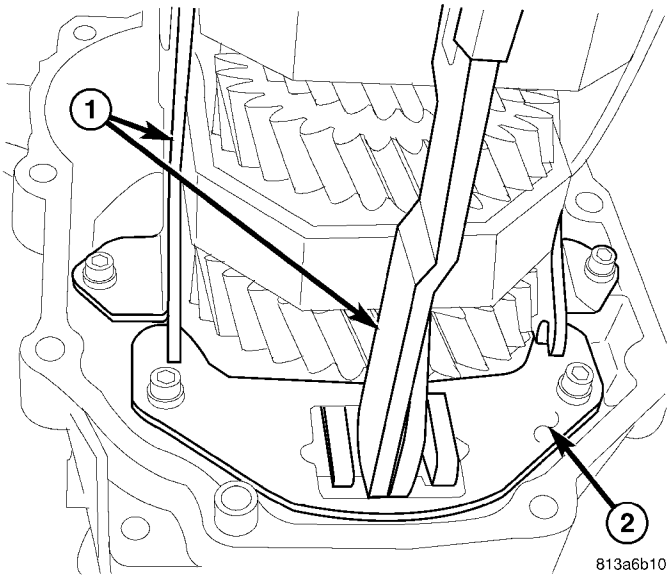


Fig. 112 SHIFT RAIL SUPPORT PLATE

1 - SHIFT RAILS
2 - SUPPORT PLATE

(11) Install shift rail (1) (Fig. 112) support plate (2) bolts and tighten to 8 N·m (71 in. lbs.).

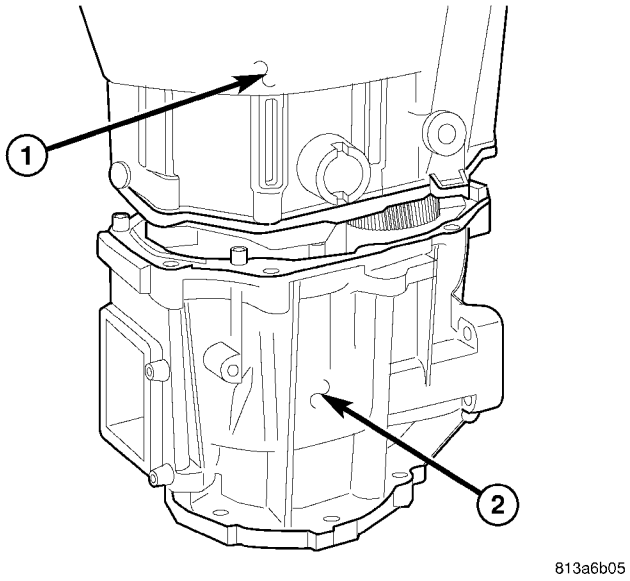


Fig. 113 SPLIT HOUSING

1 - FRONT HOUSING
2 - REAR HOUSING

(12) Apply MOPAR® Gasket Maker to front housing.

(13) Install front housing (1) (Fig. 113) on rear housing (2) and tighten bolts to 28 N·m (20 ft. lbs.).