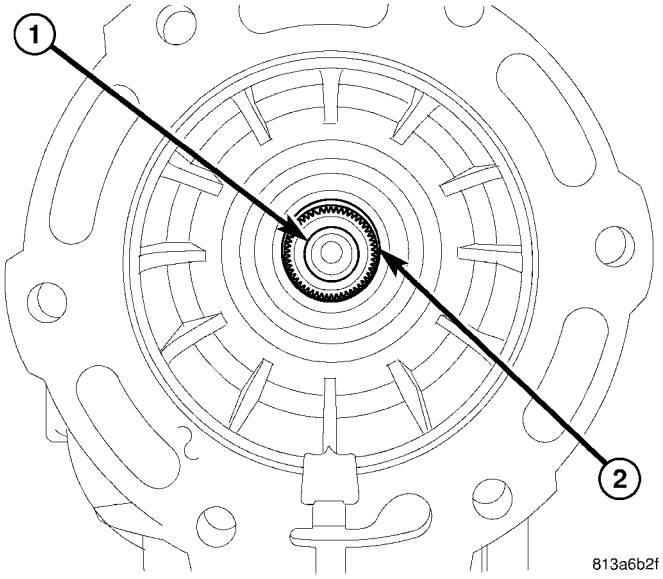


***Fig. 114 OUTPUT SHAFT SNAP RING***

1 - OUTPUT SHAFT
2 - SNAP RING

(14) Install output shaft (1) (Fig. 114) snap ring (2) 4x4 only.

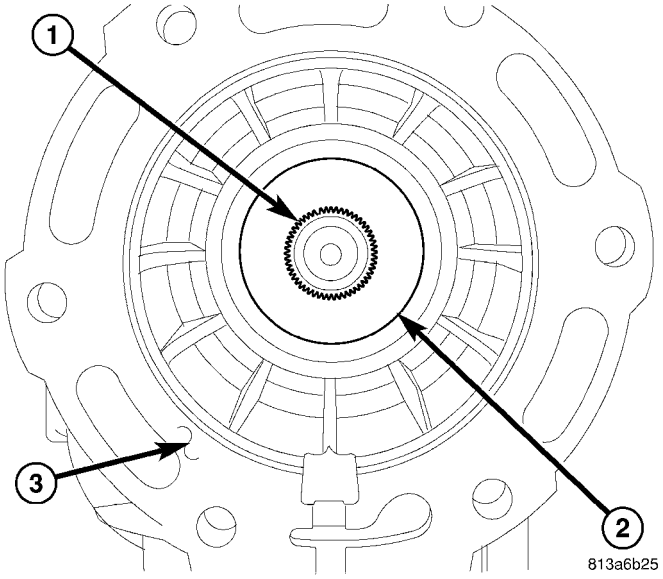


***Fig. 115 OUTPUT SHAFT SEAL***

1 - OUTPUT SHAFT
2 - SEAL
3 - REAR HOUSING

(15) Install output shaft (1) (Fig. 115) seal (2) in rear housing with Installer 9638.

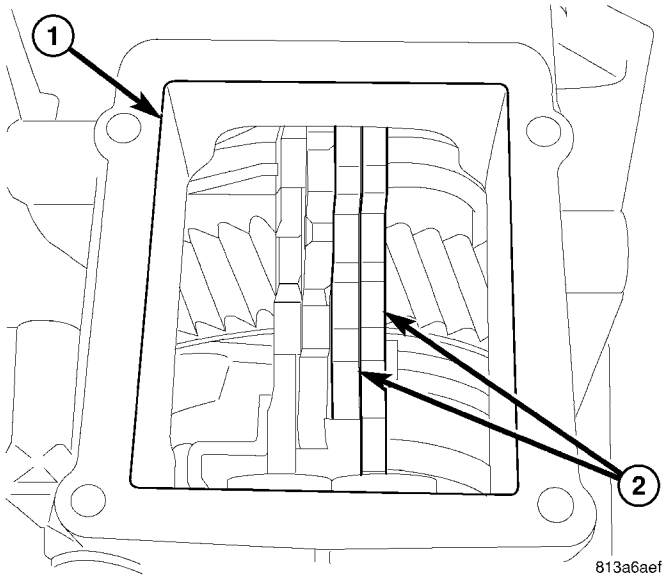


***Fig. 116 SHIFT TOWER OPENING***

1 - SHIFT TOWER OPENING
2 - SHIFT RAILS

(16) Through the shift tower opening (1) (Fig. 116) move two shift rails (2) forward to lock the transmission in two gear.

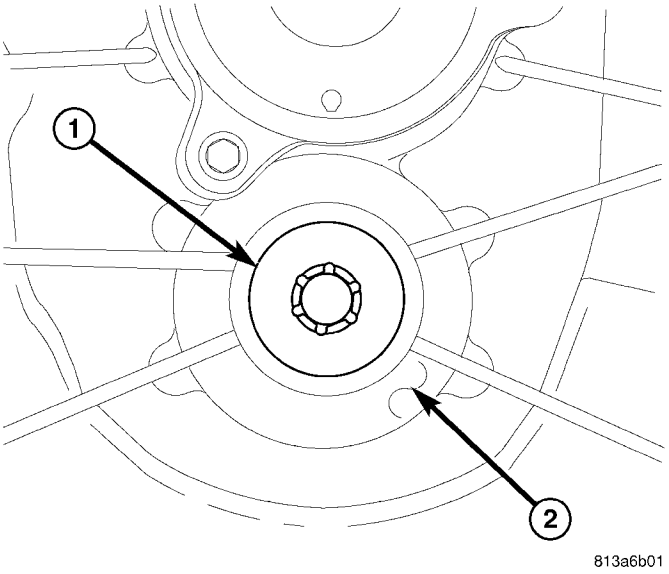


***Fig. 117 COUNTERSHAFT BOLT***

1 - COUNTERSHAFT BOLT
2 - FRONT HOUSING

(17) Install countershaft bolt (1) (Fig. 117) into the front housing (2) and tighten to 100 N·m (74 ft. lbs.).