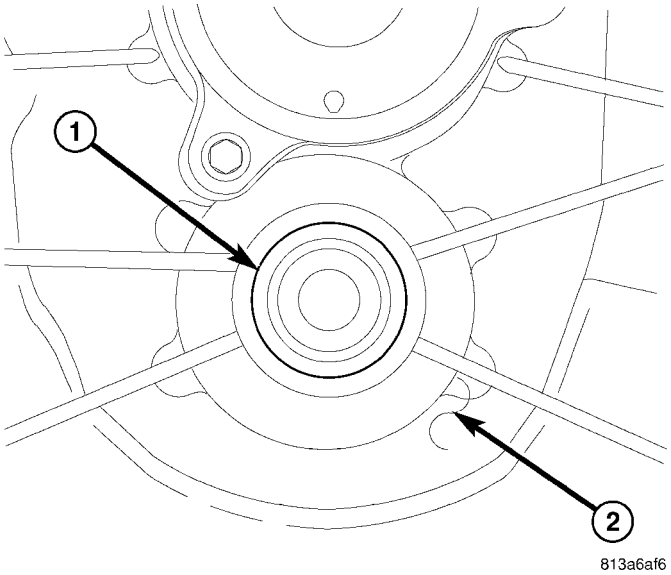

Fig. 118 COUNTERSHAFT PLUG

1 - COUNTERSHAFT PLUG
2 - FRONT HOUSING

(18) Install countershaft plug (1) (Fig. 118) in front housing (2) with Installer 7828-A and Handle C-4171.

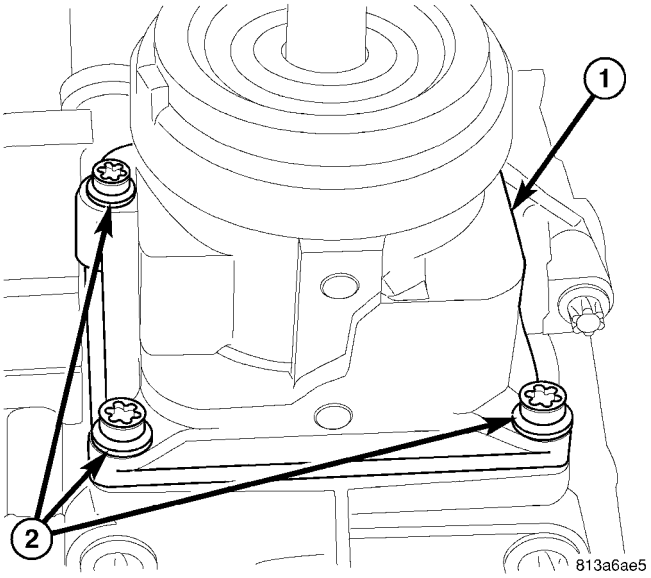

Fig. 119 SHIFT TOWER

1 - SHIFT TOWER
2 - BOLTS

(19) Move shift rails to neutral.

(20) Apply MOPAR® Gasket Maker to shift tower.

(21) Install shift tower (1) (Fig. 119) and tighten bolts (2) to 14 N·m (10 ft. lbs.).

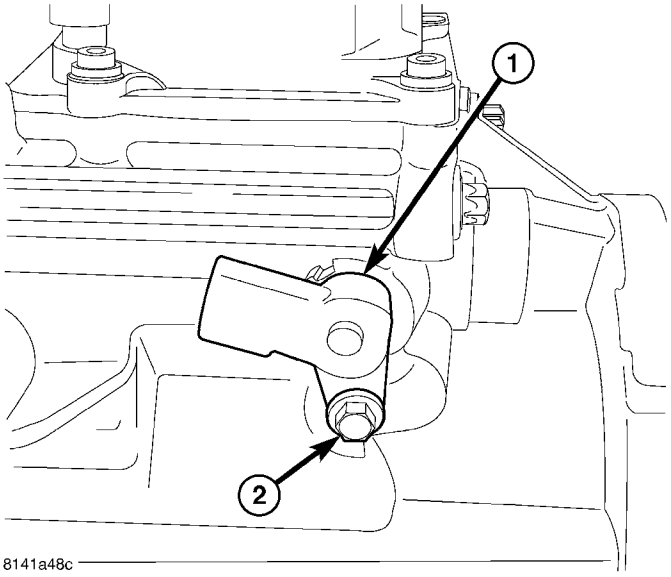

Fig. 120 BACK UP LAMP SWITCH

1 - SWITCH
2 - BOLTS

(22) Install back up lamp switch (1) and bolt (2) (Fig. 120).

INSTALLATION

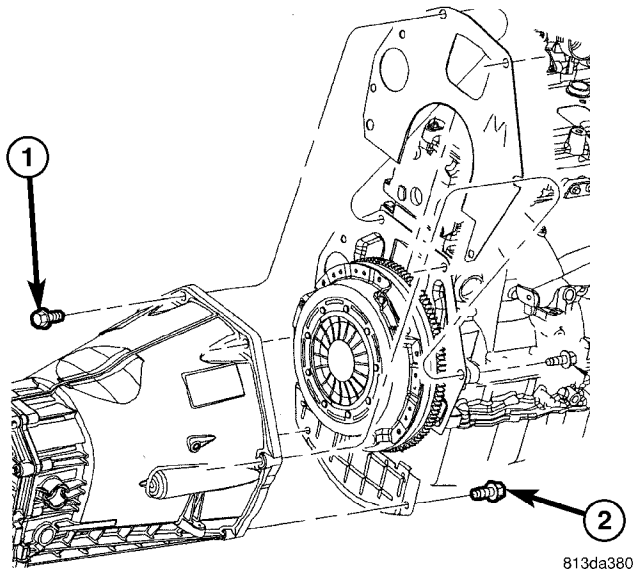

Fig. 121 2.4L ENGINE

1. TRANSMISSION BOLT
2. DUST SHIELD BOLT

(1) Install transmission on engine.

(2) On 2.4L engine tighten bolts (1) to 75 N·m (55 ft. lbs.). Install lower dust shield and tighten bolts (2) to 34 N·m (25 ft. lbs.) (Fig. 121).