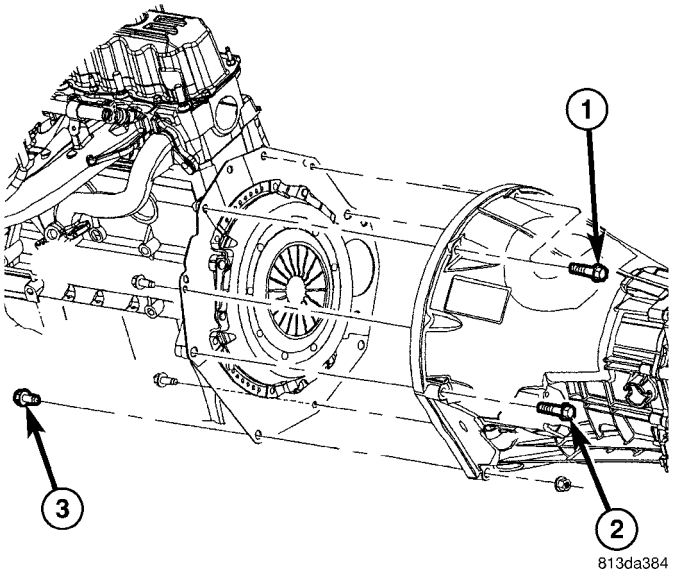


Fig. 122 4.0L ENGINE

1. UPPER TRANSMISSION BOLTS
2. SIDE DUST COVER BOLTS
3. LOWER DUST COVER BOLTS

(3) On 4.0L engine tighten bolts (1) to 37 N·m (27 ft. lbs.). Install side and lower dust shield and tighten bolts (2) (3) to 58 N·m (43 ft. lbs.) (Fig. 122).

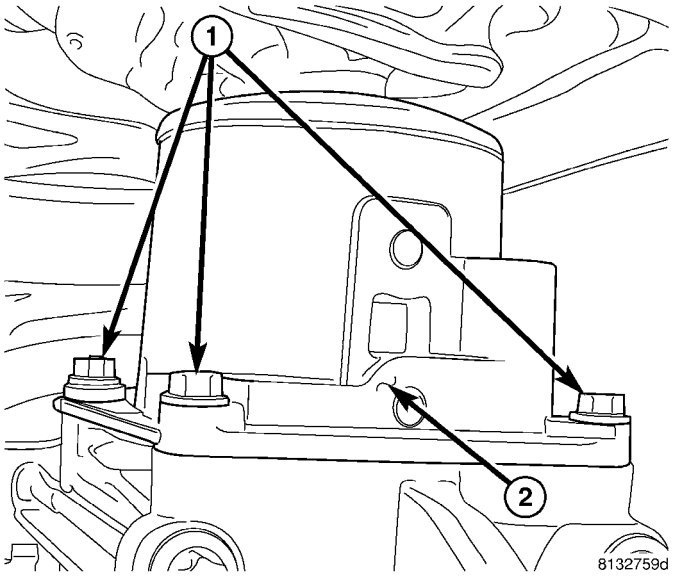


Fig. 123 SHIFT LEVER

1. BOLTS
2. SHIFT TOWER

(4) Clean shift tower and mating surface then apply Mopar® Gasket Maker to shift tower.

(5) Install shift tower (2) and tighten bolts (1) to 10 N·m (7 ft. lbs.) (Fig. 123).

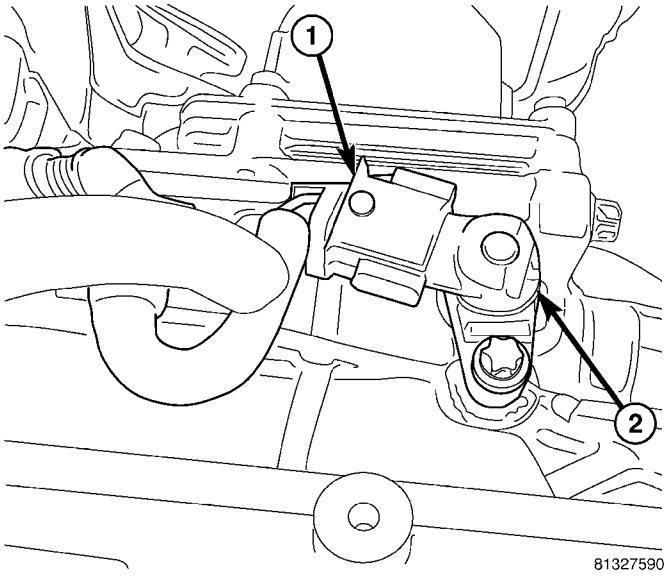


Fig. 124 BACKUP LAMP SWITCH

1. CONNECTOR
2. BACKUP LAMP SWITCH

(6) Install backup lamp (2) wiring connector (1) (Fig. 124).

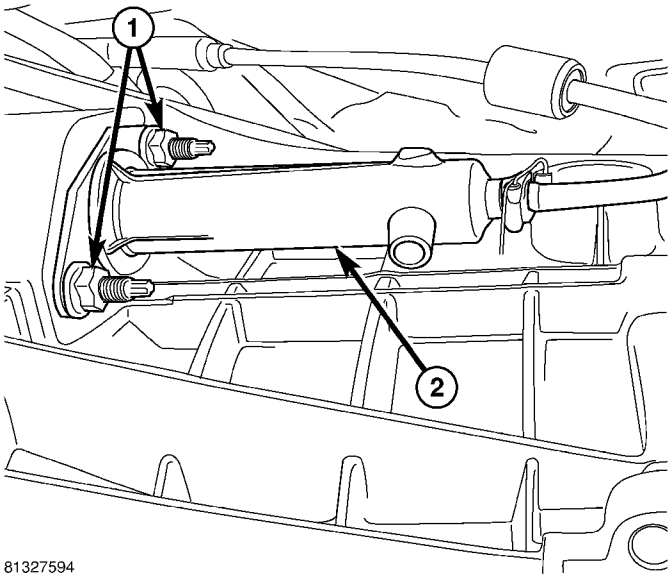


Fig. 125 CLUTCH SLAVE CYLINDER

1. BOLTS
2. SLAVE CYLINDER

(7) Install clutch slave cylinder (2) and mounting nuts (1) (Fig. 125).