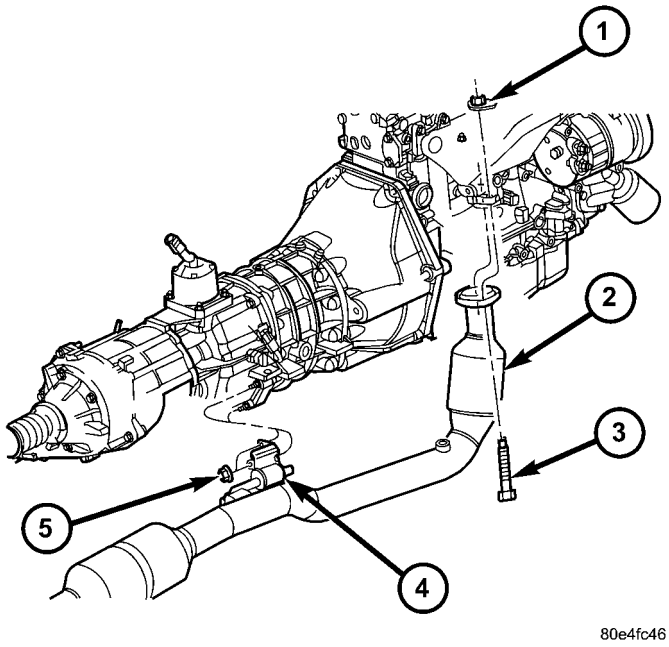

Fig. 126 2.4L CATALYST ASSEMBLY - 4x4

1- FLANGED NUT
2- CATALYST ASSEMBLY
3- BOLT
4- HANGER
5- NUT

(8) Install catalyst assembly (2) on 2.4L engine (Fig. 126).

(9) Install transmission crossmember and tighten bolts to 47 N·m (35 ft. lbs.). Install transmission mount bolts and tighten to 47 N·m (35 ft. lbs.).

(10) Install transfer case, if equipped.

(11) Install transfer case shift linkage.

(12) Install transfer case wiring connector and vent hose.

(13) Install propeller shaft/shafts with reference marks aligned.

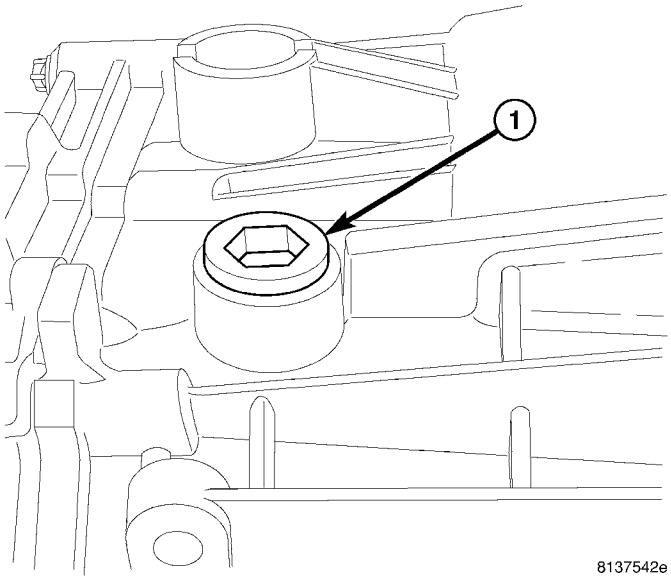

Fig. 127 FILL PLUG

1. FILL PLUG

(14) Remove fill plug (1) and fill transmission withn lubricant (Fig. 127).

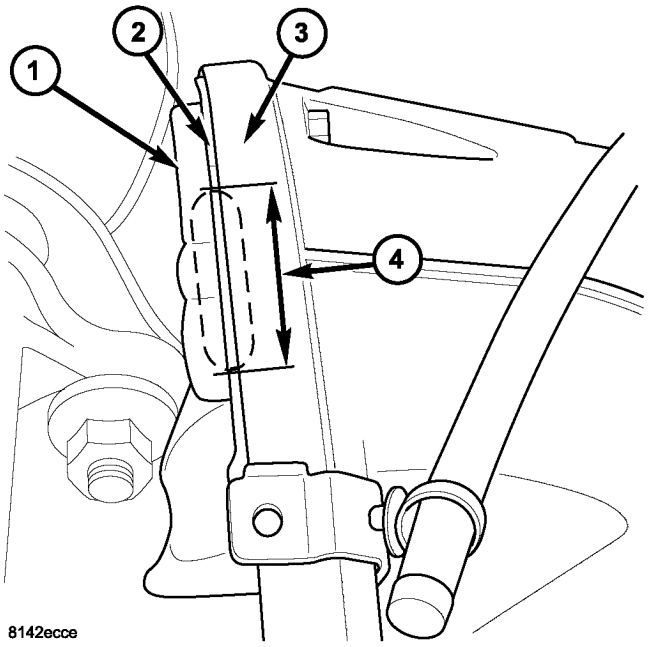

Fig. 128 ADAPTER OPENING DETAIL

1 - BACK OF ENGINE
2 - ADAPTER PLATE
3 - BELLHOUSING - MANUAL TRANSMISSION
4 - ADAPTER PLATE OPENING - APPLY SEALER HERE

(15) Locate narrow adapter plate (2) opening towards the rear of the engine (1) and top of the transmission bellhousing (3) from the drivers side of the engine compartment (Fig. 128).

(16) Thoroughly clean around the adapter opening (2) with throttle body cleaner and allow cleaner to dry.