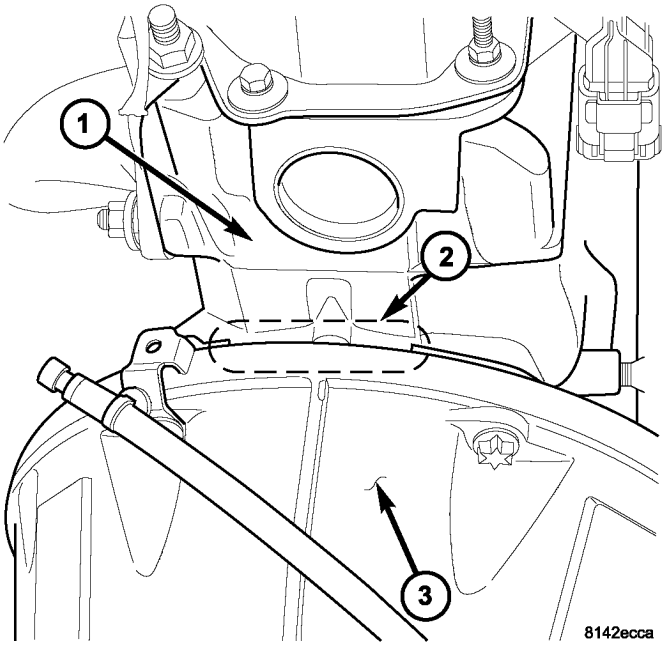

Fig. 129 LOCATION OF ADAPTER OPENING

1 - BACK OF ENGINE
2 - LOCATION OF NARROW OPENING DUE TO SLOT IN ADAPTER PLATE
3 - TOP OF BELLHOUSING - MANUAL TRANSMISSION

(17) With your finger, apply a sufficient amount of RTV over the spacer opening (4). Verify that the adapter (2) opening (4) is completely sealed off by the RTV (Fig. 129).

SPECIFICATIONS

MANUAL TRANSMISSION - NSG370

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Drain Plug	30	22	-
Fill Plug	30	22	-
Shift Tower Bolts	10	7	-
Housing Bolts	28	20	-
Input Shaft Retainer Bolts	9	-	80
Bearing Retainer Bolts	10	-	88
Shift Rail Support Bolts	8	-	71
Idler Gear Shaft Bolt	20	15	-
Countershaft Bolt	100	74	-
Transmission Mounting Bolts 2.4 L	75	55	-
Dust Shield 2.4 L	34	25	-
Transmission Mounting Bolts 4.0 L	37	27	-
Dust Shield 4.0 L	58	43	-