TORQUE CONVERTER LEAKAGE

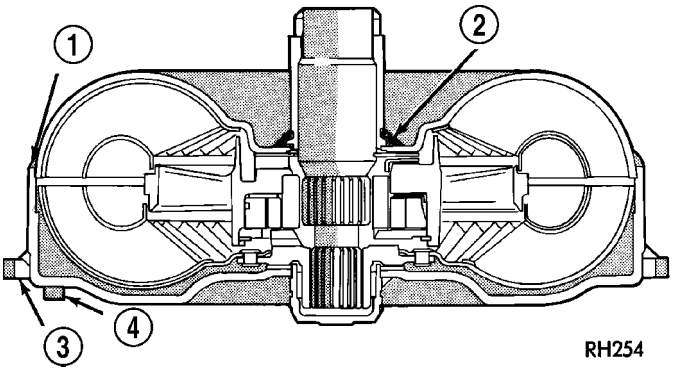

Fig. 12 Converter Leak Points - Typical

1 - OUTSIDE DIAMETER WELD
2 - TORQUE CONVERTER HUB WELD
3 - STARTER RING GEAR
4 - LUG

Possible sources of torque converter leakage are:

- Torque converter weld leaks at the outside diameter weld. (Fig. 12)
- Torque converter hub weld. (Fig. 12)

STANDARD PROCEDURE - ALUMINUM THREAD REPAIR

Damaged or worn threads in the aluminum transmission case and valve body can be repaired by the use of Heli-Coils®, or equivalent. This repair consists of drilling out the worn-out damaged threads. Then tap the hole with a special Heli-Coil® tap, or equivalent, and installing a Heli-Coil® insert, or equivalent, into the hole. This brings the hole back to its original thread size.

Heli-Coil®, or equivalent, tools, and inserts are readily available from most automotive parts suppliers.

REMOVAL

(1) Disconnect battery negative cable.

(2) Raise and support vehicle.

(3) Disconnect and lower or remove necessary exhaust components.

(4) Remove engine-to-transmission bending braces or engine collar.

(5) Remove starter motor. (Refer to 8 - ELECTRICAL/STARTING/STARTER MOTOR - REMOVAL)

(6) On 4.0L engine equipped vehicles, disconnect and remove crankshaft position sensor (Fig. 13). Retain sensor attaching bolt.

CAUTION: The crankshaft position sensor can be damaged during transmission removal (or installation) if the sensor is left in place. To avoid damage, remove the sensor before removing the transmission.

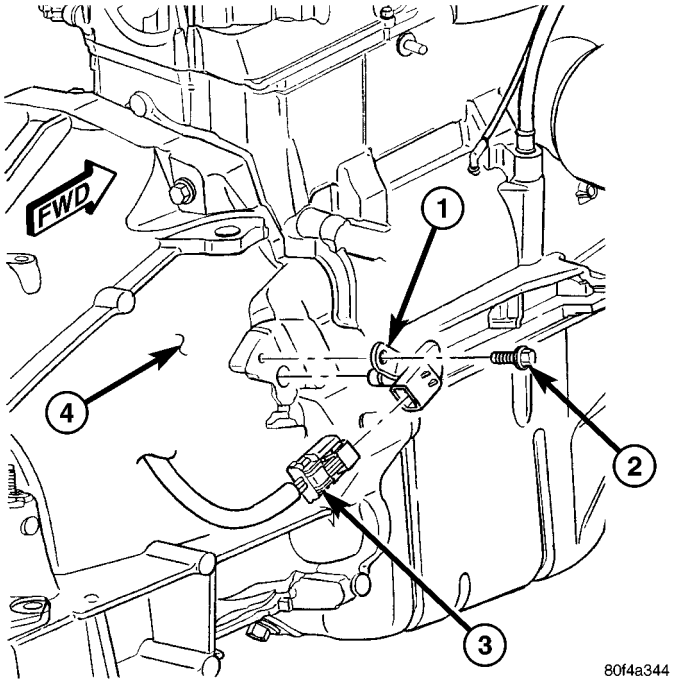

Fig. 13 Crankshaft Position Sensor

1 - CRANKSHAFT POSITION SENSOR
2 - MOUNTING BOLT
3 - ELECTRICAL CONNECTOR
4 - TRANSMISSION BELLHOUSING

(7) If transmission is being removed for overhaul, remove transmission oil pan, drain fluid and reinstall pan. (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE/FLUID - STANDARD PROCEDURE)

(8) Remove torque converter access cover.

(9) Rotate crankshaft in clockwise direction until converter bolts are accessible. Then remove bolts one at a time. Rotate crankshaft with socket wrench on dampener bolt.

(10) Mark propeller shaft and axle yokes for assembly alignment. Then disconnect and remove propeller shafts. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - REMOVAL)

(11) Disconnect wires from the input and output speed sensors (Fig. 14).

(12) Disconnect wires from the transmission range sensor (Fig. 14) and the solenoid/pressure switch assembly (Fig. 15).