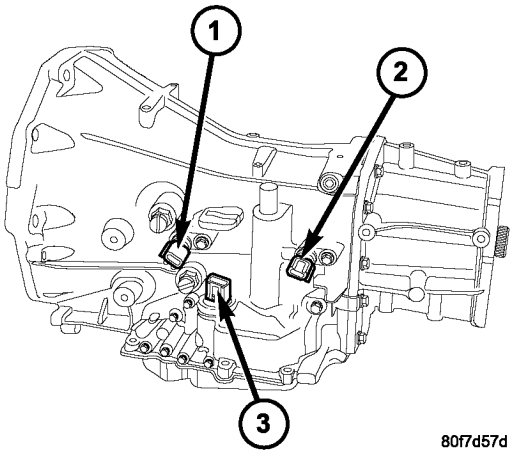

Fig. 14 Input and Output Speed Sensors and Transmission Range Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR

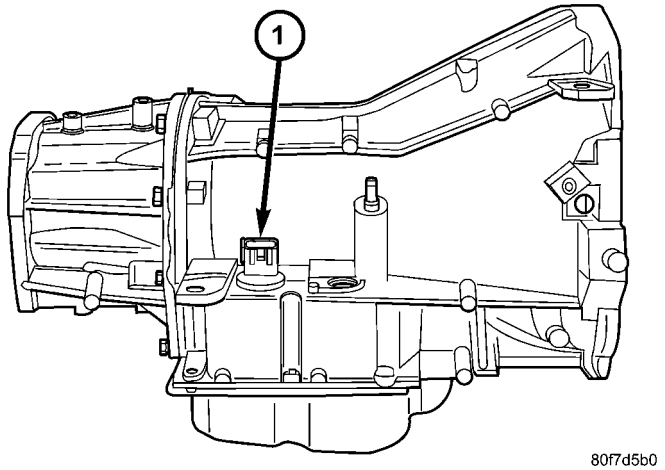

Fig. 15 Solenoid/Pressure Switch Assembly

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY CONNECTOR

(13) Disconnect gearshift cable from transmission manual valve lever.

(14) Disconnect shift rod from transfer case shift lever or remove shift lever from transfer case.

(15) Support rear of engine with safety stand or jack.

(16) Raise transmission slightly with service jack to relieve load on skid plate and transmission support.

(17) Remove bolts securing rear support (Fig. 16) and cushion to transmission and skid plate. Raise transmission slightly, slide exhaust hanger arm from bracket and remove rear support.

(18) Remove bolts attaching skid plate (Fig. 16) to frame and remove skid plate. (Refer to 13 - FRAME & BUMPERS/FRAME/TRANSFER CASE SKID PLATE - REMOVAL)

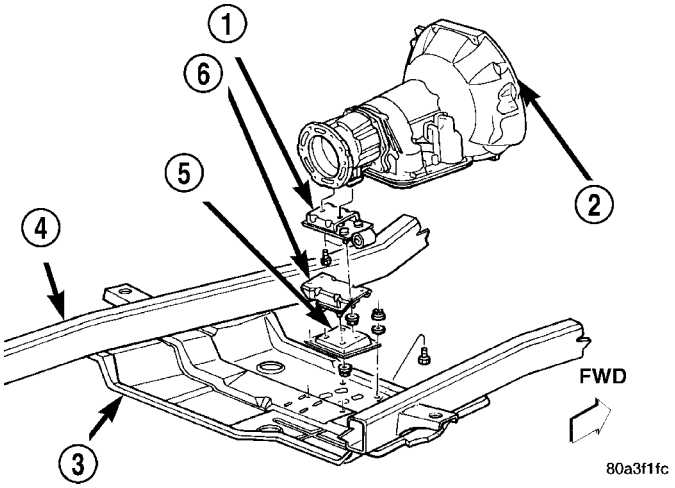

Fig. 16 Transmission Mount - Automatic Transmission

1 - TRANSMISSION SUPPORT BRACKET
2 - AUTOMATIC TRANSMISSION
3 - SKID PLATE
4 - FRAME
5 - TRANSMISSION MOUNT SUPPORT BRACKET
6 - CUSHION

(19) Disconnect transfer case vent hose.

(20) Remove transfer case. (Refer to 21 - TRANSMISSION/TRANSFER CASE - REMOVAL)

(21) Remove fill tube bracket bolts and pull tube out of transmission. Retain fill tube seal. Remove the bolt attaching transfer case vent tube to converter housing.

(22) Disconnect fluid cooler lines at transmission.

(23) Remove all converter housing bolts.

(24) Carefully work transmission and torque converter assembly rearward off engine block dowels.

(25) Hold torque converter in place during transmission removal.

(26) Lower transmission and remove assembly from under the vehicle.

(27) To remove torque converter, carefully slide torque converter out of the transmission.

DISASSEMBLY

NOTE: If the transmission is being reconditioned (clutch/seal replacement) or replaced, it is necessary to perform the Quick Learn Procedure using the DRBIII® Scan Tool (Refer to 8 - ELECTRICAL/ ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE).

Before disassembling transmission, move the shift lever clockwise as far as it will go and then remove the shift lever.

NOTE: Tag all clutch pack assemblies, as they are removed, for reassembly identification.