CAUTION: Do not intermix clutch discs or plates as the unit might then fail.

(1) Remove the torque converter from the transmission input shaft (Fig. 17).

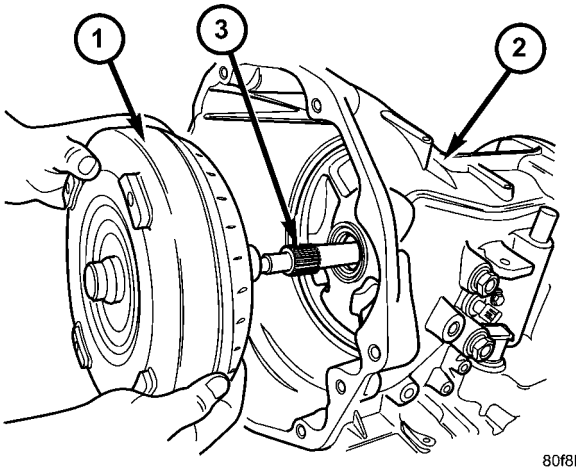

Fig. 17 Remove Torque Converter

1 - TORQUE CONVERTER
2 - TRANSMISSION
3 - INPUT SHAFT

(2) Measure input shaft end play using End Play Set 8266. Set up the required pieces from End Play Set 8266 and a dial indicator as shown in (Fig. 18). Move input shaft in and out to obtain end play reading. End play specifications are 0.127 to 0.635 mm (0.005 to 0.025 inch). Record indicator reading for reference when reassembling the transmission. If endplay exceeds the specified range, the #4 thrust plate needs to be inspected and changed if necessary.

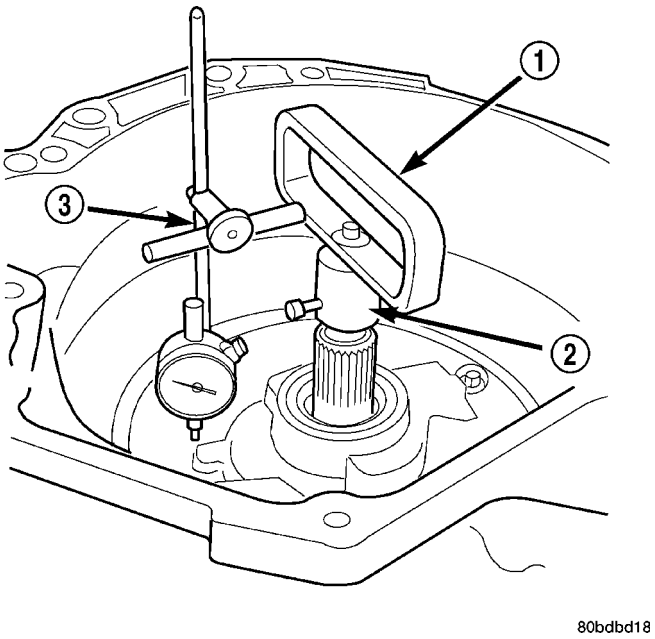

Fig. 18 Measure Input Shaft End Play Using End Play Set 8266 - Typical

1 - TOOL 8266-8
2 - TOOL 8266-2
3 - TOOL C-3339

NOTE: The four bolts along the bottom of the adapter housing have a sealing patch applied from the factory. Note the locations of these bolts and seperate these bolts for reuse.

(3) Remove the bolts (Fig. 19) that hold the adapter housing onto the transmission case.

(4) Remove the adapter (Fig. 21) housing from the transmission case. There are two pry slots (Fig. 20) located near the bottom corners of the housing for separating the housing from the transmission case.

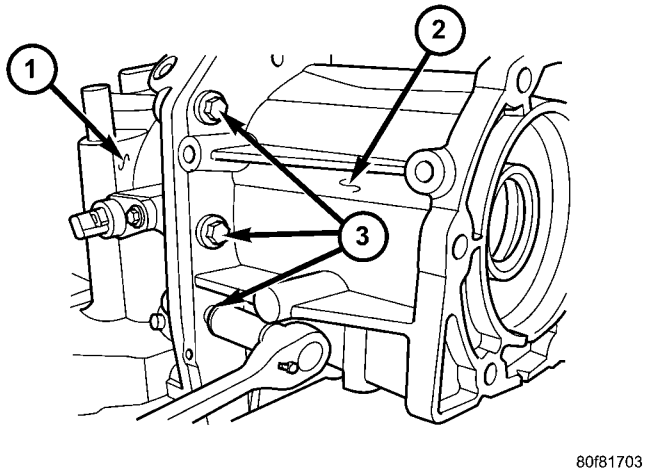

Fig. 19 Remove Adapter Housing Bolts

1 - TRANSMISSION CASE
2 - ADAPTER HOUSING
3 - BOLTS