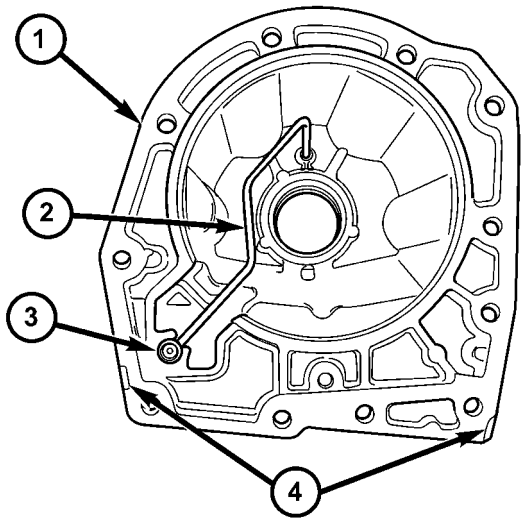

80f816f9

Fig. 20 Lube Tube Grommet

1 - HOUSING
2 - LUBE TUBE
3 - GROMMET
4 - PRY SLOTS

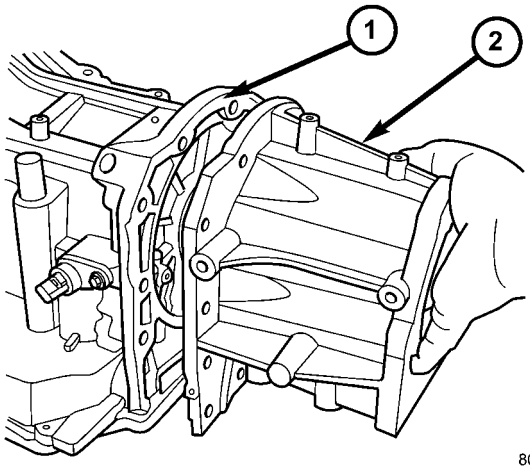

80f81701

Fig. 21 Remove Adapter Housing

1 - TRANSMISSION CASE
2 - ADAPTER HOUSING

(5) Inspect the lube tube grommet (Fig. 20) for damage. If the grommet lip is damaged, it will need to be replaced.

(6) Using a Slide Hammer C-3752 (Fig. 22), remove the 4X4 stub shaft (Fig. 23) from the transmission output shaft. Inspect the cir-clip on the shaft for damage and replace the clip if necessary.

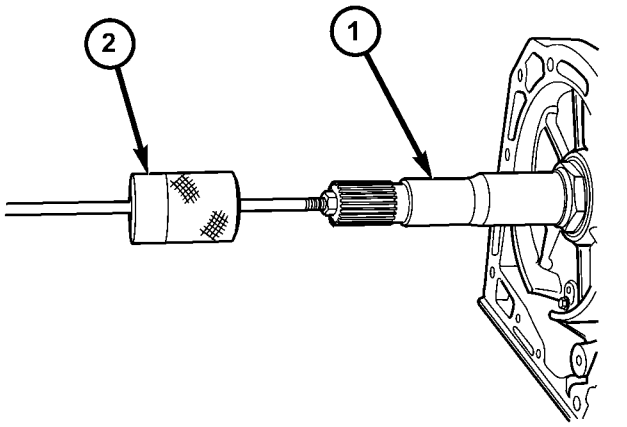

80f8b00d

Fig. 22 Remove the 4X4 Stub shaft Using Slide Hammer C-3752

1 - 4X4 STUB SHAFT
2 - SLIDE HAMMER C-3752

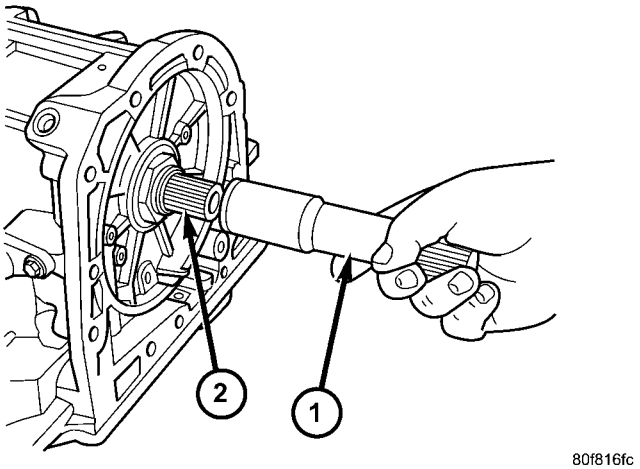

80f816fc

Fig. 23 Remove 4X4 Stub Shaft

1 - STUB SHAFT
2 - OUTPUT SHAFT

(7) Remove the input speed sensor bolt (Fig. 24).

(8) Remove the output speed sensor bolt (Fig. 25).

NOTE: The speed sensor bolts have a sealing patch applied from the factory. Seperate these bolts for reuse.

(9) Remove the input and output speed sensors (Fig. 26). Identify the speed sensors for re-installation since they are not interchangeable.