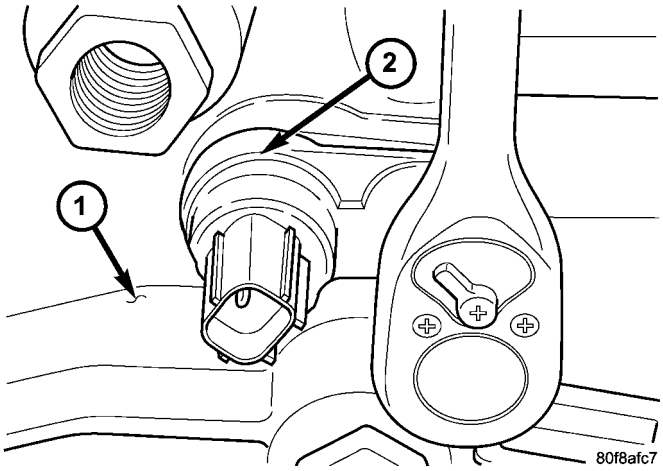

Fig. 24 Remove Input Speed Sensor Bolt

1 - INPUT SPEED SENSOR
2 - TRANSMISSION CASE

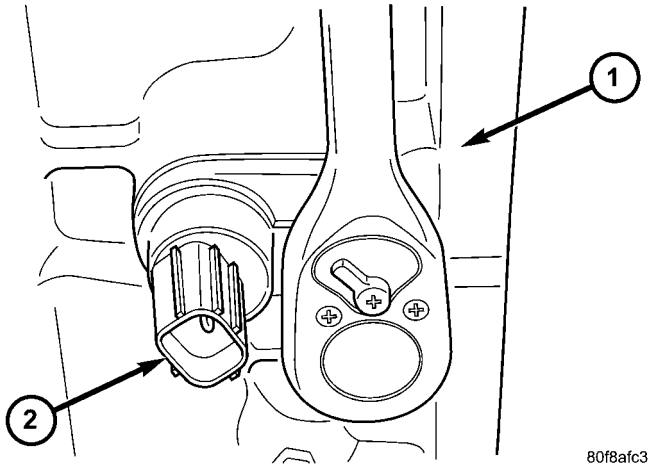

Fig. 25 Remove Output Speed Sensor Bolt

1 - OUTPUT SPEED SENSOR
2 - TRANSMISSION CASE

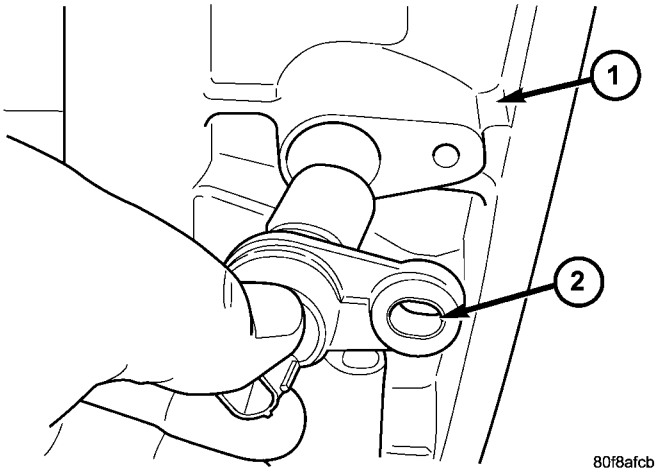

Fig. 26 Remove Output Speed Sensor

1 - OUTPUT SPEED SENSOR
2 - TRANSMISSION CASE

NOTE: One of the oil pan bolts has a sealing patch applied from the factory. Seperate this bolt for reuse.

(10) Remove the transmission oil pan bolts (Fig. 27).

(11) Remove the transmission oil pan (Fig. 28).

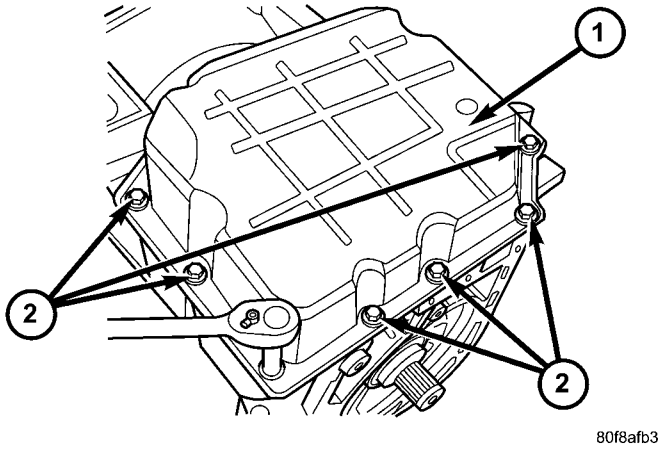

Fig. 27 Remove Transmission Oil Pan Bolts

1 - TRANSMISSION OIL PAN
2 - BOLTS