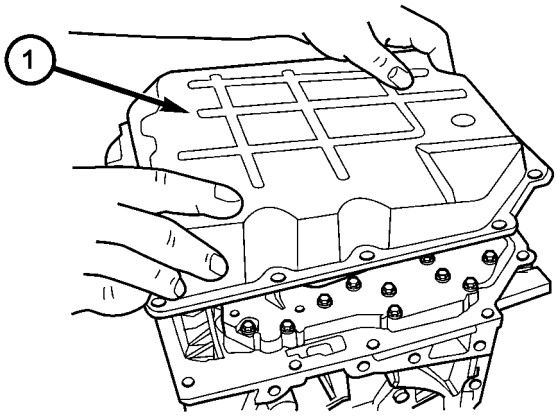

Fig. 28 Remove Transmission Oil Pan

1 - TRANSMISSION OIL PAN

(12) Remove the transmission oil filter screws (Fig. 29).

(13) Remove transmission oil filter (Fig. 30).

(14) Remove the oil filter o-ring from the valve body (Fig. 31).

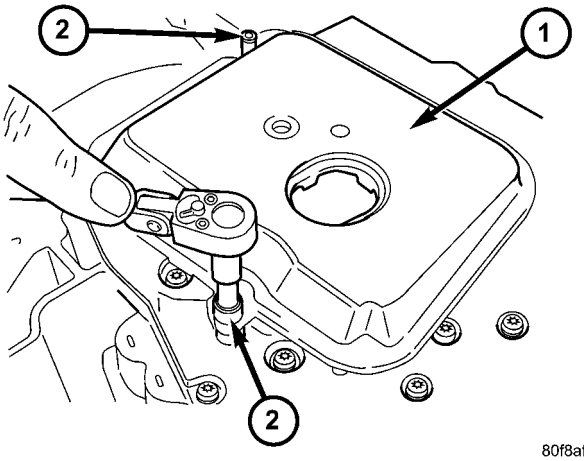

Fig. 29 Remove Oil Filter Screws

1 - OIL FILTER
2 - SCREWS

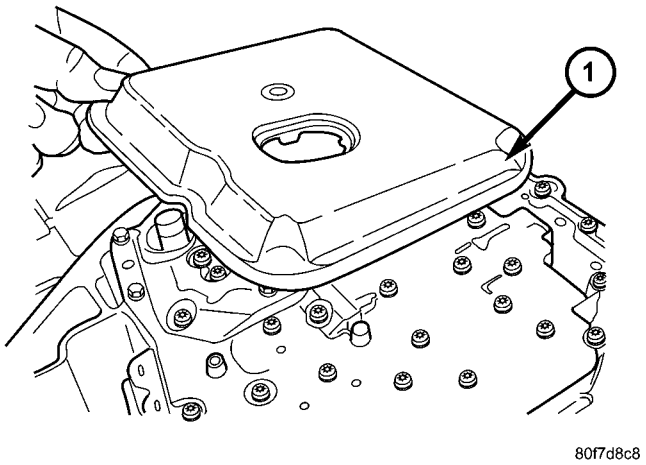

Fig. 30 Remove Transmission Filter

1 - TRANSMISSION FILTER

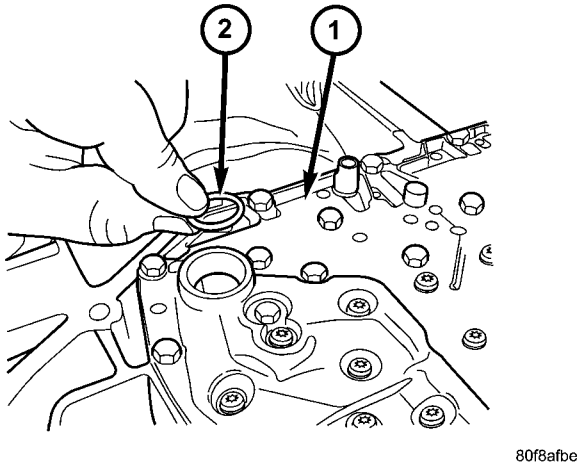

Fig. 31 Remove Oil Filter O-Ring

1 - VALVE BODY
2 - O-RING

(15) Remove valve body-to-case bolts (Fig. 32).