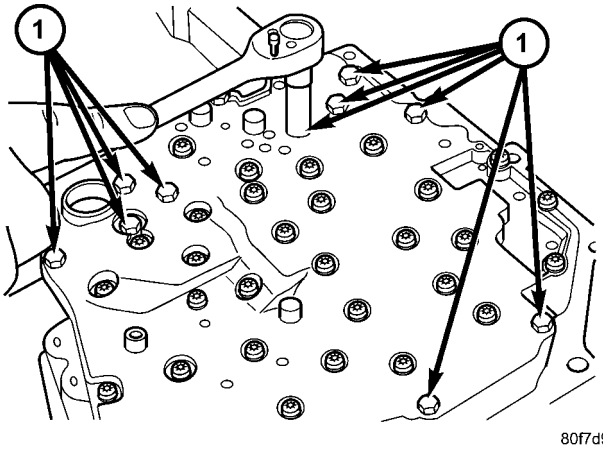


Fig. 32 Remove Valve Body Bolts

1 - BOLTS

CAUTION: Do not handle the valve body by the manual shaft. Damage could result.

(16) Remove valve body from transmission (Fig. 33).

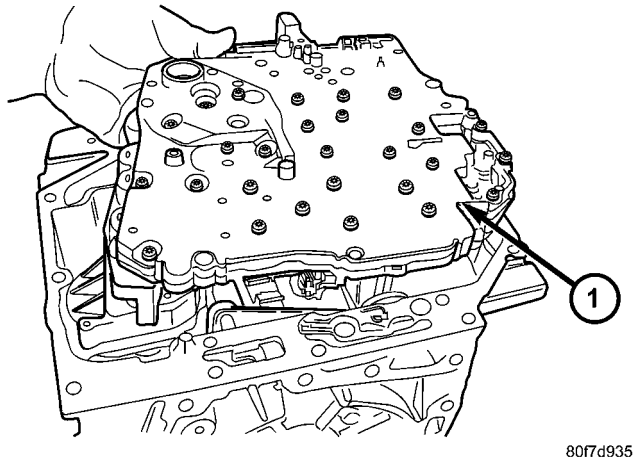


Fig. 33 Remove Valve Body From Transmission

1 - VALVE BODY

(17) Remove underdrive and overdrive accumulators (Fig. 34).

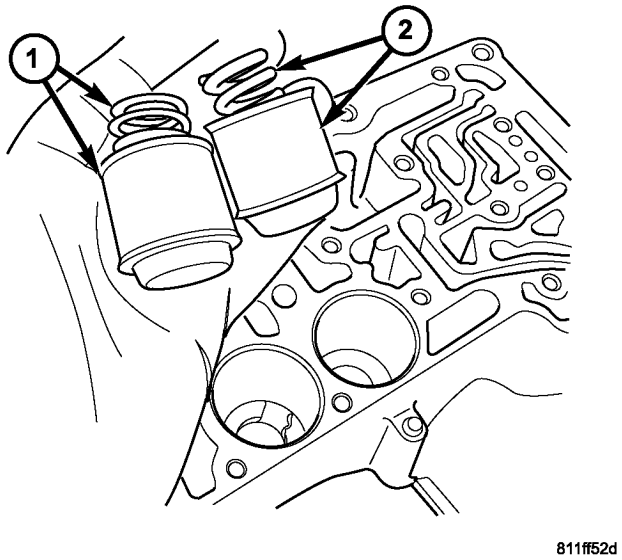


Fig. 34 Underdrive and Overdrive Accumulators

1 - OVERDRIVE PISTON AND SPRING
2 - UNDERDRIVE PISTON AND SPRING

(18) Remove the low/reverse accumulator snap ring (Fig. 35).

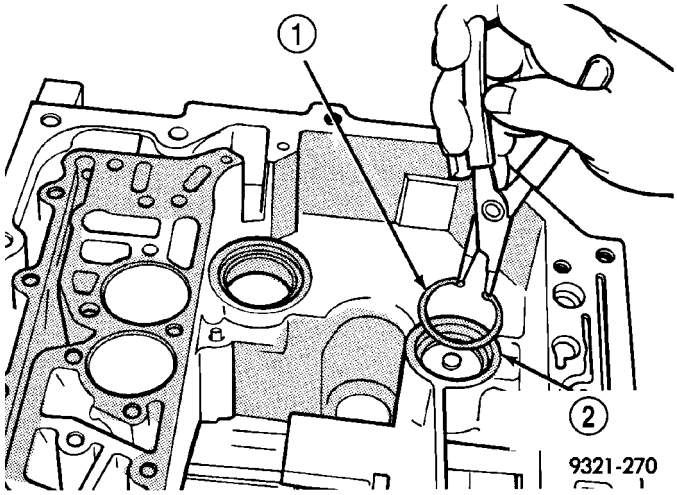


Fig. 35 Remove Low/Reverse Accumulator

1 - SNAP RING
2 - LOW/REVERSE ACCUMULATOR

(19) Remove the low/reverse accumulator plug (Fig. 36).