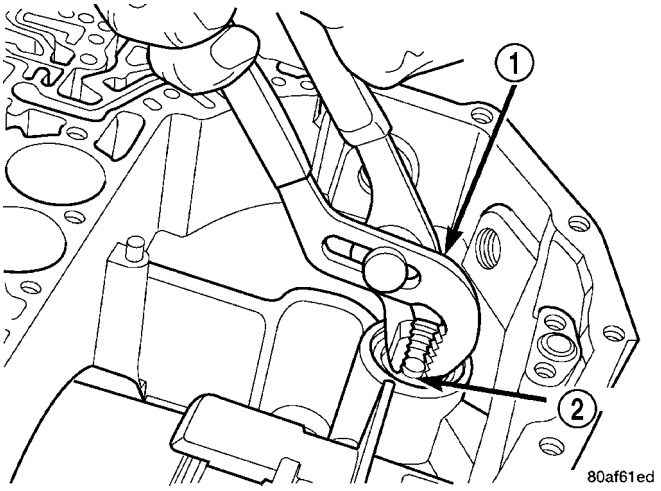

Fig. 36 Remove Low/Reverse Accumulator Plug

1 - ADJUSTABLE PLIERS
2 - PLUG

(20) Remove low/reverse accumulator piston using suitable pliers (Fig. 37). Remove piston and springs (Fig. 38).

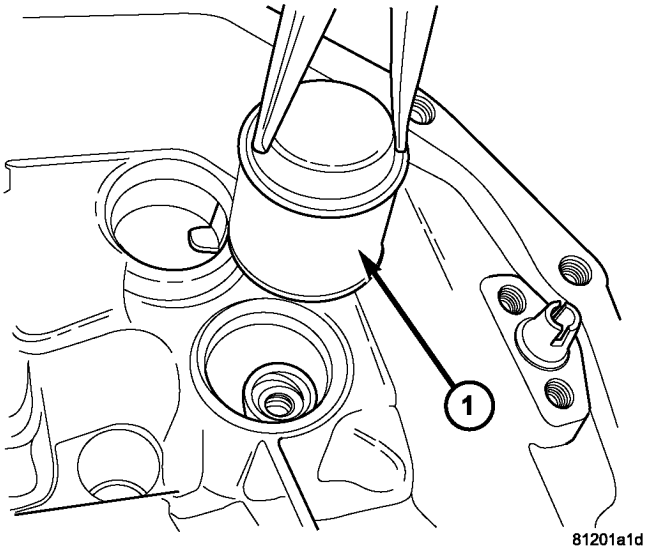

Fig. 37 Low/Reverse Accumulator Piston

1 - ACCUMULATOR PISTON

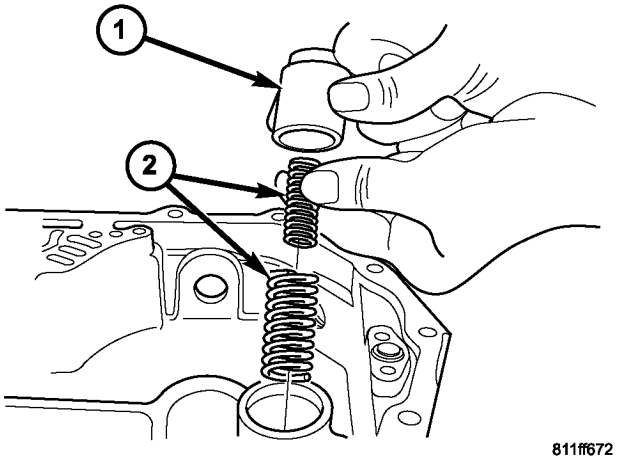

Fig. 38 Low/Reverse Accumulator

1 - PISTON
2 - RETURN SPRINGS

(21) Remove and discard the oil pump-to-case bolts (Fig. 39). The oil pump bolts are not to be reused.

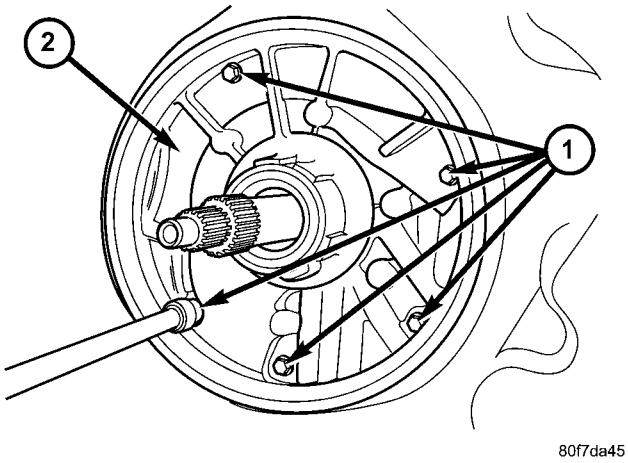

Fig. 39 Remove Oil Pump Attaching Bolts

1 - BOLTS
2 - OIL PUMP

(22) Remove oil pump using Slide Hammers C-3752 (Fig. 40).