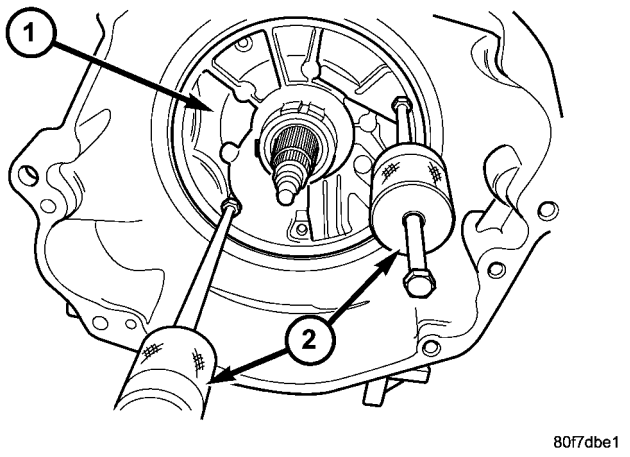


Fig. 40 Oil Pump Pullers

1 - OIL PUMP
2 - PULLERS

(23) Remove oil pump while pushing in on input shaft (Fig. 41).

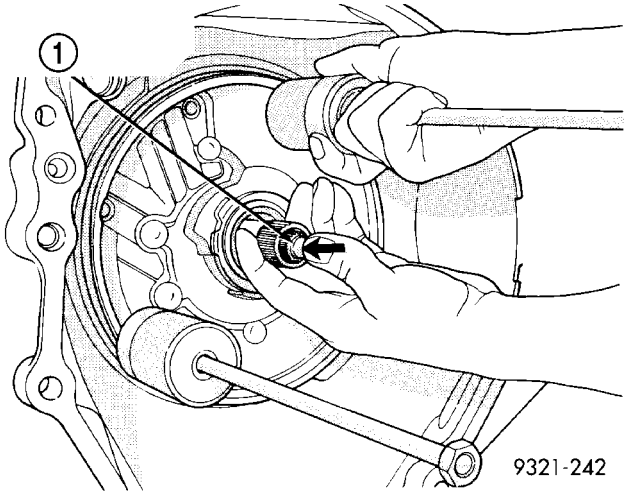


Fig. 41 Remove Oil Pump

1 - "PUSH IN" ON INPUT SHAFT WHILE REMOVING PUMP

(24) Remove oil pump gasket (Fig. 42).

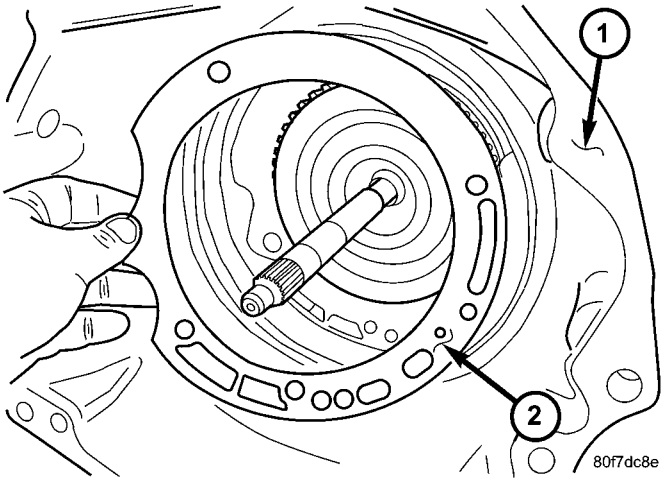


Fig. 42 Remove Oil Pump Gasket

1 - BELLHOUSING
2 - OIL PUMP GASKET

CAUTION: By-pass valve must be replaced if transmission failure occurs.

(25) Remove the cooler by-pass valve (Fig. 43).

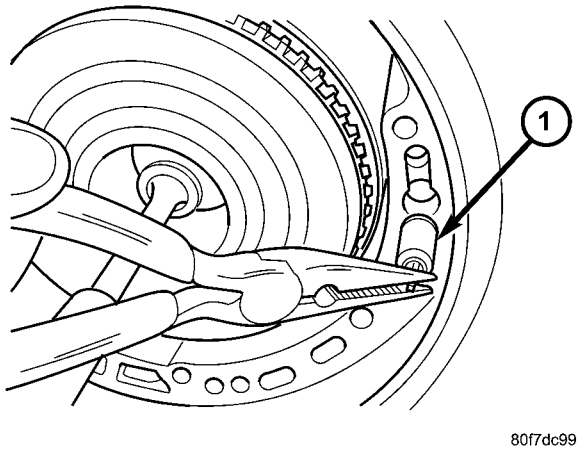


Fig. 43 Remove By-Pass Valve

1 - BYPASS VALVE

(26) Remove the #1 caged needle bearing (Fig. 44).