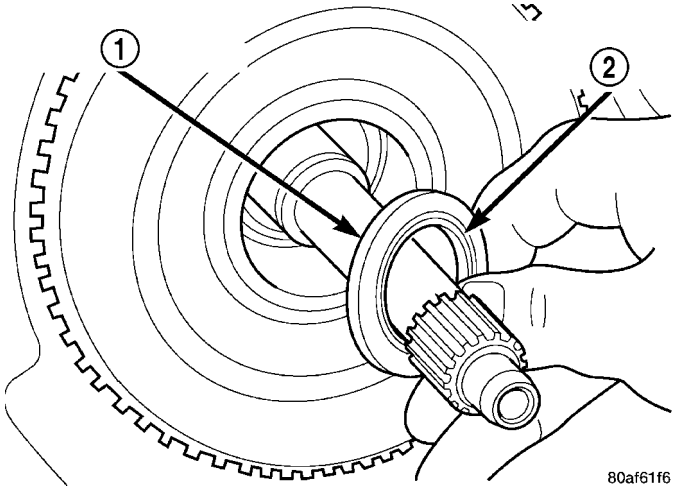


Fig. 44 Remove No. 1 Caged Needle Bearing

1 - #1 CAGED NEEDLE BEARING
2 - NOTE: TANGED SIDE OUT

(27) Remove the input clutch assembly (Fig. 45).

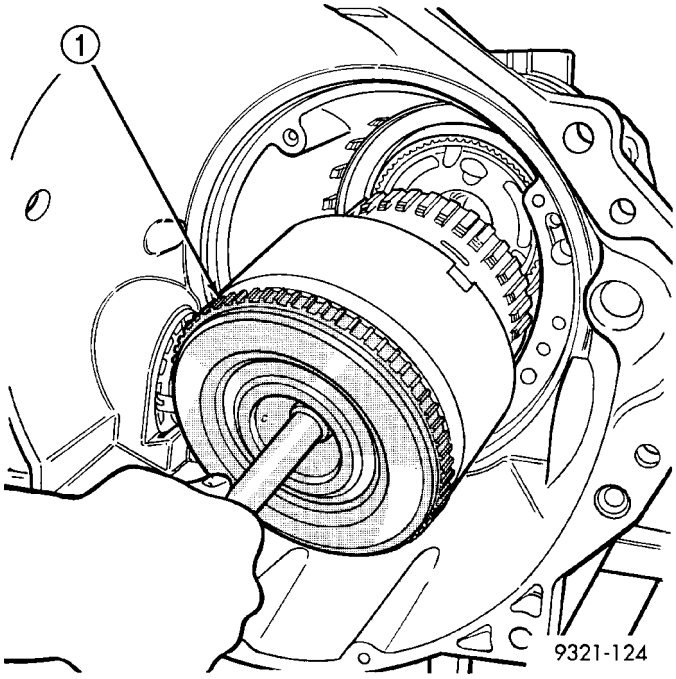


Fig. 45 Remove Input Clutch Assembly

1 - INPUT CLUTCH ASSEMBLY

(28) Remove the #4 thrust plate (Fig. 46).

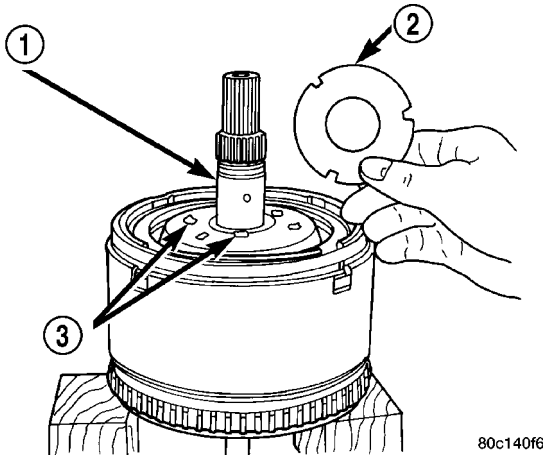


Fig. 46 Remove #4 Thrust Plate

1 - OVERDRIVE SHAFT ASSEMBLY
2 - #4 THRUST PLATE (SELECT)
3 - PETROLATUM FOR RETENTION

(29) Remove the front sun gear assembly and #4 thrust washer (if still in place) (Fig. 47).

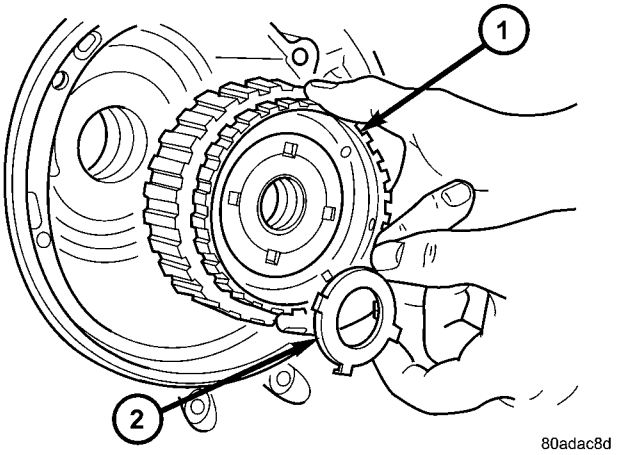


Fig. 47 Remove Front Sun Gear Assembly

1 - FRONT SUN GEAR ASSEMBLY
2 - #4 THRUST WASHER (FOUR TABS)

(30) Remove the front carrier/rear annulus and #6 needle bearing (Fig. 48).