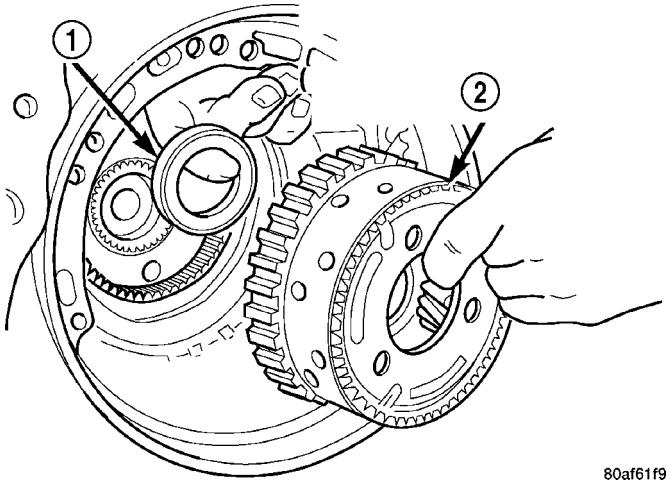

Fig. 48 Remove Front Carrier/Rear Annulus

1 - #6 NEEDLE BEARING
2 - FRONT CARRIER AND REAR ANNULUS ASSEMBLY (TWIST AND PULL OR PUSH TO REMOVE OR INSTALL).

(31) Remove the rear sun gear and #7 needle bearing (Fig. 49) and (Fig. 50).

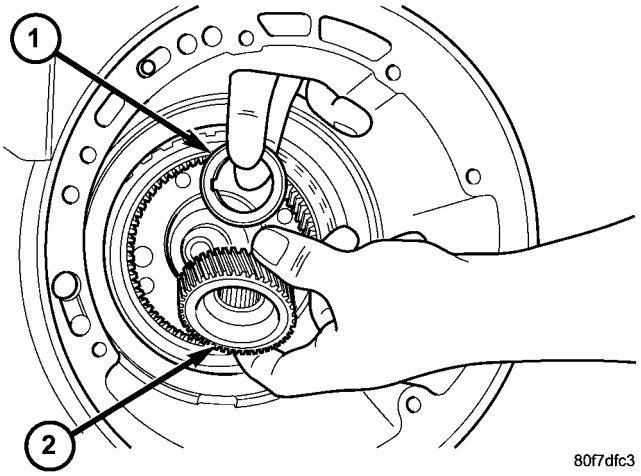

Fig. 49 Remove Rear Sun Gear

1 - #7 NEEDLE BEARING
2 - REAR SUN GEAR

NOTE: The number seven needle bearing has three antireversal tabs and is common with the number five and number two position. The orientation should allow the bearing to seat flat against the rear sun gear (Fig. 50).

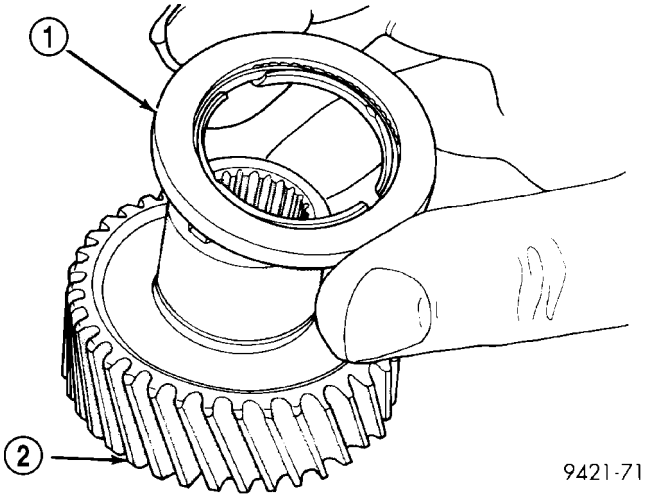

Fig. 50 Number 7 Bearing

1 - #7 BEARING
2 - REAR SUN GEAR

NOTE: Verify that Compressor 5058A is centered properly over the 2/4 clutch retainer before compressing. If necessary, fasten the Compressor 5058A bar to the bellhousing flange with any combination of locking pliers and bolts to center the tool properly.

(32) Install and load Compressor 5058A to remove the 2/4 clutch retainer snap ring (Fig. 51).

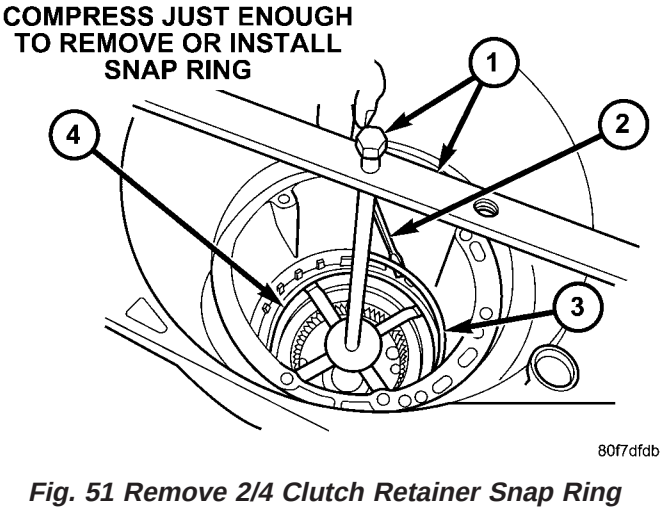

Fig. 51 Remove 2/4 Clutch Retainer Snap Ring

1 - TOOL 5058
2 - SCREWDRIVER
3 - SNAP RING
4 - 2/4 CLUTCH RETAINER

NOTE: The 2/4 Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(33) Remove the 2/4 clutch retainer (Fig. 52) and (Fig. 53).