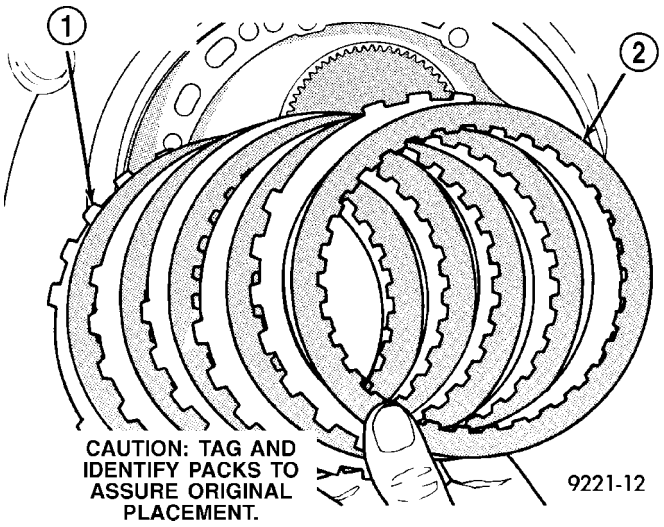


Fig. 60 Remove Low/Reverse Clutch Pack

1 - CLUTCH PLATES (5)
2 - CLUTCH DISCS (5)

CAUTION: Failure to grind and open stakes of the output shaft nut will result in thread damage to the shaft during nut removal.

WARNING: WEAR SAFETY GOGGLES WHILE GRINDING STAKE NUTS.

(41) Using a die grinder or equivalent, grind the stakes in the shoulder of the shaft nuts as shown in (Fig. 61) (Fig. 62). Do not grind all the way through the nut and into the shaft. There are two stakes on each nut.

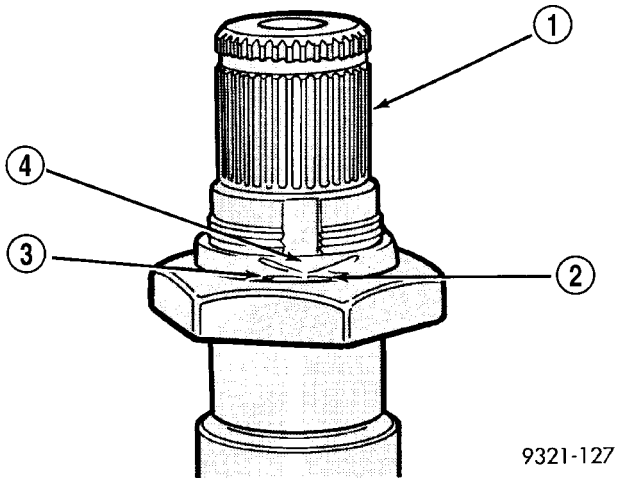


Fig. 61 Grinding Stakes

1 - OUTPUT SHAFT
2 - GRIND HERE
3 - GRIND HERE
4 - NUT STAKE

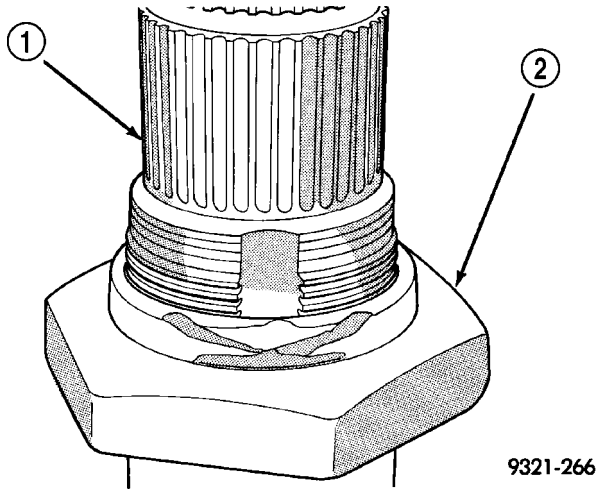


Fig. 62 Stake Grinding Pattern

1 - OUTPUT SHAFT
2 - OUTPUT SHAFT NUT

(42) Using a small chisel, carefully open the stakes on nut (Fig. 63).

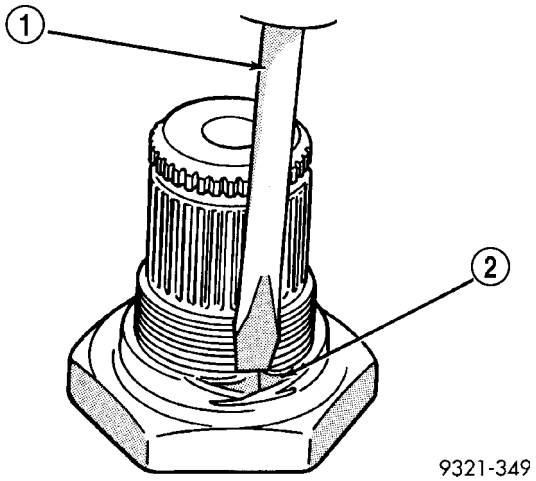


Fig. 63 Opening Nut Stakes

1 - CHISEL
2 - NUT STAKE

(43) Use Wrench 6497 and Wrench 6498A to remove the transfer shaft nut or the output shaft nut (Fig. 64).